

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

HAND GUN SAFE USER MANUAL

MODEL:AL370

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

HAND GUN SAFE

MODEL:AL370

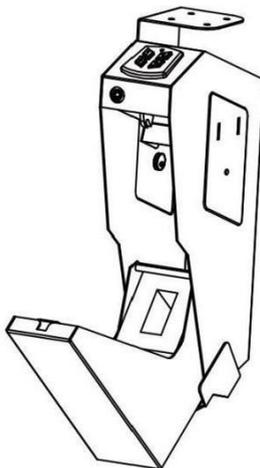

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

 CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT SAFEGUARDS



Warning-To reduce the risk of injury, user must read instructions manual carefully. Failure to do so can result in serious injury.

Use precautions

1. DO NOT SIT, STAND OR CLIMB ON THIS ITEM.
2. This product is not a toy. Do not allow children to play with or near this item.
3. Use as intended only. Keep away from sharp points, blades and other items, so as not to scratch the product.
4. Flammable: Keep away from open flame. This product will ignite and burn if brought into contact with an open flame.
5. **Battery Replacement:** When the batteries are not high enough and must be replaced immediately. To replace the batteries, turn off the hand gun safe first. Replace the old batteries with new ones of the same type, make sure that the polarity connections are correct (see the polarity indications at the bottom of the battery compartment). Reinstall the battery cover.

SAVE THESE INSTRUCTIONS


PRODUCT PARAMETERS

Model	AL370
Product Size	370*190*86 mm
Net Weight	3.50 kg
Working Power	DC 6V (4x AA batteries needed), 120mA
Capacity	1 piece

FCC STATEMENT: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation

PARTS LIST

Thank you very much for choosing this Hand Gun Safe. Please read all of the instructions before using it. The information will help you achieve the best possible results.

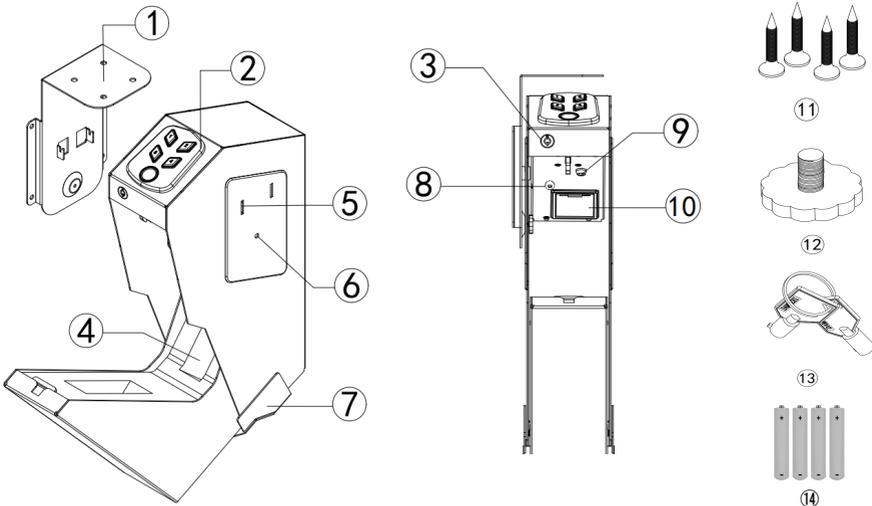


- | | |
|---------------------------------------|-----------------------|
| ① Mounting Bracket | ⑧ Program Button |
| ② Panel (Buttons & Biometric Scanner) | ⑨ Interior Light |
| ③ Emergency Keyhole | ⑩ Battery Compartment |
| ④ Anti-crash Foam | ⑪ Mounting Screws × 4 |
| ⑤ Holes of Mounting Hook | ⑫ Thumb Screws × 1 |
| ⑥ Plug Nut Hole | ⑬ Backup Keys × 2 |
| ⑦ Connector Protection Bracket | ⑭ AA Batteries × 4 |

ADJUSTING THE FOAM

There are two slots cut into the foam inside the Gun Safe. Before installing the gun safe, adjust the slots on the foam to fit the size of your gun.

1. Take out the little foams of the slots.
2. Cut little foams to adjust your gun size.
3. Put the cut foams back into the slots to hold your gun firmly.

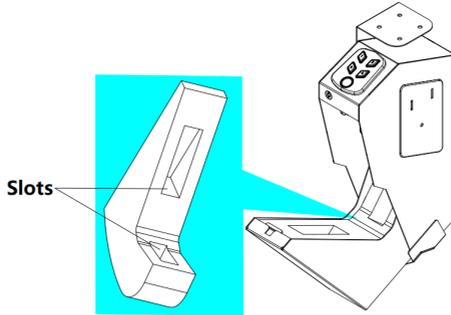


BATTERY INSTALLATION

To get started, ensure the bottom of the safe and the door are not obstructed before opening.

1. Insert one of your backup keys into the keyhole at the front of the gun safe. Push the key in and turn it counterclockwise to open the gun safe. (Note: Do not lock the key inside the safe—this is an emergency key and will open the safe if you have lost your code.)
2. Locate the battery compartment inside the gun safe, and pull out the battery compartment.
3. Insert 4 x AA batteries into the battery compartment. The battery compartment goes against the spring inside of the compartment.



Pay attention to the "+" and "-" signs. The "-" end of the batteries

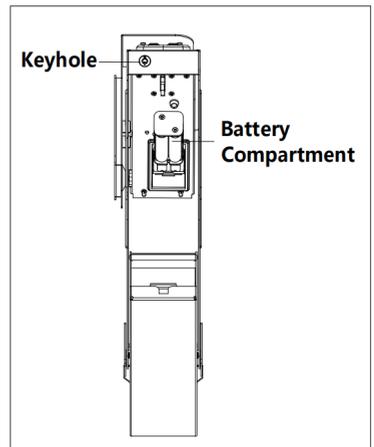

4. Repeat the above steps for battery replacement.

BATTERY WARNINGS

- Always insert batteries correctly about polarity (+ and -) as marked on the battery and the product.
- Exhausted batteries should be immediately removed from the product and properly disposed of.
- Do not mix old and new batteries.
- Do not mix alkaline, standard(carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

LOW BATTERY WARNING

If the indicator light will light up red 6 times with 6 times beeps when opening the Gun Safe by the electronic way. your battery level is critically low and your Gun Safe needs to be replaced the 4 new batteries.

FACTORY PRESET CODE

Factory preset code: 1234.

Factory preset fingerprint: blank(Unregistered fingerprints cannot be unlock)


Enter the factory code 1.2.3.4, the green led will light up.

Important:

All safe models initially work with the safe code 1.2.3.4. It is therefore important to reset your safe with a new user code you have personally selected to provide maximum security.

TO SET AN USER CODE

1. Press the "program button" until you hear 2 beeps and the green light flashes twice, you can start to set your user code with 3-6 digits long.
2. Press the "program button" again to confirm the user code. When you hear 2 beeps and the green light flashes twice, the new code has been set successfully.

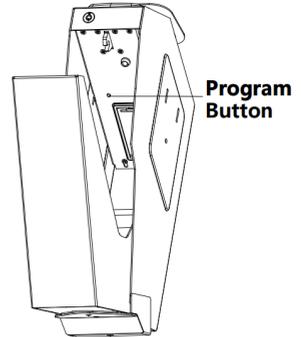

TO SET PRIMARY USER FINGERPRINT

1. Press the "program button" until you hear 2 beeps and the green light flashes twice. Put one finger on the fingerprint scanner.
2. Repeat 4 times. When you hear 2 beep and the green light flashes twice, the main user fingerprint has been successfully set. (A total of 100 fingerprints are available. The setup method is the same as for the primary user fingerprint.)

Note: You only have 10 seconds to set the code or fingerprint. When you hear 2 beeps and the red light flashes twice, the code or fingerprint setting fails.

ERROR ALARM

Enter the wrong password 3 times or fingerprint 5 times, the buzzer alarm for 30 seconds, and all buttons/fingerprints invalid when the alarm sounds. The panel locks for one minute. Press any button or fingerprint, you will hear 3 beeps and the red light flashes 3 times.

The gun safe can still be opened using the backup keys.

After one minute, the gun safe will automatically resume normal operation with one beep sound issue and the indicator light flashes green.

If the input is wrong again, the buzzer alarms for 30 seconds and the panel

is locked for 5 minutes.

Note: The 30-second buzzer alarm is not affected by the mute mode.

MUTE FUNCTION

Press the "4" button for more than 2 seconds, the green light flashes, it means the mute function is on/off.

RESTORE FACTORY SETTINGS

Keep pressing the set button until you hear a beep, the reset is successful.

MOUNTING YOUR GUN SAFE

Use proper drilling tools and mounting hardware based on the type of surface you mount the gun safely onto. Supplied screws are intended to be used on wooden surfaces.




Ensure you have enough clearance for the lid to open properly before mounting the gun safely.

Your Vevor gun safe will automatically lock when you fully close the lid.

1. Open the box and take out the mounting bracket and screws.
2. Use the included 4x mounting screws to install the bracket onto the desired place.
3. Slide the gun safe onto the bracket mounting hook, and fix the gun safe to the bracket with a thumbscrew from inside the gun safe.
4. Close the gun safe. Now the gun safe should be ready for use.

- The bracket is allowed to be installed on the left, right and back side of the gun safe, but the thumbscrew must be attached to the bracket.
- Do not let the gun safe door face the floor when you mounting the gun

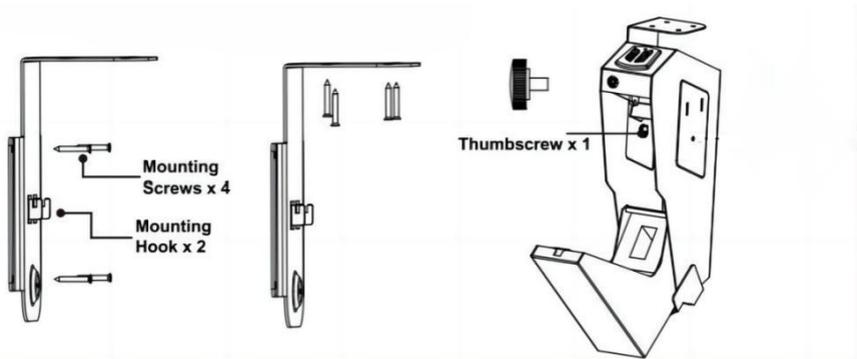

safe in the vertical direction to avoid your property from damage.

CORRECT DISPOSAL:



■ This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support