



Technical Support and E-Warranty Certificate
www.vevor.com/support

Folding piano user manual

 
Model: BX-11



Technical Support and E-Warranty Certificate
www.vevor.com/support

We continue to be committed to provide you tools with competitive price.
"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

Model:BX-11

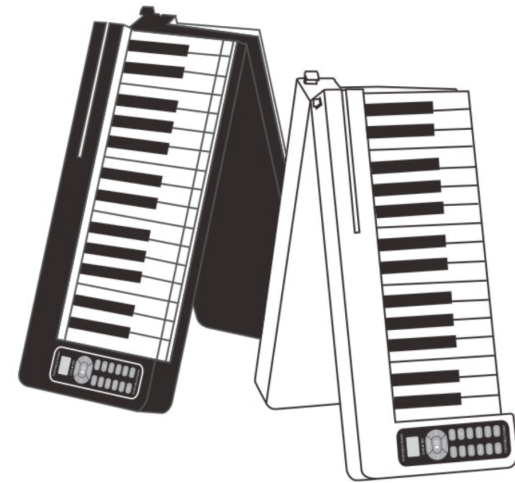

(The picture is for reference only, please refer to the actual object)

 
NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Panel Function Diagram:

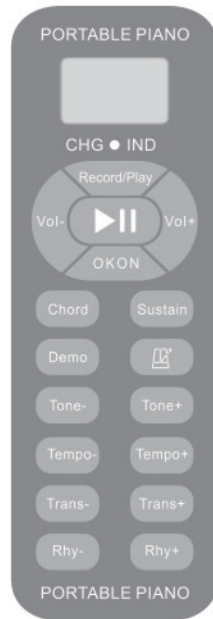


Please charge before use!

Charging Indicator:

1. TYPE-C interface
2. It is not applicable to PD fast charging line
3. The charging indicator is red and turns green when it is full
4. Battery: charging time is about 5H, please charge it more than 6H for the first time
5. Power adapter: 5V/2A

 Interface:

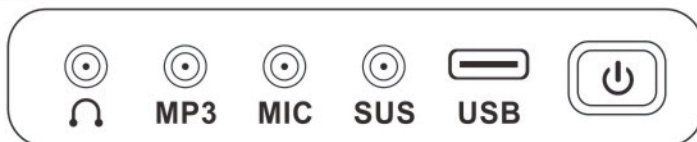

SUS : Sustain pedal
 MP3 : MP3
 MIC : Microphone
 : Headphone / Speaker
 USB : TYPE-C charging / MIDI interface

Function

Volume adjustment, Start/Stop, Record/Play, Teaching OKON, Chord, Sustain, Demo, Metronome, Tempo, Transpose, Rhythm

Volume

Press Vol- or Vol+ to adjust the volume, the default boot volume is 12 (from 00-15).

Start/ Stop

Press Start to enter the rhythm playing mode.
 The sequence number will be displayed on the display.

Record/ Play (long press is Record, short press is Play)

1. Press and hold the Record/ Play button, At this time, play the keyboard to record MIDI signals.
2. Short press the Record/ Play button, the last recorded signal can be played.

Learn

1. Press OKON button, cyclic switching,
 Teaching A → Teaching B → Off → Teaching A → ...
2. Teaching A: Play accompaniment, playing any key can play the main melody of the demo song.
3. Teaching B: Play accompaniment, the user press the right keys to enter the next note.
 If the user does not press the right keys, they pause until they press the right keys to the next note.
4. Teaching songs: The current demo which is playing. Select the teaching songs by switching Demo.

Chord

1. Press Chord button, cyclic switching, SINGLE → FINGERS → Off → SINGLE → ...
2. During the playing of rhythm, the system enters the chord mode.
 Chord function: Press the key in the area C3~F4# to play the chords that match the rhythm, and the tone of the chords changes with the pitch of the hard.

Sustain

1. Press Sustain button to open the sustain function, then press off.
2. Turn on the sustain function, and make the tone produce the effect of continuance in performance.

Demo

1. Short press Demo button to play the demo. Press the demo button again to next song.
 (Demo from 000-020)
2. Long press the Demo button to select the demo from 000-020 quickly.
3. Press to stop the demo.

Metronome

Press and the metronome will display the beat selection of 1/4, 2/4, 3/4 and 4/4.

Tone

1. Press Tone- or Tone+ to select the tone from 000-127 (see the attached tone table).
The serial number of the adjusted tone will be displayed on the screen.
2. Long press Tone- or Tone+ to select the tone quickly.
3. Press Tone- and Tone+ at the same time to move back to tone 000 and play the piano tone.

Tempo

1. Press Tempo- or Tempo+ to adjust tempo, the default tempo is 241 level (from 40-280 level).
2. Long press Tempo- or Tempo+ to adjust the tempo quickly.
3. Press Tempo- or Tempo+ at the same time to move back to 8 level.

Transpose

1. Press Trans+ or Trans- to select rhythm. The shift can be selected from level -6 to +6, and the default level is +0.
2. Long press Trans+ or Trans- to quickly switch it.
3. Press and hold the Trans+ or Trans- at the same time to move back to level +0.

Rhythm

1. Press Rhy+ or Rhy- to select rhythm. 000-127 rhythms (please refer to the attached rhythm list),
The sequence number will be displayed on the display.
2. Long press Rhy+ or Rhy- to adjust the rhythm quickly.
3. Press and hold the Rhy+ or Rhy- at the same time to move back to Rhy 0 and play the Rhy 0.

Sleep Mode

In the default mode, when the piano is not played after 10 minutes, the electric piano will turn off. Then you need to press the ON/OFF button to restart the piano again.

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

iPhone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the iPhone.
2. Open the POPiano App after turning on the bluetooth of the iPhone, select any song, and choose to start playing after entering.
3. Click on the upper right of the iPhone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
4. After confirming bluetooth connection, the icon is displayed as blue check mark .

GarageBand connection:

1. Open GarageBand App,
2. Turn on bluetooth on your phone.
3. Open GarageBand App and click the Settings icon in the upper right corner of the screen.
4. Connect the piano's bluetooth through the: Song Settings - Advanced - Bluetooth MIDI Devices.

Perfect Piano and PianoBar connection:

1. Download the Perfect Piano App and PianoBar.
2. Turn on bluetooth on your phone.
3. First connect the GarageBand App. When them is connect successfully, then open the Perfect Piano App and PianoBar can be used directly.

Android phone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the mobile phone.
2. Turn on the bluetooth function, some phones need to turn on the phone location function.
3. Open the POPiano App to select any song, and choose to start playing after entering.
4. Click on the upper right of the mobile phone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
5. After confirming bluetooth connection, the icon is displayed as blue check mark .

Audio Bluetooth playback

Open the phone Settings to search for Bluetooth name: GZUT-MUSIC.

After the connection is successful, the phone music is played, and the music is emitted from the piano.

■ Demo

0.Castle in the Sky	11.Milk Song
1.Song of Joy	12.A comme amour
2.Little Stars	13.Les premiers sourires de Vanessa
3.By Alice	14.Snowdreams
4.Dancing Girl	15.Bandari
5.Deskmate	16.Edelweiss
6.Ten Years	17.Dance of fireflie
7.Colourful Clouds Chasing The Moon	18.My soul
8.In My Song	19.Croatian Rhapsody
9.CrystalLake	20.CSIKOS POST
10.Green Sleeves	

■ List Of Tone

Piano	28.Electric Guitar (muted)
0.Piano 1	29.Overdriven Guitar
1.Piano 2	30.Distortion Guitar
2.Piano 3	31.Guitar Harmonics
3.Honky-Tonk Piano	Bass
4.Rhodes Piano	32.Acoustic Bass
5.Chorused Piano	33.Electric Bass(finger)
6.Harpsichord	34.Electric Bass(pick)
7.Clavinet	35.Fretless Bass
Percussion Instrument	36.Slap Bass 1
8.Celesta	37.Slap Bass 2
9.Glockenspiel	38.Synth Bass 1
10.Music Box	39.Synth Bass 2
11.Vibraphone	Strings
12.Marimba	40.Violin
13.Xylophone	41.Viola
14.Tubular Bells	42.Cello
15.Santur	43.Contrabass
Organ	44.Tremolo Strings
16.Hammond Organ	45.Pizzicato Strings
17.Percussive Organ	46.Orchestral Harp
18.Rock Organ	47.Timpani
19.Church Organ	Ensemble
20.Reed Organ	48.String Ensemble 1
21.Accordion	49.String Ensemble 2
22.Harmonica	50.SynthStrings 1
23.Bandoneon	51.SynthStrings 2
Guitar	52.Choir Aahs
24.Acoustic Guitar (nylon)	53.Voice Oohs
25.Acoustic Guitar(steel)	54.Synth Voice
26.Electric Guitar (jazz)	55.Orchestra Hit
27.Electric Guitar (clean)	Brass Instrument

56.Trumpet	92.Pad 5 (bowed)
57.Trombone	93.Pad 6 (metallic)
58.Tuba	94.Pad 7 (halo)
59.Muted Trumpet	95.Pad 8 (sweep)
60.French Horn	Fx
61.Brass Section	96.FX 1 (rain)
62.Synth Brass 1	97.FX 2 (soundtrack)
63.Synth Brass 2	98.FX 3 (crystal)
Reeds Instrument	99.FX 4 (atmosphere)
64.Soprano Sax	100.FX 5 (brightness)
65.Alto Sax	101.FX 6 (goblins)
66.Tenor Sax	102.FX 7 (echoes)
67.Baritone Sax	103.FX 8 (sci-fi)
68.Oboe	National Instrument
69.English Horn	104.Sitar
70.Bassoon	105.Banjo
71.Clarinet	106.Shamisen
Tongue	107.Koto
72.Piccolo	108.alimba
73.Flute	109.Bagpipe
74.Recorder	110.Fiddle
75.Pan Flute	111.Shanai
76.Bottle Blow	Percussion
77.Skakuhachi	112.Tinkle Bell
78.Whistle	113.Ago
79.Ocarina	114.Steel Drums
Soft Leads	115.Woodblock
80.Lead 1 (square)	116.Taiko Drum
81.Lead 2 (sawtooth)	117.Melodic Tom
82.Lead 3 (calliope lead)	118.Synth Drum
83.Lead 4 (chiff lead)	119.Reverse Cymbal
84.Lead 5 (charang)	FxPhone
85.Lead 6 (voice)	120.Guitar Fret Noise
86.Lead 7 (fifths)	121.Breath Noise
87.Lead 8 (bass+lead)	122.Seashore
Synth Pad	123.Bird Tweet
88.Pad 1 (new age)	124.Telephone Ring
89.Pad 2 (warm)	125.Helicopter
90.Pad 3 (polysynth)	126.Applause
91.Pad 4 (choir)	127.Gun shot

■ List Of Rhythm

0.Beguines Wing	43.Rock_1	86.R.roll_2
1.Beguine_2	44.Rock_2	87.Fast Beat
2.Beguine_3	45.Rock_3	88.Quick Beat
3.Pop hit	46.Airy Rock	89.Smooth Beat
4.Pop	47.Heart Rock	90.Square Beat
5.Pop Malay	48.Rock & Roll	91.Euro Beat
6.Bossa nova	49.Urban Rock	92.Alpha Dance
7.Disco_1	50.Ballad	93.Beta Dance
8.Disco_2	51.Jazz Ballad	94.Dream Dance
9.Blue grass disco	52.C.Ballad	95.Dance_1
10.Waltzl_1	53.J.Ballad	96.Dance_2
11.Waltzl_2	54.60s Slow Ballad	97.Dance_3
12.True ballad waltz	55.Piano Ballad	98.RAP
13.Bossa Waltz	56.50s Ballad	99.The Country
14.Easy Waltz	57.Snake Base	100.Country Shuffle
15.Shuffle Waltz	58.Happy Blues	101.Electric Keys
16.Reggae Waltz	59.Old Blues	102.Dark Keys
17.Rumba Waltz	60.Blue Gras	103.Easy Walk
18.March_1	61.Boodie_1	104.Destiny
19.March_2	62.Boodie_2	105.Comedy
20.Rumba_1	63.Boodie_3	106.Drive
21.Rumba_2	64.Shuffle_1	107.Liquid Nova
22.Slow_1	65.Shuffle_2	108.Indonesian folk
23.Slow_2	66.Dream Shuffle	109.Absolute Music
24.Disco cha cha	67.Country Shuffle	110.Jamaica
25.Guala cha	68.Quick Shuffle	111.Synthesis
26.Char	69.Reggae Shuffle	112.Feel
27.Samba_1	70.R&B	113.Accelerate
28.Samba_2	71.Reggae_1	114.Beach Night
29.Ubminimal	72.Reggae_2	115.Irish
30.8Bit_1	73.Reggae_3	116.Tarantella
31.8Bit_2	74.Salsa_1	117.Big band
32.16Bit_1	75.Salsa_2	118.Dan
33.16bit_2	76.Salsa_3	119.Fusion
34.Ballad_16T	77.Tecno_1	120.Horse
35.Country_16T	78.Tecno_2	121.Canon
36.Tango_1	79.Funky_1	122.Latin
37.Tango_2	80.Funky_2	123.Mambo
38.Polka_1	81.Dixie_1	124.New age
39.Polka_2	82.Dixie_2	125.Slow rc
40.Pop Swing	83.Foxtrot_1	126.Soul
41.Easy Swing	84.Foxtrot_2	127.Twist
42.Soft Swing	85.R.roll_1	

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

EC

REP

E-CrossStu GmbH
Mainzer Landstr.69, 60329 Frankfurt am Main.

UK

REP

YH CONSULTING LIMITED.
C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX



Assistance technique et certificat de garantie
électronique www.vevor.com/support

Manuel d'utilisation du piano pliant

 
Modèle : BX-11



Assistance technique et certificat de garantie électronique
www.vevor.com/support

Nous continuons à nous engager à vous fournir des outils à des prix compétitifs.
"Économisez la moitié", "Moitié prix" ou toute autre expression similaire que nous utilisons ne représente qu'une estimation des économies dont vous pourriez bénéficier en achetant certains outils chez nous par rapport aux grandes marques et ne signifie pas nécessairement couvrir toutes les catégories d'outils proposés par nous. Nous vous rappelons de vérifier attentivement lorsque vous passez une commande chez nous si vous économisez réellement la moitié par rapport aux grandes marques.

Modèle: BX-11

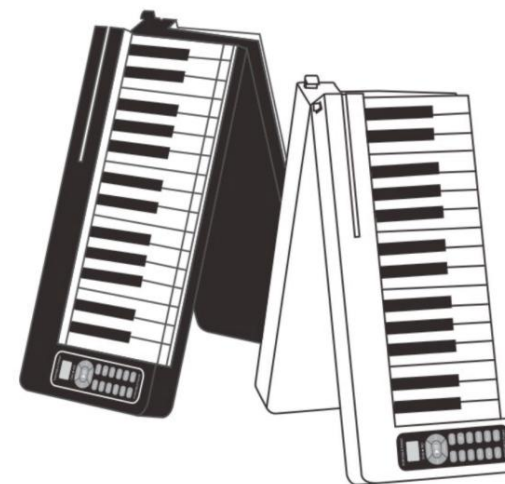

(L'image est uniquement à titre de référence, veuillez vous référer à l'objet réel)

 
BESOIN D'AIDE? CONTACTEZ-NOUS!

Vous avez des questions sur les produits ? Besoin d'une assistance technique ? N'hésitez pas à nous

contacter : Support technique et certificat de garantie électronique
www.vevor.com/support

Il s'agit des instructions originales, veuillez lire attentivement toutes les instructions du manuel avant de l'utiliser. VEVOR se réserve une interprétation claire de notre manuel d'utilisation. L'apparence du produit dépend du produit que vous avez reçu. Veuillez nous pardonner que nous ne vous informons plus s'il y a des mises à jour technologiques ou logicielles sur notre produit.

Panel Function Diagram:

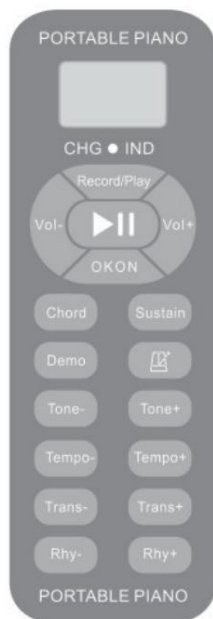


Please charge before use!

Charging Indicator:

1. TYPE-C interface
2. It is not applicable to PD fast charging line
3. The charging indicator is red and turns green when it is full
4. Battery: charging time is about 5H, please charge it more than 6H for the first time
5. Power adapter: 5V/2A

 Interface:

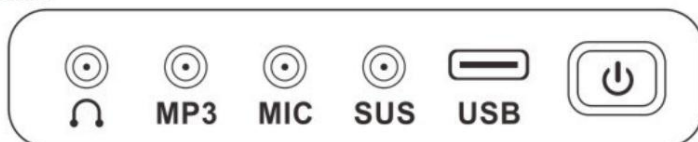

SUS : Sustain pedal
 MP3 : MP3
 MIC : Microphone
 : Headphone / Speaker
 USB : TYPE-C charging / MIDI interface

Function

Volume adjustment, Start/Stop, Record/Play, Teaching OKON, Chord, Sustain, Demo, Metronome, Tempo, Transpose, Rhythm

Volume

Press Vol- or Vol+ to adjust the volume, the default boot volume is 12 (from 00-15).

Start/ Stop

Press Start to enter the rhythm playing mode.
 The sequence number will be displayed on the display.

Record/ Play (long press is Record, short press is Play)

1. Press and hold the Record/ Play button, At this time, play the keyboard to record MIDI signals.
2. Short press the Record/ Play button, the last recorded signal can be played.

Learn

1. Press OKON button, cyclic switching, Teaching A → Teaching B → Off → Teaching A → ...
2. Teaching A: Play accompaniment, playing any key can play the main melody of the demo song.
3. Teaching B: Play accompaniment, the user press the right keys to enter the next note.
 If the user does not press the right keys, they pause until they press the right keys to the next note.
4. Teaching songs: The current demo which is playing. Select the teaching songs by switching Demo.

Chord

1. Press Chord button, cyclic switching, SINGLE → FINGERS → Off → SINGLE → ...
2. During the playing of rhythm, the system enters the chord mode.
 Chord function: Press the key in the area C3~F4# to play the chords that match the rhythm, and the tone of the chords changes with the pitch of the hard.

Sustain

1. Press Sustain button to open the sustain function, then press off.
2. Turn on the sustain function, and make the tone produce the effect of continuance in performance.

Demo

1. Short press Demo button to play the demo. Press the demo button again to next song.
 (Demo from 000-020)
2. Long press the Demo button to select the demo from 000-020 quickly.
3. Press to stop the demo.

Metronome

Press and the metronome will display the beat selection of 1/4, 2/4, 3/4 and 4/4.

Tone

1. Press Tone- or Tone+ to select the tone from 000-127 (see the attached tone table).
The serial number of the adjusted tone will be displayed on the screen.
2. Long press Tone- or Tone+ to select the tone quickly.
3. Press Tone- and Tone+ at the same time to move back to tone 000 and play the piano tone.

Tempo

1. Press Tempo- or Tempo+ to adjust tempo, the default tempo is 241 level (from 40-280 level).
2. Long press Tempo- or Tempo+ to adjust the tempo quickly.
3. Press Tempo- or Tempo+ at the same time to move back to 8 level.

Transpose

1. Press Trans+ or Trans- to select rhythm. The shift can be selected from level -6 to +6, and the default level is +0.
2. Long press Trans+ or Trans- to quickly switch it.
3. Press and hold the Trans+ or Trans- at the same time to move back to level +0.

Rhythm

1. Press Rhy+ or Rhy- to select rhythm. 000-127 rhythms (please refer to the attached rhythm list),
The sequence number will be displayed on the display.
2. Long press Rhy+ or Rhy- to adjust the rhythm quickly.
3. Press and hold the Rhy+ or Rhy- at the same time to move back to Rhy 0 and play the Rhy 0.

Sleep Mode

In the default mode, when the piano is not played after 10 minutes, the electric piano will turn off. Then you need to press the ON/OFF button to restart the piano again.

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

iPhone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the iPhone.
2. Open the POPiano App after turning on the bluetooth of the iPhone, select any song, and choose to start playing after entering.
3. Click on the upper right of the iPhone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
4. After confirming bluetooth connection, the icon is displayed as blue check mark .

GarageBand connection:

1. Open GarageBand App,
2. Turn on bluetooth on your phone.
3. Open GarageBand App and click the Settings icon in the upper right corner of the screen.
4. Connect the piano's bluetooth through the: Song Settings - Advanced - Bluetooth MIDI Devices.

Perfect Piano and PianoBar connection:

1. Download the Perfect Piano App and PianoBar.
2. Turn on bluetooth on your phone.
3. First connect the GarageBand App. When them is connect successfully, then open the Perfect Piano App and PianoBar can be used directly.

Android phone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the mobile phone.
2. Turn on the bluetooth function, some phones need to turn on the phone location function.
3. Open the POPiano App to select any song, and choose to start playing after entering.
4. Click on the upper right of the mobile phone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
5. After confirming bluetooth connection, the icon is displayed as blue check mark .

Audio Bluetooth playback

Open the phone Settings to search for Bluetooth name: GZUT-MUSIC.

After the connection is successful, the phone music is played, and the music is emitted from the piano.

■ Demo

0.Castle in the Sky	11.Milk Song
1.Song of Joy	12.A comme amour
2.Little Stars	13.Les premiers sourires de Vanessa
3.By Alice	14.Snowdreams
4.Dancing Girl	15.Bandari
5.Deskmate	16.Edelweiss
6.Ten Years	17.Dance of fireflie
7.Colourful Clouds Chasing The Moon	18.My soul
8.In My Song	19.Croatian Rhapsody
9.CrystalLake	20.CSIKOS POST
10.Green Sleeves	

■ List Of Tone

Piano	28.Electric Guitar (muted)
0.Piano 1	29.Overdriven Guitar
1.Piano 2	30.Distortion Guitar
2.Piano 3	31.Guitar Harmonics
3.Honky-Tonk Piano	Bass
4.Rhodes Piano	32.Acoustic Bass
5.Chorused Piano	33.Electric Bass(finger)
6.Harpsichord	34.Electric Bass(pick)
7.Clavinet	35.Fretless Bass
Percussion Instrument	36.Slap Bass 1
8.Celesta	37.Slap Bass 2
9.Glockenspiel	38.Synth Bass 1
10.Music Box	39.Synth Bass 2
11.Vibraphone	Strings
12.Marimba	40.Violin
13.Xylophone	41.Viola
14.Tubular Bells	42.Cello
15.Santur	43.Contrabass
Organ	44.Tremolo Strings
16.Hammond Organ	45.Pizzicato Strings
17.Percussive Organ	46.Orchestral Harp
18.Rock Organ	47.Timpani
19.Church Organ	Ensemble
20.Reed Organ	48.String Ensemble 1
21.Accordion	49.String Ensemble 2
22.Harmonica	50.SynthStrings 1
23.Bandoneon	51.SynthStrings 2
Guitar	52.Choir Aahs
24.Acoustic Guitar (nylon)	53.Voice Oohs
25.Acoustic Guitar(steel)	54.Synth Voice
26.Electric Guitar (jazz)	55.Orchestra Hit
27.Electric Guitar (clean)	Brass Instrument

56.Trumpet	92.Pad 5 (bowed)
57.Trombone	93.Pad 6 (metallic)
58.Tuba	94.Pad 7 (halo)
59.Muted Trumpet	95.Pad 8 (sweep)
60.French Horn	Fx
61.Brass Section	96.FX 1 (rain)
62.Synth Brass 1	97.FX 2 (soundtrack)
63.Synth Brass 2	98.FX 3 (crystal)
Reeds Instrument	99.FX 4 (atmosphere)
64.Soprano Sax	100.FX 5 (brightness)
65.Alto Sax	101.FX 6 (goblins)
66.Tenor Sax	102.FX 7 (echoes)
67.Baritone Sax	103.FX 8 (sci-fi)
68.Oboe	National Instrument
69.English Horn	104.Sitar
70.Bassoon	105.Banjo
71.Clarinete	106.Shamisen
Tongue	107.Koto
72.Piccolo	108.alimba
73.Flute	109.Bagpipe
74.Recorder	110.Fiddle
75.Pan Flute	111.Shanai
76.Bottle Blow	Percussion
77.Skakuhachi	112.Tinkle Bell
78.Whistle	113.Agogo
79.Ocarina	114.Steel Drums
Soft Leads	115.Woodblock
80.Lead 1 (square)	116.Taiko Drum
81.Lead 2 (sawtooth)	117.Melodic Tom
82.Lead 3 (calliope lead)	118.Synth Drum
83.Lead 4 (chiff lead)	119.Reverse Cymbal
84.Lead 5 (charang)	FxPhone
85.Lead 6 (voice)	120.Guitar Fret Noise
86.Lead 7 (fifths)	121.Breath Noise
87.Lead 8 (bass+lead)	122.Seashore
Synth Pad	123.Bird Tweet
88.Pad 1 (new age)	124.Telephone Ring
89.Pad 2 (warm)	125.Helicopter
90.Pad 3 (polysynth)	126.Applause
91.Pad 4 (choir)	127.Gun shot

■ List Of Rhythm


0.Beguines Wing	43.Rock_1	86.R.roll_2
1.Beguine_2	44.Rock_2	87.Fast Beat
2.Beguine_3	45.Rock_3	88.Quick Beat
3.Pop hit	46.Airy Rock	89.Smooth Beat
4.Pop	47.Heart Rock	90.Square Beat
5.Pop Malay	48.Rock & Roll	91.Euro Beat
6.Bossa nova	49.Urban Rock	92.Alpha Dance
7.Disco_1	50.Ballad	93.Beta Dance
8.Disco_2	51.Jazz Ballad	94.Dream Dance
9.Blue grass disco	52.C.Ballad	95.Dance_1
10.Waltzl_1	53.J.Ballad	96.Dance_2
11.Waltzl_2	54.60s Slow Ballad	97.Dance_3
12.True ballad waltz	55.Piano Ballad	98.RAP
13.Bossa Waltz	56.50s Ballad	99.The Country
14.Easy Waltz	57.Snake Base	100.Country Shuffle
15.Shuffle Waltz	58.Happy Blues	101.Electric Keys
16.Reggae Waltz	59.Old Blues	102.Dark Keys
17.Rumba Waltz	60.Blue Gras	103.Easy Walk
18.March_1	61.Boodie_1	104.Destiny
19.March_2	62.Boodie_2	105.Comedy
20.Rumba_1	63.Boodie_3	106.Drive
21.Rumba_2	64.Shuffle_1	107.Liquid Nova
22.Slow_1	65.Shuffle_2	108.Indonesian folk
23.Slow_2	66.Dream Shuffle	109.Absolute Music
24.Disco cha cha	67.Country Shuffle	110.Jamaica
25.Guala cha	68.Quick Shuffle	111.Synthesis
26.Char	69.Reggae Shuffle	112.Feel
27.Samba_1	70.R&B	113.Accelerate
28.Samba_2	71.Reggae_1	114.Beach Night
29.Ubminimal	72.Reggae_2	115.Irish
30.8Bit_1	73.Reggae_3	116.Tarantella
31.8Bit_2	74.Salsa_1	117.Big band
32.16Bit_1	75.Salsa_2	118.Dan
33.16bit_2	76.Salsa_3	119.Fusion
34.Ballad_16T	77.Tecno_1	120.Horse
35.Country_16T	78.Tecno_2	121.Canon
36.Tango_1	79.Funky_1	122.Latin
37.Tango_2	80.Funky_2	123.Mambo
38.Polka_1	81.Dixie_1	124.New age
39.Polka_2	82.Dixie_2	125.Slow rc
40.Pop Swing	83.Foxtrot_1	126.Soul
41.Easy Swing	84.Foxtrot_2	127.Twist
42.Soft Swing	85.R.roll_1	

Fabricant : Shanghai muxinmuyeyouxiangongsi Adresse :

Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Importé en Australie : SIHAO PTY LTD, 1 ROKEVA STREETASTWOOD NSW 2122
Australie

 Importé aux États-Unis : Sanven Technology Ltd., Suite 250, 9166 Anaheim Place,
Rancho Cucamonga, CA 91730



E-CrossStu GmbH

Mainzer Landstr.69, 60329 Francfort-sur-le-Main.



YH CONSULTING LIMITÉE.

C/O YH Consulting Limited Bureau 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX



Technischer Support und E-Garantie-Zertifikat
www.vevor.com/support

Bedienungsanleitung für Klappklavier

 
Modell: BX-11



Technischer Support und E-Garantie-Zertifikat
www.vevor.com/support

Wir sind weiterhin bestrebt, Ihnen Werkzeuge zu wettbewerbsfähigen Preisen anzubieten.
„Sparen Sie die Hälfte“, „Halber Preis“ oder andere ähnliche Ausdrücke, die wir verwenden, stellen nur eine Schätzung der Ersparnis dar, die Sie beim Kauf bestimmter Werkzeuge bei uns im Vergleich zu den großen Topmarken erzielen können, und decken nicht unbedingt alle von uns angebotenen Werkzeugkategorien ab. Wir möchten Sie freundlich daran erinnern, bei Ihrer Bestellung bei uns sorgfältig zu prüfen, ob Sie im Vergleich zu den großen Topmarken tatsächlich die Hälfte sparen.

Modell: BX-11

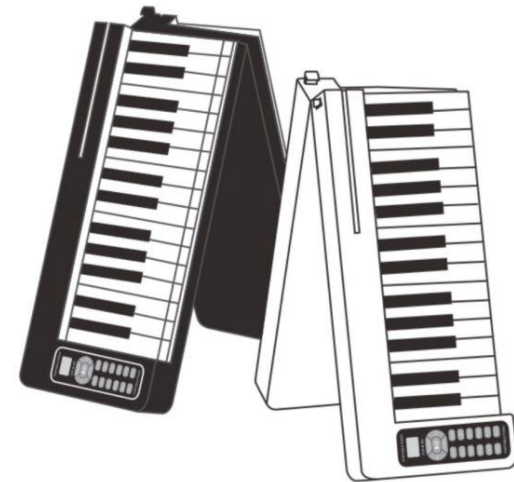

(Das Bild dient nur als Referenz, bitte beziehen Sie sich auf das tatsächliche Objekt)

 
Brauchen Sie Hilfe? Kontaktieren Sie uns!

Haben Sie Fragen zum Produkt? Benötigen Sie technischen Support? Bitte kontaktieren Sie uns:

Technischer Support und E-Garantie-Zertifikat www.vevor.com/support

Dies ist die Originalanleitung. Bitte lesen Sie alle Anweisungen sorgfältig durch, bevor Sie das Gerät in Betrieb nehmen. VEVOR behält sich eine klare Auslegung unserer Bedienungsanleitung vor. Das Erscheinungsbild des Produkts richtet sich nach dem Produkt, das Sie erhalten haben. Bitte verzeihen Sie uns, dass wir Sie nicht erneut informieren, wenn es Technologie- oder Software-Updates für unser Produkt gibt.

Panel Function Diagram:

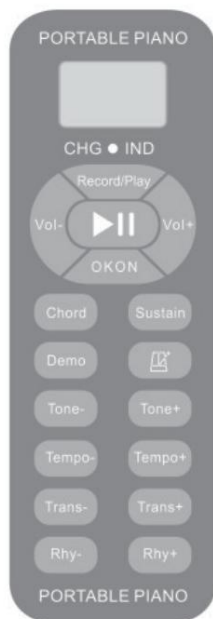


Please charge before use!

Charging Indicator:

1. TYPE-C interface
2. It is not applicable to PD fast charging line
3. The charging indicator is red and turns green when it is full
4. Battery: charging time is about 5H, please charge it more than 6H for the first time
5. Power adapter: 5V/2A

 Interface:

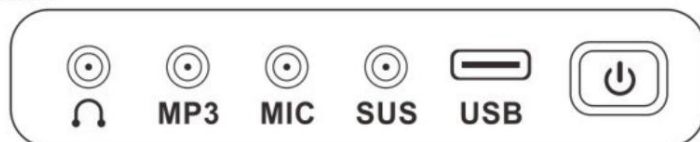

SUS : Sustain pedal
 MP3 : MP3
 MIC : Microphone
 : Headphone / Speaker
 USB : TYPE-C charging / MIDI interface

Function

Volume adjustment, Start/Stop, Record/Play, Teaching OKON, Chord, Sustain, Demo, Metronome, Tempo, Transpose, Rhythm

Volume

Press Vol- or Vol+ to adjust the volume, the default boot volume is 12 (from 00-15).

Start/ Stop

Press Start to enter the rhythm playing mode.
 The sequence number will be displayed on the display.

Record/ Play (long press is Record, short press is Play)

1. Press and hold the Record/ Play button, At this time, play the keyboard to record MIDI signals.
2. Short press the Record/ Play button, the last recorded signal can be played.

Learn

1. Press OKON button, cyclic switching, Teaching A → Teaching B → Off → Teaching A → ...
2. Teaching A: Play accompaniment, playing any key can play the main melody of the demo song.
3. Teaching B: Play accompaniment, the user press the right keys to enter the next note.
 If the user does not press the right keys, they pause until they press the right keys to the next note.
4. Teaching songs: The current demo which is playing. Select the teaching songs by switching Demo.

Chord

1. Press Chord button, cyclic switching, SINGLE → FINGERS → Off → SINGLE → ...
2. During the playing of rhythm, the system enters the chord mode.
 Chord function: Press the key in the area C3~F4# to play the chords that match the rhythm, and the tone of the chords changes with the pitch of the hard.

Sustain

1. Press Sustain button to open the sustain function, then press off.
2. Turn on the sustain function, and make the tone produce the effect of continuance in performance.

Demo

1. Short press Demo button to play the demo. Press the demo button again to next song.
 (Demo from 000-020)
2. Long press the Demo button to select the demo from 000-020 quickly.
3. Press to stop the demo.

Metronome

Press and the metronome will display the beat selection of 1/4, 2/4, 3/4 and 4/4.

Tone

1. Press Tone- or Tone+ to select the tone from 000-127 (see the attached tone table).
The serial number of the adjusted tone will be displayed on the screen.
2. Long press Tone- or Tone+ to select the tone quickly.
3. Press Tone- and Tone+ at the same time to move back to tone 000 and play the piano tone.

Tempo

1. Press Tempo- or Tempo+ to adjust tempo, the default tempo is 241 level (from 40-280 level).
2. Long press Tempo- or Tempo+ to adjust the tempo quickly.
3. Press Tempo- or Tempo+ at the same time to move back to 8 level.

Transpose

1. Press Trans+ or Trans- to select rhythm. The shift can be selected from level -6 to +6, and the default level is +0.
2. Long press Trans+ or Trans- to quickly switch it.
3. Press and hold the Trans+ or Trans- at the same time to move back to level +0.

Rhythm

1. Press Rhy+ or Rhy- to select rhythm. 000-127 rhythms (please refer to the attached rhythm list),
The sequence number will be displayed on the display.
2. Long press Rhy+ or Rhy- to adjust the rhythm quickly.
3. Press and hold the Rhy+ or Rhy- at the same time to move back to Rhy 0 and play the Rhy 0.

Sleep Mode

In the default mode, when the piano is not played after 10 minutes, the electric piano will turn off. Then you need to press the ON/OFF button to restart the piano again.

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

iPhone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the iPhone.
2. Open the POPiano App after turning on the bluetooth of the iPhone, select any song, and choose to start playing after entering.
3. Click on the upper right of the iPhone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
4. After confirming bluetooth connection, the icon is displayed as blue check mark .

GarageBand connection:

1. Open GarageBand App,
2. Turn on bluetooth on your phone.
3. Open GarageBand App and click the Settings icon in the upper right corner of the screen.
4. Connect the piano's bluetooth through the: Song Settings - Advanced - Bluetooth MIDI Devices.

Perfect Piano and PianoBar connection:

1. Download the Perfect Piano App and PianoBar.
2. Turn on bluetooth on your phone.
3. First connect the GarageBand App. When them is connect successfully, then open the Perfect Piano App and PianoBar can be used directly.

Android phone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the mobile phone.
2. Turn on the bluetooth function, some phones need to turn on the phone location function.
3. Open the POPiano App to select any song, and choose to start playing after entering.
4. Click on the upper right of the mobile phone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
5. After confirming bluetooth connection, the icon is displayed as blue check mark .

Audio Bluetooth playback

Open the phone Settings to search for Bluetooth name: GZUT-MUSIC.

After the connection is successful, the phone music is played, and the music is emitted from the piano.

■ Demo

0.Castle in the Sky	11.Milk Song
1.Song of Joy	12.A comme amour
2.Little Stars	13.Les premiers sourires de Vanessa
3.By Alice	14.Snowdreams
4.Dancing Girl	15.Bandari
5.Deskmate	16.Edelweiss
6.Ten Years	17.Dance of fireflie
7.Colourful Clouds Chasing The Moon	18.My soul
8.In My Song	19.Croatian Rhapsody
9.CrystalLake	20.CSIKOS POST
10.Green Sleeves	

■ List Of Tone

Piano	28.Electric Guitar (muted)
0.Piano 1	29.Overdriven Guitar
1.Piano 2	30.Distortion Guitar
2.Piano 3	31.Guitar Harmonics
3.Honky-Tonk Piano	Bass
4.Rhodes Piano	32.Acoustic Bass
5.Chorused Piano	33.Electric Bass(finger)
6.Harpsichord	34.Electric Bass(pick)
7.Clavinet	35.Fretless Bass
Percussion Instrument	36.Slap Bass 1
8.Celesta	37.Slap Bass 2
9.Glockenspiel	38.Synth Bass 1
10.Music Box	39.Synth Bass 2
11.Vibraphone	Strings
12.Marimba	40.Violin
13.Xylophone	41.Viola
14.Tubular Bells	42.Cello
15.Santur	43.Contrabass
Organ	44.Tremolo Strings
16.Hammond Organ	45.Pizzicato Strings
17.Percussive Organ	46.Orchestral Harp
18.Rock Organ	47.Timpani
19.Church Organ	Ensemble
20.Reed Organ	48.String Ensemble 1
21.Accordion	49.String Ensemble 2
22.Harmonica	50.SynthStrings 1
23.Bandoneon	51.SynthStrings 2
Guitar	52.Choir Aahs
24.Acoustic Guitar (nylon)	53.Voice Oohs
25.Acoustic Guitar(steel)	54.Synth Voice
26.Electric Guitar (jazz)	55.Orchestra Hit
27.Electric Guitar (clean)	Brass Instrument

56.Trumpet	92.Pad 5 (bowed)
57.Trombone	93.Pad 6 (metallic)
58.Tuba	94.Pad 7 (halo)
59.Muted Trumpet	95.Pad 8 (sweep)
60.French Horn	Fx
61.Brass Section	96.FX 1 (rain)
62.Synth Brass 1	97.FX 2 (soundtrack)
63.Synth Brass 2	98.FX 3 (crystal)
Reeds Instrument	99.FX 4 (atmosphere)
64.Soprano Sax	100.FX 5 (brightness)
65.Alto Sax	101.FX 6 (goblins)
66.Tenor Sax	102.FX 7 (echoes)
67.Baritone Sax	103.FX 8 (sci-fi)
68.Oboe	National Instrument
69.English Horn	104.Sitar
70.Bassoon	105.Banjo
71.Clarinet	106.Shamisen
Tongue	107.Koto
72.Piccolo	108.alimba
73.Flute	109.Bagpipe
74.Recorder	110.Fiddle
75.Pan Flute	111.Shanai
76.Bottle Blow	Percussion
77.Skakuhachi	112.Tinkle Bell
78.Whistle	113.Agogo
79.Ocarina	114.Steel Drums
Soft Leads	115.Woodblock
80.Lead 1 (square)	116.Taiko Drum
81.Lead 2 (sawtooth)	117.Melodic Tom
82.Lead 3 (calliope lead)	118.Synth Drum
83.Lead 4 (chiff lead)	119.Reverse Cymbal
84.Lead 5 (charang)	FxPhone
85.Lead 6 (voice)	120.Guitar Fret Noise
86.Lead 7 (fifths)	121.Breath Noise
87.Lead 8 (bass+lead)	122.Seashore
Synth Pad	123.Bird Tweet
88.Pad 1 (new age)	124.Telephone Ring
89.Pad 2 (warm)	125.Helicopter
90.Pad 3 (polysynth)	126.Applause
91.Pad 4 (choir)	127.Gun shot

■ List Of Rhythm


0.Beguines Wing	43.Rock_1	86.R.roll_2
1.Beguine_2	44.Rock_2	87.Fast Beat
2.Beguine_3	45.Rock_3	88.Quick Beat
3.Pop hit	46.Airy Rock	89.Smooth Beat
4.Pop	47.Heart Rock	90.Square Beat
5.Pop Malay	48.Rock & Roll	91.Euro Beat
6.Bossa nova	49.Urban Rock	92.Alpha Dance
7.Disco_1	50.Ballad	93.Beta Dance
8.Disco_2	51.Jazz Ballad	94.Dream Dance
9.Blue grass disco	52.C.Ballad	95.Dance_1
10.Waltzl_1	53.J.Ballad	96.Dance_2
11.Waltzl_2	54.60s Slow Ballad	97.Dance_3
12.True ballad waltz	55.Piano Ballad	98.RAP
13.Bossa Waltz	56.50s Ballad	99.The Country
14.Easy Waltz	57.Snake Base	100.Country Shuffle
15.Shuffle Waltz	58.Happy Blues	101.Electric Keys
16.Reggae Waltz	59.Old Blues	102.Dark Keys
17.Rumba Waltz	60.Blue Gras	103.Easy Walk
18.March_1	61.Boodie_1	104.Destiny
19.March_2	62.Boodie_2	105.Comedy
20.Rumba_1	63.Boodie_3	106.Drive
21.Rumba_2	64.Shuffle_1	107.Liquid Nova
22.Slow_1	65.Shuffle_2	108.Indonesian folk
23.Slow_2	66.Dream Shuffle	109.Absolute Music
24.Disco cha cha	67.Country Shuffle	110.Jamaica
25.Guala cha	68.Quick Shuffle	111.Synthesis
26.Char	69.Reggae Shuffle	112.Feel
27.Samba_1	70.R&B	113.Accelerate
28.Samba_2	71.Reggae_1	114.Beach Night
29.Ubminimal	72.Reggae_2	115.Irish
30.8Bit_1	73.Reggae_3	116.Tarantella
31.8Bit_2	74.Salsa_1	117.Big band
32.16Bit_1	75.Salsa_2	118.Dan
33.16bit_2	76.Salsa_3	119.Fusion
34.Ballad_16T	77.Tecno_1	120.Horse
35.Country_16T	78.Tecno_2	121.Canon
36.Tango_1	79.Funky_1	122.Latin
37.Tango_2	80.Funky_2	123.Mambo
38.Polka_1	81.Dixie_1	124.New age
39.Polka_2	82.Dixie_2	125.Slow rc
40.Pop Swing	83.Foxtrot_1	126.Soul
41.Easy Swing	84.Foxtrot_2	127.Twist
42.Soft Swing	85.R.roll_1	

Hersteller: Shanghaimuxinmuyeyouxiangongsi **Adresse:**

Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, Shanghai 200000 CN.

Nach AUS importiert: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122
Australien

 Importiert in die USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place,
Rancho Cucamonga, CA 91730



E-CrossStu GmbH
Mainzer Landstr.69, 60329 Frankfurt am Main.



YH CONSULTING LIMITED.
C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX



Supporto tecnico e certificato di garanzia
elettronica www.vevor.com/support

Manuale utente del pianoforte pieghevole

 
Modello: BX-11



Supporto tecnico e certificato di garanzia
elettronica www.vevor.com/support

Continuiamo a impegnarci per fornirvi strumenti a prezzi competitivi.
"Risparmia la metà", "Metà prezzo" o qualsiasi altra espressione simile da noi utilizzata rappresenta solo una stima del risparmio che potresti trarre dall'acquistare determinati strumenti con noi rispetto ai principali marchi più importanti e non significa necessariamente coprire tutte le categorie di strumenti offerti da noi. Ti ricordiamo di verificare attentamente quando effettui un ordine con noi se stai effettivamente risparmiando la metà rispetto ai migliori marchi principali.

Modello:BX-11

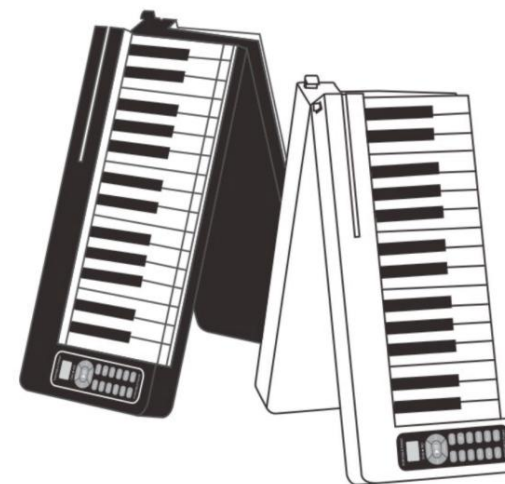

(L'immagine è solo di riferimento, fare riferimento all'oggetto reale)

HO BISOGNO DI AIUTO? CONTATTACI!

 
Hai domande sul prodotto? Hai bisogno di supporto tecnico? Non esitate a contattarci:

Supporto

tecnico e certificato di garanzia elettronica www.vevor.com/support

Queste sono le istruzioni originali, leggere attentamente tutte le istruzioni del manuale prima dell'uso. VEVOR si riserva una chiara interpretazione del nostro manuale d'uso. L'aspetto del prodotto sarà soggetto al prodotto ricevuto. Ti preghiamo di perdonarci se non ti informeremo più se sono presenti aggiornamenti tecnologici o software sul nostro prodotto.

Panel Function Diagram:

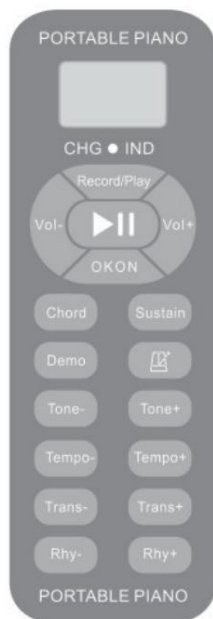


Please charge before use!

Charging Indicator:

1. TYPE-C interface
2. It is not applicable to PD fast charging line
3. The charging indicator is red and turns green when it is full
4. Battery: charging time is about 5H, please charge it more than 6H for the first time
5. Power adapter: 5V/2A

 Interface:

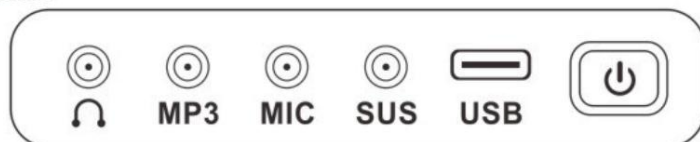

SUS : Sustain pedal
 MP3 : MP3
 MIC : Microphone
 : Headphone / Speaker
 USB : TYPE-C charging / MIDI interface

Function

Volume adjustment, Start/Stop, Record/Play, Teaching OKON, Chord, Sustain, Demo, Metronome, Tempo, Transpose, Rhythm

Volume

Press Vol- or Vol+ to adjust the volume, the default boot volume is 12 (from 00-15).

Start/ Stop

Press Start to enter the rhythm playing mode.
 The sequence number will be displayed on the display.

Record/ Play (long press is Record, short press is Play)

1. Press and hold the Record/ Play button, At this time, play the keyboard to record MIDI signals.
2. Short press the Record/ Play button, the last recorded signal can be played.

Learn

1. Press OKON button, cyclic switching,
 Teaching A → Teaching B → Off → Teaching A → ...
2. Teaching A: Play accompaniment, playing any key can play the main melody of the demo song.
3. Teaching B: Play accompaniment, the user press the right keys to enter the next note.
 If the user does not press the right keys, they pause until they press the right keys to the next note.
4. Teaching songs: The current demo which is playing. Select the teaching songs by switching Demo.

Chord

1. Press Chord button, cyclic switching, SINGLE → FINGERS → Off → SINGLE → ...
2. During the playing of rhythm, the system enters the chord mode.
 Chord function: Press the key in the area C3~F4# to play the chords that match the rhythm, and the tone of the chords changes with the pitch of the hard.

Sustain

1. Press Sustain button to open the sustain function, then press off.
2. Turn on the sustain function, and make the tone produce the effect of continuance in performance.

Demo

1. Short press Demo button to play the demo. Press the demo button again to next song.
 (Demo from 000-020)
2. Long press the Demo button to select the demo from 000-020 quickly.
3. Press to stop the demo.

Metronome

Press and the metronome will display the beat selection of 1/4, 2/4, 3/4 and 4/4.

Tone

1. Press Tone- or Tone+ to select the tone from 000-127 (see the attached tone table).
The serial number of the adjusted tone will be displayed on the screen.
2. Long press Tone- or Tone+ to select the tone quickly.
3. Press Tone- and Tone+ at the same time to move back to tone 000 and play the piano tone.

Tempo

1. Press Tempo- or Tempo+ to adjust tempo, the default tempo is 241 level (from 40-280 level).
2. Long press Tempo- or Tempo+ to adjust the tempo quickly.
3. Press Tempo- or Tempo+ at the same time to move back to 8 level.

Transpose

1. Press Trans+ or Trans- to select rhythm. The shift can be selected from level -6 to +6, and the default level is +0.
2. Long press Trans+ or Trans- to quickly switch it.
3. Press and hold the Trans+ or Trans- at the same time to move back to level +0.

Rhythm

1. Press Rhy+ or Rhy- to select rhythm. 000-127 rhythms (please refer to the attached rhythm list),
The sequence number will be displayed on the display.
2. Long press Rhy+ or Rhy- to adjust the rhythm quickly.
3. Press and hold the Rhy+ or Rhy- at the same time to move back to Rhy 0 and play the Rhy 0.

Sleep Mode

In the default mode, when the piano is not played after 10 minutes, the electric piano will turn off. Then you need to press the ON/OFF button to restart the piano again.

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

iPhone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the iPhone.
2. Open the POPiano App after turning on the bluetooth of the iPhone, select any song, and choose to start playing after entering.
3. Click on the upper right of the iPhone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
4. After confirming bluetooth connection, the icon is displayed as blue check mark .

GarageBand connection:

1. Open GarageBand App,
2. Turn on bluetooth on your phone.
3. Open GarageBand App and click the Settings icon in the upper right corner of the screen.
4. Connect the piano's bluetooth through the: Song Settings - Advanced - Bluetooth MIDI Devices.

Perfect Piano and PianoBar connection:

1. Download the Perfect Piano App and PianoBar.
2. Turn on bluetooth on your phone.
3. First connect the GarageBand App. When them is connect successfully, then open the Perfect Piano App and PianoBar can be used directly.

Android phone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the mobile phone.
2. Turn on the bluetooth function, some phones need to turn on the phone location function.
3. Open the POPiano App to select any song, and choose to start playing after entering.
4. Click on the upper right of the mobile phone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
5. After confirming bluetooth connection, the icon is displayed as blue check mark .

Audio Bluetooth playback

Open the phone Settings to search for Bluetooth name: GZUT-MUSIC.

After the connection is successful, the phone music is played, and the music is emitted from the piano.

■ Demo

0.Castle in the Sky	11.Milk Song
1.Song of Joy	12.A comme amour
2.Little Stars	13.Les premiers sourires de Vanessa
3.By Alice	14.Snowdreams
4.Dancing Girl	15.Bandari
5.Deskmate	16.Edelweiss
6.Ten Years	17.Dance of fireflie
7.Colourful Clouds Chasing The Moon	18.My soul
8.In My Song	19.Croatian Rhapsody
9.CrystalLake	20.CSIKOS POST
10.Green Sleeves	

■ List Of Tone

Piano	28.Electric Guitar (muted)
0.Piano 1	29.Overdriven Guitar
1.Piano 2	30.Distortion Guitar
2.Piano 3	31.Guitar Harmonics
3.Honky-Tonk Piano	Bass
4.Rhodes Piano	32.Acoustic Bass
5.Chorused Piano	33.Electric Bass(finger)
6.Harpsichord	34.Electric Bass(pick)
7.Clavinet	35.Fretless Bass
Percussion Instrument	36.Slap Bass 1
8.Celesta	37.Slap Bass 2
9.Glockenspiel	38.Synth Bass 1
10.Music Box	39.Synth Bass 2
11.Vibraphone	Strings
12.Marimba	40.Violin
13.Xylophone	41.Viola
14.Tubular Bells	42.Cello
15.Santur	43.Contrabass
Organ	44.Tremolo Strings
16.Hammond Organ	45.Pizzicato Strings
17.Percussive Organ	46.Orchestral Harp
18.Rock Organ	47.Timpani
19.Church Organ	Ensemble
20.Reed Organ	48.String Ensemble 1
21.Accordion	49.String Ensemble 2
22.Harmonica	50.SynthStrings 1
23.Bandoneon	51.SynthStrings 2
Guitar	52.Choir Aahs
24.Acoustic Guitar (nylon)	53.Voice Oohs
25.Acoustic Guitar(steel)	54.Synth Voice
26.Electric Guitar (jazz)	55.Orchestra Hit
27.Electric Guitar (clean)	Brass Instrument

56.Trumpet	92.Pad 5 (bowed)
57.Trombone	93.Pad 6 (metallic)
58.Tuba	94.Pad 7 (halo)
59.Muted Trumpet	95.Pad 8 (sweep)
60.French Horn	Fx
61.Brass Section	96.FX 1 (rain)
62.Synth Brass 1	97.FX 2 (soundtrack)
63.Synth Brass 2	98.FX 3 (crystal)
Reeds Instrument	99.FX 4 (atmosphere)
64.Soprano Sax	100.FX 5 (brightness)
65.Alto Sax	101.FX 6 (goblins)
66.Tenor Sax	102.FX 7 (echoes)
67.Baritone Sax	103.FX 8 (sci-fi)
68.Oboe	National Instrument
69.English Horn	104.Sitar
70.Bassoon	105.Banjo
71.Clarinet	106.Shamisen
Tongue	107.Koto
72.Piccolo	108.alimba
73.Flute	109.Bagpipe
74.Recorder	110.Fiddle
75.Pan Flute	111.Shanai
76.Bottle Blow	Percussion
77.Skakuhachi	112.Tinkle Bell
78.Whistle	113.Agogo
79.Ocarina	114.Steel Drums
Soft Leads	115.Woodblock
80.Lead 1 (square)	116.Taiko Drum
81.Lead 2 (sawtooth)	117.Melodic Tom
82.Lead 3 (calliope lead)	118.Synth Drum
83.Lead 4 (chiff lead)	119.Reverse Cymbal
84.Lead 5 (charang)	FxPhone
85.Lead 6 (voice)	120.Guitar Fret Noise
86.Lead 7 (fifths)	121.Breath Noise
87.Lead 8 (bass+lead)	122.Seashore
Synth Pad	123.Bird Tweet
88.Pad 1 (new age)	124.Telephone Ring
89.Pad 2 (warm)	125.Helicopter
90.Pad 3 (polysynth)	126.Applause
91.Pad 4 (choir)	127.Gun shot

■ List Of Rhythm

0.Beguines Wing	43.Rock_1	86.R.roll_2
1.Beguine_2	44.Rock_2	87.Fast Beat
2.Beguine_3	45.Rock_3	88.Quick Beat
3.Pop hit	46.Airy Rock	89.Smooth Beat
4.Pop	47.Heart Rock	90.Square Beat
5.Pop Malay	48.Rock & Roll	91.Euro Beat
6.Bossa nova	49.Urban Rock	92.Alpha Dance
7.Disco_1	50.Ballad	93.Beta Dance
8.Disco_2	51.Jazz Ballad	94.Dream Dance
9.Blue grass disco	52.C.Ballad	95.Dance_1
10.Waltzl_1	53.J.Ballad	96.Dance_2
11.Waltzl_2	54.60s Slow Ballad	97.Dance_3
12.True ballad waltz	55.Piano Ballad	98.RAP
13.Bossa Waltz	56.50s Ballad	99.The Country
14.Easy Waltz	57.Snake Base	100.Country Shuffle
15.Shuffle Waltz	58.Happy Blues	101.Electric Keys
16.Reggae Waltz	59.Old Blues	102.Dark Keys
17.Rumba Waltz	60.Blue Gras	103.Easy Walk
18.March_1	61.Boodie_1	104.Destiny
19.March_2	62.Boodie_2	105.Comedy
20.Rumba_1	63.Boodie_3	106.Drive
21.Rumba_2	64.Shuffle_1	107.Liquid Nova
22.Slow_1	65.Shuffle_2	108.Indonesian folk
23.Slow_2	66.Dream Shuffle	109.Absolute Music
24.Disco cha cha	67.Country Shuffle	110.Jamaica
25.Guala cha	68.Quick Shuffle	111.Synthesis
26.Char	69.Reggae Shuffle	112.Feel
27.Samba_1	70.R&B	113.Accelerate
28.Samba_2	71.Reggae_1	114.Beach Night
29.Ubminimal	72.Reggae_2	115.Irish
30.8Bit_1	73.Reggae_3	116.Tarantella
31.8Bit_2	74.Salsa_1	117.Big band
32.16Bit_1	75.Salsa_2	118.Dan
33.16bit_2	76.Salsa_3	119.Fusion
34.Ballad_16T	77.Tecno_1	120.Horse
35.Country_16T	78.Tecno_2	121.Canon
36.Tango_1	79.Funky_1	122.Latin
37.Tango_2	80.Funky_2	123.Mambo
38.Polka_1	81.Dixie_1	124.New age
39.Polka_2	82.Dixie_2	125.Slow rc
40.Pop Swing	83.Foxtrot_1	126.Soul
41.Easy Swing	84.Foxtrot_2	127.Twist
42.Soft Swing	85.R.roll_1	

Produttore: Shanghaimuxinmuyeyouxiangongsi **Indirizzo:**

Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Importato in AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122

 
Australia

Importato negli Stati Uniti: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place,
Rancho Cucamonga, CA 91730



E-CrossStu GmbH

Mainzer Landstr.69, 60329 Francoforte sul Meno.



YH CONSULENZA LIMITATA.

C/O YH Consulting Limited Ufficio 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX



Soporte técnico y certificado de garantía
electrónica www.vevor.com/support

Manual de usuario del piano plegable

Modelo: BX-11



 
Soporte técnico y certificado de garantía electrónica
www.vevor.com/support

Seguimos comprometidos a proporcionarle herramientas a precios competitivos.
"Ahorre a mitad de precio", "A mitad de precio" o cualquier otra expresión similar utilizada por nosotros solo representa una estimación de los ahorros que podría beneficiarse al comprar ciertas herramientas con nosotros en comparación con las principales marcas y no significa necesariamente cubrir todas las categorías de herramientas ofrecidas por nosotros. Le recordamos que, cuando realice un pedido con nosotros, verifique cuidadosamente si realmente está ahorrando la mitad en comparación con las principales marcas.

VEVOR[®]
TOUGH TOOLS, HALF PRICE

piano plegable

Modelo: BX-11

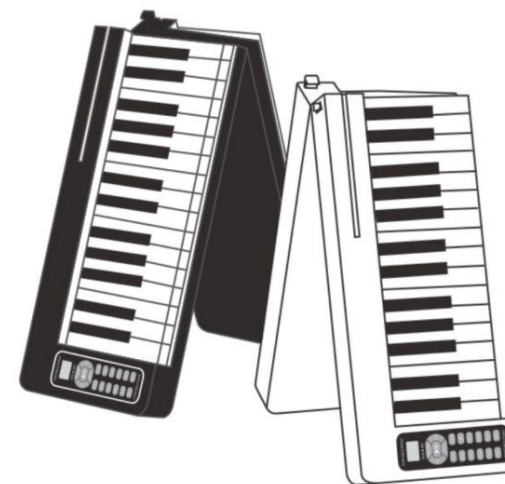

(La imagen es solo para referencia, consulte el objeto real)

¿NECESITAS AYUDA? ¡CONTÁCTENOS!

 
¿Tiene preguntas sobre el producto? ¿Necesita soporte técnico? No dude en contactarnos:

Soporte

técnico y certificado de garantía electrónica www.vevor.com/support

Estas son las instrucciones originales; lea atentamente todas las instrucciones del manual antes de operar. VEVOR se reserva una interpretación clara de nuestro manual de usuario. La apariencia del producto estará sujeta al producto que recibió. Perdone que no le informaremos nuevamente si hay actualizaciones de tecnología o software en nuestro producto.

Panel Function Diagram:

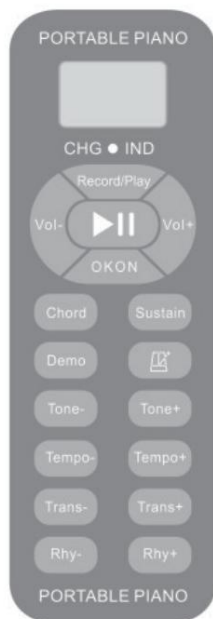


Please charge before use!

Charging Indicator:

1. TYPE-C interface
2. It is not applicable to PD fast charging line
3. The charging indicator is red and turns green when it is full
4. Battery: charging time is about 5H, please charge it more than 6H for the first time
5. Power adapter: 5V/2A

 Interface:

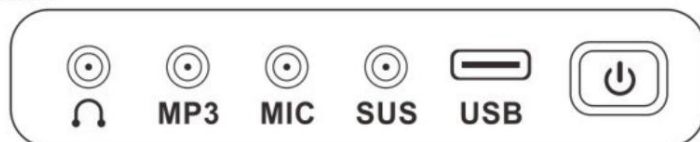

SUS : Sustain pedal
 MP3 : MP3
 MIC : Microphone
 : Headphone / Speaker
 USB : TYPE-C charging / MIDI interface

Function

Volume adjustment, Start/Stop, Record/Play, Teaching OKON, Chord, Sustain, Demo, Metronome, Tempo, Transpose, Rhythm

Volume

Press Vol- or Vol+ to adjust the volume, the default boot volume is 12 (from 00-15).

Start/ Stop

Press Start to enter the rhythm playing mode.
 The sequence number will be displayed on the display.

Record/ Play (long press is Record, short press is Play)

1. Press and hold the Record/ Play button, At this time, play the keyboard to record MIDI signals.
2. Short press the Record/ Play button, the last recorded signal can be played.

Learn

1. Press OKON button, cyclic switching, Teaching A → Teaching B → Off → Teaching A → ...
2. Teaching A: Play accompaniment, playing any key can play the main melody of the demo song.
3. Teaching B: Play accompaniment, the user press the right keys to enter the next note.
 If the user does not press the right keys, they pause until they press the right keys to the next note.
4. Teaching songs: The current demo which is playing. Select the teaching songs by switching Demo.

Chord

1. Press Chord button, cyclic switching, SINGLE → FINGERS → Off → SINGLE → ...
2. During the playing of rhythm, the system enters the chord mode.
 Chord function: Press the key in the area C3~F4# to play the chords that match the rhythm, and the tone of the chords changes with the pitch of the hard.

Sustain

1. Press Sustain button to open the sustain function, then press off.
2. Turn on the sustain function, and make the tone produce the effect of continuance in performance.

Demo

1. Short press Demo button to play the demo. Press the demo button again to next song.
 (Demo from 000-020)
2. Long press the Demo button to select the demo from 000-020 quickly.
3. Press to stop the demo.

Metronome

Press and the metronome will display the beat selection of 1/4, 2/4, 3/4 and 4/4.

Tone

1. Press Tone- or Tone+ to select the tone from 000-127 (see the attached tone table).
The serial number of the adjusted tone will be displayed on the screen.
2. Long press Tone- or Tone+ to select the tone quickly.
3. Press Tone- and Tone+ at the same time to move back to tone 000 and play the piano tone.

Tempo

1. Press Tempo- or Tempo+ to adjust tempo, the default tempo is 241 level (from 40-280 level).
2. Long press Tempo- or Tempo+ to adjust the tempo quickly.
3. Press Tempo- or Tempo+ at the same time to move back to 8 level.

Transpose

1. Press Trans+ or Trans- to select rhythm. The shift can be selected from level -6 to +6, and the default level is +0.
2. Long press Trans+ or Trans- to quickly switch it.
3. Press and hold the Trans+ or Trans- at the same time to move back to level +0.

Rhythm

1. Press Rhy+ or Rhy- to select rhythm. 000-127 rhythms (please refer to the attached rhythm list),
The sequence number will be displayed on the display.
2. Long press Rhy+ or Rhy- to adjust the rhythm quickly.
3. Press and hold the Rhy+ or Rhy- at the same time to move back to Rhy 0 and play the Rhy 0.

Sleep Mode

In the default mode, when the piano is not played after 10 minutes, the electric piano will turn off. Then you need to press the ON/OFF button to restart the piano again.

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

iPhone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the iPhone.
2. Open the POPiano App after turning on the bluetooth of the iPhone, select any song, and choose to start playing after entering.
3. Click on the upper right of the iPhone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
4. After confirming bluetooth connection, the icon is displayed as blue check mark .

GarageBand connection:

1. Open GarageBand App,
2. Turn on bluetooth on your phone.
3. Open GarageBand App and click the Settings icon in the upper right corner of the screen.
4. Connect the piano's bluetooth through the: Song Settings - Advanced - Bluetooth MIDI Devices.

Perfect Piano and PianoBar connection:

1. Download the Perfect Piano App and PianoBar.
2. Turn on bluetooth on your phone.
3. First connect the GarageBand App. When them is connect successfully, then open the Perfect Piano App and PianoBar can be used directly.

Android phone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the mobile phone.
2. Turn on the bluetooth function, some phones need to turn on the phone location function.
3. Open the POPiano App to select any song, and choose to start playing after entering.
4. Click on the upper right of the mobile phone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
5. After confirming bluetooth connection, the icon is displayed as blue check mark .

Audio Bluetooth playback

Open the phone Settings to search for Bluetooth name: GZUT-MUSIC.

After the connection is successful, the phone music is played, and the music is emitted from the piano.

■ Demo

0.Castle in the Sky	11.Milk Song
1.Song of Joy	12.A comme amour
2.Little Stars	13.Les premiers sourires de Vanessa
3.By Alice	14.Snowdreams
4.Dancing Girl	15.Bandari
5.Deskmate	16.Edelweiss
6.Ten Years	17.Dance of fireflie
7.Colourful Clouds Chasing The Moon	18.My soul
8.In My Song	19.Croatian Rhapsody
9.CrystalLake	20.CSIKOS POST
10.Green Sleeves	

■ List Of Tone

Piano	28.Electric Guitar (muted)
0.Piano 1	29.Overdriven Guitar
1.Piano 2	30.Distortion Guitar
2.Piano 3	31.Guitar Harmonics
3.Honky-Tonk Piano	Bass
4.Rhodes Piano	32.Acoustic Bass
5.Chorused Piano	33.Electric Bass(finger)
6.Harpsichord	34.Electric Bass(pick)
7.Clavinet	35.Fretless Bass
Percussion Instrument	36.Slap Bass 1
8.Celesta	37.Slap Bass 2
9.Glockenspiel	38.Synth Bass 1
10.Music Box	39.Synth Bass 2
11.Vibraphone	Strings
12.Marimba	40.Violin
13.Xylophone	41.Viola
14.Tubular Bells	42.Cello
15.Santur	43.Contrabass
Organ	44.Tremolo Strings
16.Hammond Organ	45.Pizzicato Strings
17.Percussive Organ	46.Orchestral Harp
18.Rock Organ	47.Timpani
19.Church Organ	Ensemble
20.Reed Organ	48.String Ensemble 1
21.Accordion	49.String Ensemble 2
22.Harmonica	50.SynthStrings 1
23.Bandoneon	51.SynthStrings 2
Guitar	52.Choir Aahs
24.Acoustic Guitar (nylon)	53.Voice Oohs
25.Acoustic Guitar(steel)	54.Synth Voice
26.Electric Guitar (jazz)	55.Orchestra Hit
27.Electric Guitar (clean)	Brass Instrument

56.Trumpet	92.Pad 5 (bowed)
57.Trombone	93.Pad 6 (metallic)
58.Tuba	94.Pad 7 (halo)
59.Muted Trumpet	95.Pad 8 (sweep)
60.French Horn	Fx
61.Brass Section	96.FX 1 (rain)
62.Synth Brass 1	97.FX 2 (soundtrack)
63.Synth Brass 2	98.FX 3 (crystal)
Reeds Instrument	99.FX 4 (atmosphere)
64.Soprano Sax	100.FX 5 (brightness)
65.Alto Sax	101.FX 6 (goblins)
66.Tenor Sax	102.FX 7 (echoes)
67.Baritone Sax	103.FX 8 (sci-fi)
68.Oboe	National Instrument
69.English Horn	104.Sitar
70.Bassoon	105.Banjo
71.Clarinet	106.Shamisen
Tongue	107.Koto
72.Piccolo	108.alimba
73.Flute	109.Bagpipe
74.Recorder	110.Fiddle
75.Pan Flute	111.Shanai
76.Bottle Blow	Percussion
77.Skakuhachi	112.Tinkle Bell
78.Whistle	113.Agogo
79.Ocarina	114.Steel Drums
Soft Leads	115.Woodblock
80.Lead 1 (square)	116.Taiko Drum
81.Lead 2 (sawtooth)	117.Melodic Tom
82.Lead 3 (calliope lead)	118.Synth Drum
83.Lead 4 (chiff lead)	119.Reverse Cymbal
84.Lead 5 (charang)	FxPhone
85.Lead 6 (voice)	120.Guitar Fret Noise
86.Lead 7 (fifths)	121.Breath Noise
87.Lead 8 (bass+lead)	122.Seashore
Synth Pad	123.Bird Tweet
88.Pad 1 (new age)	124.Telephone Ring
89.Pad 2 (warm)	125.Helicopter
90.Pad 3 (polysynth)	126.Applause
91.Pad 4 (choir)	127.Gun shot

■ List Of Rhythm

0.Beguines Wing	43.Rock_1	86.R.roll_2
1.Beguine_2	44.Rock_2	87.Fast Beat
2.Beguine_3	45.Rock_3	88.Quick Beat
3.Pop hit	46.Airy Rock	89.Smooth Beat
4.Pop	47.Heart Rock	90.Square Beat
5.Pop Malay	48.Rock & Roll	91.Euro Beat
6.Bossa nova	49.Urban Rock	92.Alpha Dance
7.Disco_1	50.Ballad	93.Beta Dance
8.Disco_2	51.Jazz Ballad	94.Dream Dance
9.Blue grass disco	52.C.Ballad	95.Dance_1
10.Waltzl_1	53.J.Ballad	96.Dance_2
11.Waltzl_2	54.60s Slow Ballad	97.Dance_3
12.True ballad waltz	55.Piano Ballad	98.RAP
13.Bossa Waltz	56.50s Ballad	99.The Country
14.Easy Waltz	57.Snake Base	100.Country Shuffle
15.Shuffle Waltz	58.Happy Blues	101.Electric Keys
16.Reggae Waltz	59.Old Blues	102.Dark Keys
17.Rumba Waltz	60.Blue Gras	103.Easy Walk
18.March_1	61.Boodie_1	104.Destiny
19.March_2	62.Boodie_2	105.Comedy
20.Rumba_1	63.Boodie_3	106.Drive
21.Rumba_2	64.Shuffle_1	107.Liquid Nova
22.Slow_1	65.Shuffle_2	108.Indonesian folk
23.Slow_2	66.Dream Shuffle	109.Absolute Music
24.Disco cha cha	67.Country Shuffle	110.Jamaica
25.Guala cha	68.Quick Shuffle	111.Synthesis
26.Char	69.Reggae Shuffle	112.Feel
27.Samba_1	70.R&B	113.Accelerate
28.Samba_2	71.Reggae_1	114.Beach Night
29.Ubminimal	72.Reggae_2	115.Irish
30.8Bit_1	73.Reggae_3	116.Tarantella
31.8Bit_2	74.Salsa_1	117.Big band
32.16Bit_1	75.Salsa_2	118.Dan
33.16bit_2	76.Salsa_3	119.Fusion
34.Ballad_16T	77.Tecno_1	120.Horse
35.Country_16T	78.Tecno_2	121.Canon
36.Tango_1	79.Funky_1	122.Latin
37.Tango_2	80.Funky_2	123.Mambo
38.Polka_1	81.Dixie_1	124.New age
39.Polka_2	82.Dixie_2	125.Slow rc
40.Pop Swing	83.Foxtrot_1	126.Soul
41.Easy Swing	84.Foxtrot_2	127.Twist
42.Soft Swing	85.R.roll_1	

Fabricante: Shanghaimuxinmuyeyouxiangongsi Dirección:

Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Importado a AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122

Australia

Importado a EE. UU.: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho

Cucamonga, CA 91730



E-CrossStu GmbH

Mainzer Landstr.69, 60329 Fráncfort del Meno.



YH CONSULTING LIMITADO.

C/O YH Consulting Limited Oficina 147, Casa Centurión,
London Road, Staines upon Thames, Surrey, TW18 4AX



Wsparcie techniczne i certyfikat e-gwarancji
www.vevor.com/support

Instrukcja obsługi składanego pianina

 
Model: BX-11



Wsparcie techniczne i certyfikat e-gwarancji
www.vevor.com/support

Nadal dokładamy wszelkich starań, aby zapewnić Państwu narzędzia w konkurencyjnej cenie. „Zaoszczędź o połowę”, „o połowę ceny” lub inne podobne wyrażenia używane przez nas przedstawiają jedynie szacunkową oszczędność, jaką możesz zyskać kupując u nas określone narzędzia w porównaniu z głównymi najlepszymi markami i niekoniecznie oznaczają uwzględnienie wszystkich kategorii oferowanych narzędzi przez nas. Przypominamy, aby podczas składania zamówienia u nas dokładnie sprawdzić, czy faktycznie oszczędzasz połowę w porównaniu z czołowymi markami.

Model: BX-11

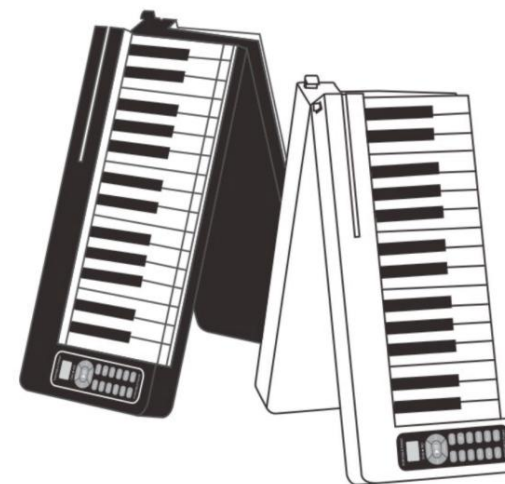

(Zdjęcie ma charakter wyłącznie poglądowy, proszę zapoznać się z rzeczywistym obiektem)

 
POTRZEBUJĘ POMOCY? SKONTAKTUJ SIĘ Z NAMII!

Masz pytania dotyczące produktu? Potrzebujesz wsparcia technicznego? Prosimy o kontakt:
Wsparcie

techniczne i certyfikat e-gwarancji www.vevor.com/support

To jest oryginalna instrukcja. Przed przystąpieniem do obsługi prosimy o dokładne zapoznanie się ze wszystkimi instrukcjami. VEVOR zastrzega sobie jasną interpretację naszej instrukcji obsługi. Wygląd produktu zależy od produktu, który otrzymałeś. Proszę wybaczyć nam, że nie będziemy ponownie informować Państwa, jeśli pojawią się jakieś aktualizacje technologii lub oprogramowania naszego produktu.

Panel Function Diagram:

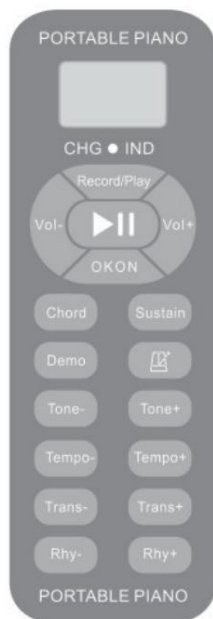


Please charge before use!

Charging Indicator:

1. TYPE-C interface
2. It is not applicable to PD fast charging line
3. The charging indicator is red and turns green when it is full
4. Battery: charging time is about 5H, please charge it more than 6H for the first time
5. Power adapter: 5V/2A

 Interface:

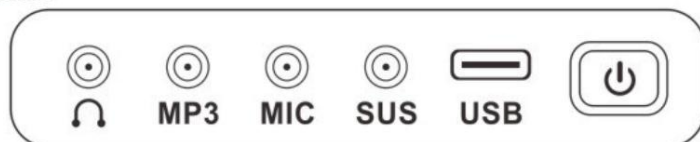

SUS : Sustain pedal
 MP3 : MP3
 MIC : Microphone
 : Headphone / Speaker
 USB : TYPE-C charging / MIDI interface

Function

Volume adjustment, Start/Stop, Record/Play, Teaching OKON, Chord, Sustain, Demo, Metronome, Tempo, Transpose, Rhythm

Volume

Press Vol- or Vol+ to adjust the volume, the default boot volume is 12 (from 00-15).

Start/ Stop

Press Start to enter the rhythm playing mode.
 The sequence number will be displayed on the display.

Record/ Play (long press is Record, short press is Play)

1. Press and hold the Record/ Play button, At this time, play the keyboard to record MIDI signals.
2. Short press the Record/ Play button, the last recorded signal can be played.

Learn

1. Press OKON button, cyclic switching, Teaching A → Teaching B → Off → Teaching A → ...
2. Teaching A: Play accompaniment, playing any key can play the main melody of the demo song.
3. Teaching B: Play accompaniment, the user press the right keys to enter the next note.
 If the user does not press the right keys, they pause until they press the right keys to the next note.
4. Teaching songs: The current demo which is playing. Select the teaching songs by switching Demo.

Chord

1. Press Chord button, cyclic switching, SINGLE → FINGERS → Off → SINGLE → ...
2. During the playing of rhythm, the system enters the chord mode.
 Chord function: Press the key in the area C3~F4# to play the chords that match the rhythm, and the tone of the chords changes with the pitch of the hard.

Sustain

1. Press Sustain button to open the sustain function, then press off.
2. Turn on the sustain function, and make the tone produce the effect of continuance in performance.

Demo

1. Short press Demo button to play the demo. Press the demo button again to next song.
 (Demo from 000-020)
2. Long press the Demo button to select the demo from 000-020 quickly.
3. Press to stop the demo.

Metronome

Press and the metronome will display the beat selection of 1/4, 2/4, 3/4 and 4/4.

Tone

1. Press Tone- or Tone+ to select the tone from 000-127 (see the attached tone table).
The serial number of the adjusted tone will be displayed on the screen.
2. Long press Tone- or Tone+ to select the tone quickly.
3. Press Tone- and Tone+ at the same time to move back to tone 000 and play the piano tone.

Tempo

1. Press Tempo- or Tempo+ to adjust tempo, the default tempo is 241 level (from 40-280 level).
2. Long press Tempo- or Tempo+ to adjust the tempo quickly.
3. Press Tempo- or Tempo+ at the same time to move back to 8 level.

Transpose

1. Press Trans+ or Trans- to select rhythm. The shift can be selected from level -6 to +6, and the default level is +0.
2. Long press Trans+ or Trans- to quickly switch it.
3. Press and hold the Trans+ or Trans- at the same time to move back to level +0.

Rhythm

1. Press Rhy+ or Rhy- to select rhythm. 000-127 rhythms (please refer to the attached rhythm list),
The sequence number will be displayed on the display.
2. Long press Rhy+ or Rhy- to adjust the rhythm quickly.
3. Press and hold the Rhy+ or Rhy- at the same time to move back to Rhy 0 and play the Rhy 0.

Sleep Mode

In the default mode, when the piano is not played after 10 minutes, the electric piano will turn off. Then you need to press the ON/OFF button to restart the piano again.

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

iPhone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the iPhone.
2. Open the POPiano App after turning on the bluetooth of the iPhone, select any song, and choose to start playing after entering.
3. Click on the upper right of the iPhone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
4. After confirming bluetooth connection, the icon is displayed as blue check mark .

GarageBand connection:

1. Open GarageBand App,
2. Turn on bluetooth on your phone.
3. Open GarageBand App and click the Settings icon in the upper right corner of the screen.
4. Connect the piano's bluetooth through the: Song Settings - Advanced - Bluetooth MIDI Devices.

Perfect Piano and PianoBar connection:

1. Download the Perfect Piano App and PianoBar.
2. Turn on bluetooth on your phone.
3. First connect the GarageBand App. When them is connect successfully, then open the Perfect Piano App and PianoBar can be used directly.

Android phone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the mobile phone.
2. Turn on the bluetooth function, some phones need to turn on the phone location function.
3. Open the POPiano App to select any song, and choose to start playing after entering.
4. Click on the upper right of the mobile phone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
5. After confirming bluetooth connection, the icon is displayed as blue check mark .

Audio Bluetooth playback

Open the phone Settings to search for Bluetooth name: GZUT-MUSIC.

After the connection is successful, the phone music is played, and the music is emitted from the piano.

■ Demo

0.Castle in the Sky	11.Milk Song
1.Song of Joy	12.A comme amour
2.Little Stars	13.Les premiers sourires de Vanessa
3.By Alice	14.Snowdreams
4.Dancing Girl	15.Bandari
5.Deskmate	16.Edelweiss
6.Ten Years	17.Dance of fireflie
7.Colourful Clouds Chasing The Moon	18.My soul
8.In My Song	19.Croatian Rhapsody
9.CrystalLake	20.CSIKOS POST
10.Green Sleeves	

■ List Of Tone

Piano	28.Electric Guitar (muted)
0.Piano 1	29.Overdriven Guitar
1.Piano 2	30.Distortion Guitar
2.Piano 3	31.Guitar Harmonics
3.Honky-Tonk Piano	Bass
4.Rhodes Piano	32.Acoustic Bass
5.Chorused Piano	33.Electric Bass(finger)
6.Harpsichord	34.Electric Bass(pick)
7.Clavinet	35.Fretless Bass
Percussion Instrument	36.Slap Bass 1
8.Celesta	37.Slap Bass 2
9.Glockenspiel	38.Synth Bass 1
10.Music Box	39.Synth Bass 2
11.Vibraphone	Strings
12.Marimba	40.Violin
13.Xylophone	41.Viola
14.Tubular Bells	42.Cello
15.Santur	43.Contrabass
Organ	44.Tremolo Strings
16.Hammond Organ	45.Pizzicato Strings
17.Percussive Organ	46.Orchestral Harp
18.Rock Organ	47.Timpani
19.Church Organ	Ensemble
20.Reed Organ	48.String Ensemble 1
21.Accordion	49.String Ensemble 2
22.Harmonica	50.SynthStrings 1
23.Bandoneon	51.SynthStrings 2
Guitar	52.Choir Aahs
24.Acoustic Guitar (nylon)	53.Voice Oohs
25.Acoustic Guitar(steel)	54.Synth Voice
26.Electric Guitar (jazz)	55.Orchestra Hit
27.Electric Guitar (clean)	Brass Instrument

56.Trumpet	92.Pad 5 (bowed)
57.Trombone	93.Pad 6 (metallic)
58.Tuba	94.Pad 7 (halo)
59.Muted Trumpet	95.Pad 8 (sweep)
60.French Horn	Fx
61.Brass Section	96.FX 1 (rain)
62.Synth Brass 1	97.FX 2 (soundtrack)
63.Synth Brass 2	98.FX 3 (crystal)
Reeds Instrument	99.FX 4 (atmosphere)
64.Soprano Sax	100.FX 5 (brightness)
65.Alto Sax	101.FX 6 (goblins)
66.Tenor Sax	102.FX 7 (echoes)
67.Baritone Sax	103.FX 8 (sci-fi)
68.Oboe	National Instrument
69.English Horn	104.Sitar
70.Bassoon	105.Banjo
71.Clarinet	106.Shamisen
Tongue	107.Koto
72.Piccolo	108.alimba
73.Flute	109.Bagpipe
74.Recorder	110.Fiddle
75.Pan Flute	111.Shanai
76.Bottle Blow	Percussion
77.Skakuhachi	112.Tinkle Bell
78.Whistle	113.Agogo
79.Ocarina	114.Steel Drums
Soft Leads	115.Woodblock
80.Lead 1 (square)	116.Taiko Drum
81.Lead 2 (sawtooth)	117.Melodic Tom
82.Lead 3 (calliope lead)	118.Synth Drum
83.Lead 4 (chiff lead)	119.Reverse Cymbal
84.Lead 5 (charang)	FxPhone
85.Lead 6 (voice)	120.Guitar Fret Noise
86.Lead 7 (fifths)	121.Breath Noise
87.Lead 8 (bass+lead)	122.Seashore
Synth Pad	123.Bird Tweet
88.Pad 1 (new age)	124.Telephone Ring
89.Pad 2 (warm)	125.Helicopter
90.Pad 3 (polysynth)	126.Applause
91.Pad 4 (choir)	127.Gun shot

■ List Of Rhythm


0.Beguines Wing	43.Rock_1	86.R.roll_2
1.Beguine_2	44.Rock_2	87.Fast Beat
2.Beguine_3	45.Rock_3	88.Quick Beat
3.Pop hit	46.Airy Rock	89.Smooth Beat
4.Pop	47.Heart Rock	90.Square Beat
5.Pop Malay	48.Rock & Roll	91.Euro Beat
6.Bossa nova	49.Urban Rock	92.Alpha Dance
7.Disco_1	50.Ballad	93.Beta Dance
8.Disco_2	51.Jazz Ballad	94.Dream Dance
9.Blue grass disco	52.C.Ballad	95.Dance_1
10.Waltzl_1	53.J.Ballad	96.Dance_2
11.Waltzl_2	54.60s Slow Ballad	97.Dance_3
12.True ballad waltz	55.Piano Ballad	98.RAP
13.Bossa Waltz	56.50s Ballad	99.The Country
14.Easy Waltz	57.Snake Base	100.Country Shuffle
15.Shuffle Waltz	58.Happy Blues	101.Electric Keys
16.Reggae Waltz	59.Old Blues	102.Dark Keys
17.Rumba Waltz	60.Blue Gras	103.Easy Walk
18.March_1	61.Boodie_1	104.Destiny
19.March_2	62.Boodie_2	105.Comedy
20.Rumba_1	63.Boodie_3	106.Drive
21.Rumba_2	64.Shuffle_1	107.Liquid Nova
22.Slow_1	65.Shuffle_2	108.Indonesian folk
23.Slow_2	66.Dream Shuffle	109.Absolute Music
24.Disco cha cha	67.Country Shuffle	110.Jamaica
25.Guala cha	68.Quick Shuffle	111.Synthesis
26.Char	69.Reggae Shuffle	112.Feel
27.Samba_1	70.R&B	113.Accelerate
28.Samba_2	71.Reggae_1	114.Beach Night
29.Ubminimal	72.Reggae_2	115.Irish
30.8Bit_1	73.Reggae_3	116.Tarantella
31.8Bit_2	74.Salsa_1	117.Big band
32.16Bit_1	75.Salsa_2	118.Dan
33.16bit_2	76.Salsa_3	119.Fusion
34.Ballad_16T	77.Tecno_1	120.Horse
35.Country_16T	78.Tecno_2	121.Canon
36.Tango_1	79.Funky_1	122.Latin
37.Tango_2	80.Funky_2	123.Mambo
38.Polka_1	81.Dixie_1	124.New age
39.Polka_2	82.Dixie_2	125.Slow rc
40.Pop Swing	83.Foxtrot_1	126.Soul
41.Easy Swing	84.Foxtrot_2	127.Twist
42.Soft Swing	85.R.roll_1	

Producent: Shanghai muxinmuyeyouxiangongsi Adres:

Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, szanghaj 200000 CN.

Import do AUS: SIHAO PTY LTD, 1 ROKEVA STREET EASTWOOD NSW 2122 Australia

 Import do USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730



E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt nad Menem.



YH CONSULTING SPÓŁKA Z OGRANICZONĄ ODPOWIEDZIALNOŚCIĄ

C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX



Technische ondersteuning en e-garantiecertificaat
www.vevor.com/support

Handleiding voor vouwpiano

 
Model: BX-11



Technische ondersteuning en e-garantiecertificaat
www.vevor.com/support

We blijven ons inzetten om u gereedschap tegen een concurrerende prijs te bieden.
"Bespaar de helft", "Halve prijs" of andere soortgelijke uitdrukkingen die door ons worden gebruikt vertegenwoordigt slechts een schatting van de besparingen die u zou kunnen profiteren als u bepaalde gereedschappen bij ons koopt in vergelijking met de grote topmerken en betekent niet noodzakelijkerwijs dat deze alle categorieën van aangeboden gereedschappen omvatten door ons. Wij verzoeken u vriendelijk om bij het plaatsen van een bestelling bij ons goed na te gaan of u daadwerkelijk de helft bespaart in vergelijking met de grote topmerken.

Model: BX-11

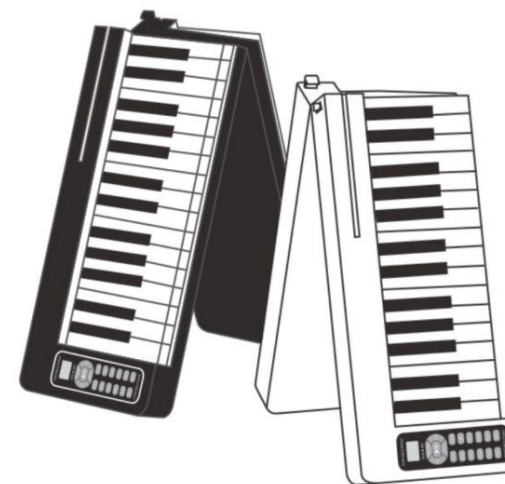

(De afbeelding is alleen ter referentie, raadpleeg het werkelijke object)

HULP NODIG? NEEM CONTACT MET ONS OP!

 
Heeft u productvragen? Technische ondersteuning nodig? Neem gerust contact met ons op:

Technische

ondersteuning en e-garantiecertificaat www.vevor.com/support

Dit is de originele instructie. Lees alle handleidingen zorgvuldig door voordat u ermee aan de slag gaat. VEVOR behoudt zich een duidelijke interpretatie van onze gebruikershandleiding voor. Het uiterlijk van het product is afhankelijk van het product dat u heeft ontvangen. Vergeef ons alstublieft dat we u niet opnieuw informeren als er technologie- of software-updates zijn voor ons product.

Panel Function Diagram:

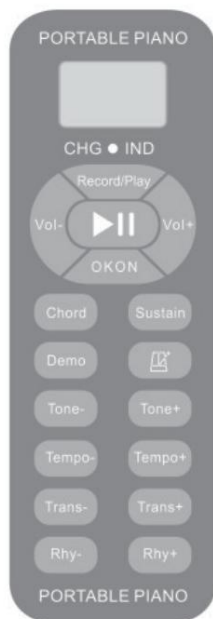


Please charge before use!

Charging Indicator:

1. TYPE-C interface
2. It is not applicable to PD fast charging line
3. The charging indicator is red and turns green when it is full
4. Battery: charging time is about 5H, please charge it more than 6H for the first time
5. Power adapter: 5V/2A

 Interface:

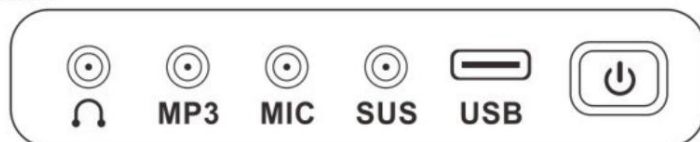

SUS : Sustain pedal
 MP3 : MP3
 MIC : Microphone
 : Headphone / Speaker
 USB : TYPE-C charging / MIDI interface

Function

Volume adjustment, Start/Stop, Record/Play, Teaching OKON, Chord, Sustain, Demo, Metronome, Tempo, Transpose, Rhythm

Volume

Press Vol- or Vol+ to adjust the volume, the default boot volume is 12 (from 00-15).

Start/ Stop

Press Start to enter the rhythm playing mode.
 The sequence number will be displayed on the display.

Record/ Play (long press is Record, short press is Play)

1. Press and hold the Record/ Play button, At this time, play the keyboard to record MIDI signals.
2. Short press the Record/ Play button, the last recorded signal can be played.

Learn

1. Press OKON button, cyclic switching, Teaching A → Teaching B → Off → Teaching A → ...
2. Teaching A: Play accompaniment, playing any key can play the main melody of the demo song.
3. Teaching B: Play accompaniment, the user press the right keys to enter the next note.
 If the user does not press the right keys, they pause until they press the right keys to the next note.
4. Teaching songs: The current demo which is playing. Select the teaching songs by switching Demo.

Chord

1. Press Chord button, cyclic switching, SINGLE → FINGERS → Off → SINGLE → ...
2. During the playing of rhythm, the system enters the chord mode.
 Chord function: Press the key in the area C3~F4# to play the chords that match the rhythm, and the tone of the chords changes with the pitch of the hard.

Sustain

1. Press Sustain button to open the sustain function, then press off.
2. Turn on the sustain function, and make the tone produce the effect of continuance in performance.

Demo

1. Short press Demo button to play the demo. Press the demo button again to next song.
 (Demo from 000-020)
2. Long press the Demo button to select the demo from 000-020 quickly.
3. Press to stop the demo.

Metronome

Press and the metronome will display the beat selection of 1/4, 2/4, 3/4 and 4/4.

Tone

1. Press Tone- or Tone+ to select the tone from 000-127 (see the attached tone table).
The serial number of the adjusted tone will be displayed on the screen.
2. Long press Tone- or Tone+ to select the tone quickly.
3. Press Tone- and Tone+ at the same time to move back to tone 000 and play the piano tone.

Tempo

1. Press Tempo- or Tempo+ to adjust tempo, the default tempo is 241 level (from 40-280 level).
2. Long press Tempo- or Tempo+ to adjust the tempo quickly.
3. Press Tempo- or Tempo+ at the same time to move back to 8 level.

Transpose

1. Press Trans+ or Trans- to select rhythm. The shift can be selected from level -6 to +6, and the default level is +0.
2. Long press Trans+ or Trans- to quickly switch it.
3. Press and hold the Trans+ or Trans- at the same time to move back to level +0.

Rhythm

1. Press Rhy+ or Rhy- to select rhythm. 000-127 rhythms (please refer to the attached rhythm list),
The sequence number will be displayed on the display.
2. Long press Rhy+ or Rhy- to adjust the rhythm quickly.
3. Press and hold the Rhy+ or Rhy- at the same time to move back to Rhy 0 and play the Rhy 0.

Sleep Mode

In the default mode, when the piano is not played after 10 minutes, the electric piano will turn off. Then you need to press the ON/OFF button to restart the piano again.

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

iPhone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the iPhone.
2. Open the POPiano App after turning on the bluetooth of the iPhone, select any song, and choose to start playing after entering.
3. Click on the upper right of the iPhone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
4. After confirming bluetooth connection, the icon is displayed as blue check mark .

GarageBand connection:

1. Open GarageBand App,
2. Turn on bluetooth on your phone.
3. Open GarageBand App and click the Settings icon in the upper right corner of the screen.
4. Connect the piano's bluetooth through the: Song Settings - Advanced - Bluetooth MIDI Devices.

Perfect Piano and PianoBar connection:

1. Download the Perfect Piano App and PianoBar.
2. Turn on bluetooth on your phone.
3. First connect the GarageBand App. When them is connect successfully, then open the Perfect Piano App and PianoBar can be used directly.

Android phone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the mobile phone.
2. Turn on the bluetooth function, some phones need to turn on the phone location function.
3. Open the POPiano App to select any song, and choose to start playing after entering.
4. Click on the upper right of the mobile phone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
5. After confirming bluetooth connection, the icon is displayed as blue check mark .

Audio Bluetooth playback

Open the phone Settings to search for Bluetooth name: GZUT-MUSIC.

After the connection is successful, the phone music is played, and the music is emitted from the piano.

■ Demo

0.Castle in the Sky	11.Milk Song
1.Song of Joy	12.A comme amour
2.Little Stars	13.Les premiers sourires de Vanessa
3.By Alice	14.Snowdreams
4.Dancing Girl	15.Bandari
5.Deskmate	16.Edelweiss
6.Ten Years	17.Dance of fireflie
7.Colourful Clouds Chasing The Moon	18.My soul
8.In My Song	19.Croatian Rhapsody
9.CrystalLake	20.CSIKOS POST
10.Green Sleeves	

■ List Of Tone

Piano	28.Electric Guitar (muted)
0.Piano 1	29.Overdriven Guitar
1.Piano 2	30.Distortion Guitar
2.Piano 3	31.Guitar Harmonics
3.Honky-Tonk Piano	Bass
4.Rhodes Piano	32.Acoustic Bass
5.Chorused Piano	33.Electric Bass(finger)
6.Harpsichord	34.Electric Bass(pick)
7.Clavinet	35.Fretless Bass
Percussion Instrument	36.Slap Bass 1
8.Celesta	37.Slap Bass 2
9.Glockenspiel	38.Synth Bass 1
10.Music Box	39.Synth Bass 2
11.Vibraphone	Strings
12.Marimba	40.Violin
13.Xylophone	41.Viola
14.Tubular Bells	42.Cello
15.Santur	43.Contrabass
Organ	44.Tremolo Strings
16.Hammond Organ	45.Pizzicato Strings
17.Percussive Organ	46.Orchestral Harp
18.Rock Organ	47.Timpani
19.Church Organ	Ensemble
20.Reed Organ	48.String Ensemble 1
21.Accordion	49.String Ensemble 2
22.Harmonica	50.SynthStrings 1
23.Bandoneon	51.SynthStrings 2
Guitar	52.Choir Aahs
24.Acoustic Guitar (nylon)	53.Voice Oohs
25.Acoustic Guitar(steel)	54.Synth Voice
26.Electric Guitar (jazz)	55.Orchestra Hit
27.Electric Guitar (clean)	Brass Instrument

56.Trumpet	92.Pad 5 (bowed)
57.Trombone	93.Pad 6 (metallic)
58.Tuba	94.Pad 7 (halo)
59.Muted Trumpet	95.Pad 8 (sweep)
60.French Horn	Fx
61.Brass Section	96.FX 1 (rain)
62.Synth Brass 1	97.FX 2 (soundtrack)
63.Synth Brass 2	98.FX 3 (crystal)
Reeds Instrument	99.FX 4 (atmosphere)
64.Soprano Sax	100.FX 5 (brightness)
65.Alto Sax	101.FX 6 (goblins)
66.Tenor Sax	102.FX 7 (echoes)
67.Baritone Sax	103.FX 8 (sci-fi)
68.Oboe	National Instrument
69.English Horn	104.Sitar
70.Bassoon	105.Banjo
71.Clarinet	106.Shamisen
Tongue	107.Koto
72.Piccolo	108.alimba
73.Flute	109.Bagpipe
74.Recorder	110.Fiddle
75.Pan Flute	111.Shanai
76.Bottle Blow	Percussion
77.Skakuhachi	112.Tinkle Bell
78.Whistle	113.Agogo
79.Ocarina	114.Steel Drums
Soft Leads	115.Woodblock
80.Lead 1 (square)	116.Taiko Drum
81.Lead 2 (sawtooth)	117.Melodic Tom
82.Lead 3 (calliope lead)	118.Synth Drum
83.Lead 4 (chiff lead)	119.Reverse Cymbal
84.Lead 5 (charang)	FxPhone
85.Lead 6 (voice)	120.Guitar Fret Noise
86.Lead 7 (fifths)	121.Breath Noise
87.Lead 8 (bass+lead)	122.Seashore
Synth Pad	123.Bird Tweet
88.Pad 1 (new age)	124.Telephone Ring
89.Pad 2 (warm)	125.Helicopter
90.Pad 3 (polysynth)	126.Applause
91.Pad 4 (choir)	127.Gun shot

■ List Of Rhythm

0.Beguines Wing	43.Rock_1	86.R.roll_2
1.Beguine_2	44.Rock_2	87.Fast Beat
2.Beguine_3	45.Rock_3	88.Quick Beat
3.Pop hit	46.Airy Rock	89.Smooth Beat
4.Pop	47.Heart Rock	90.Square Beat
5.Pop Malay	48.Rock & Roll	91.Euro Beat
6.Bossa nova	49.Urban Rock	92.Alpha Dance
7.Disco_1	50.Ballad	93.Beta Dance
8.Disco_2	51.Jazz Ballad	94.Dream Dance
9.Blue grass disco	52.C.Ballad	95.Dance_1
10.Waltzl_1	53.J.Ballad	96.Dance_2
11.Waltzl_2	54.60s Slow Ballad	97.Dance_3
12.True ballad waltz	55.Piano Ballad	98.RAP
13.Bossa Waltz	56.50s Ballad	99.The Country
14.Easy Waltz	57.Snake Base	100.Country Shuffle
15.Shuffle Waltz	58.Happy Blues	101.Electric Keys
16.Reggae Waltz	59.Old Blues	102.Dark Keys
17.Rumba Waltz	60.Blue Gras	103.Easy Walk
18.March_1	61.Boodie_1	104.Destiny
19.March_2	62.Boodie_2	105.Comedy
20.Rumba_1	63.Boodie_3	106.Drive
21.Rumba_2	64.Shuffle_1	107.Liquid Nova
22.Slow_1	65.Shuffle_2	108.Indonesian folk
23.Slow_2	66.Dream Shuffle	109.Absolute Music
24.Disco cha cha	67.Country Shuffle	110.Jamaica
25.Guala cha	68.Quick Shuffle	111.Synthesis
26.Char	69.Reggae Shuffle	112.Feel
27.Samba_1	70.R&B	113.Accelerate
28.Samba_2	71.Reggae_1	114.Beach Night
29.Ubminimal	72.Reggae_2	115.Irish
30.8Bit_1	73.Reggae_3	116.Tarantella
31.8Bit_2	74.Salsa_1	117.Big band
32.16Bit_1	75.Salsa_2	118.Dan
33.16bit_2	76.Salsa_3	119.Fusion
34.Ballad_16T	77.Tecno_1	120.Horse
35.Country_16T	78.Tecno_2	121.Canon
36.Tango_1	79.Funky_1	122.Latin
37.Tango_2	80.Funky_2	123.Mambo
38.Polka_1	81.Dixie_1	124.New age
39.Polka_2	82.Dixie_2	125.Slow rc
40.Pop Swing	83.Foxtrot_1	126.Soul
41.Easy Swing	84.Foxtrot_2	127.Twist
42.Soft Swing	85.R.roll_1	

Fabrikant: Shanghaimuxinmuyeyouxiangongsi **Adres:**

Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Geïmporteerd naar AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW

2122 Australië

Geïmporteerd naar de VS: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place,

Rancho Cucamonga, CA 91730

EG REP

E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.

Britse REP

YH CONSULTING LIMITED.

C/O YH Consulting Limited Kantoor 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX



Teknisk support och e-garanticertifikat

www.vevor.com/support

Fällbart piano bruksanvisning

Modell: BX-11

 


Teknisk support och e-garanticertifikat

www.vevor.com/support

Vi fortsätter att vara engagerade i att ge dig verktyg till konkurrenskraftiga priser. "Spara hälften", "halva priset" eller andra liknande uttryck som används av oss representerar bara en uppskattning av besparingar du kan dra nytta av att köpa vissa verktyg hos oss jämfört med de stora toppmärkena och betyder inte nödvändigtvis att täcka alla kategorier av verktyg som erbjuds av oss. Du påminns vänligen om att noggrant kontrollera när du gör en beställning hos oss om du faktiskt sparar hälften i jämförelse med de främsta stora varumärkena.

Modell: BX-11

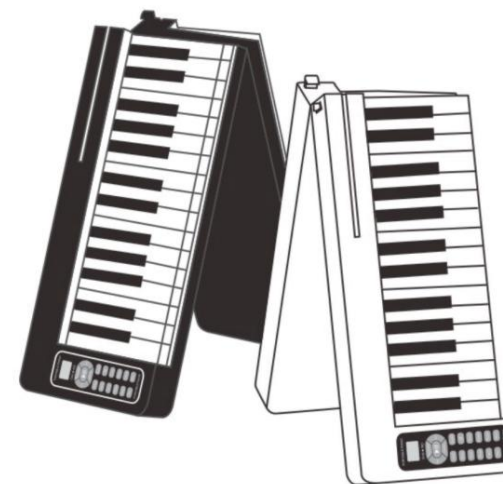


(Bilden är endast för referens, se det faktiska objektet)

BEHÖVS HJÄLP? KONTAKTA OSS!

Har du produktfrågor? Behöver du teknisk support? Kontakta oss gärna: **Teknisk support och e-garanticertifikat** www.vevor.com/support

Detta är den ursprungliga instruktionen, läs alla instruktioner noggrant innan du använder den. VEVOR reserverar sig för en tydlig tolkning av vår användarmanual. Utseendet på produkten är beroende av den produkt du fått. Ursäkta oss att vi inte kommer att informera dig igen om det finns någon teknik eller mjukvaruuppdateringar på vår produkt.

 Panel Function Diagram:

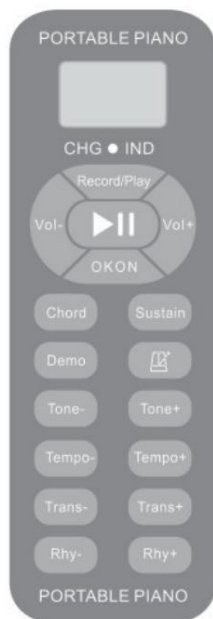


Please charge before use!

Charging Indicator:

1. TYPE-C interface
2. It is not applicable to PD fast charging line
3. The charging indicator is red and turns green when it is full
4. Battery: charging time is about 5H, please charge it more than 6H for the first time
5. Power adapter: 5V/2A

 Interface:

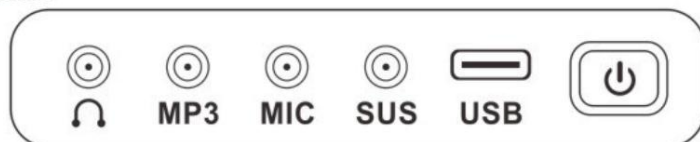

SUS : Sustain pedal
 MP3 : MP3
 MIC : Microphone
 : Headphone / Speaker
 USB : TYPE-C charging / MIDI interface

Function

Volume adjustment, Start/Stop, Record/Play, Teaching OKON, Chord, Sustain, Demo, Metronome, Tempo, Transpose, Rhythm

Volume

Press Vol- or Vol+ to adjust the volume, the default boot volume is 12 (from 00-15).

Start/ Stop

Press Start to enter the rhythm playing mode.
 The sequence number will be displayed on the display.

Record/ Play (long press is Record, short press is Play)

1. Press and hold the Record/ Play button, At this time, play the keyboard to record MIDI signals.
2. Short press the Record/ Play button, the last recorded signal can be played.

Learn

1. Press OKON button, cyclic switching, Teaching A → Teaching B → Off → Teaching A → ...
2. Teaching A: Play accompaniment, playing any key can play the main melody of the demo song.
3. Teaching B: Play accompaniment, the user press the right keys to enter the next note.
 If the user does not press the right keys, they pause until they press the right keys to the next note.
4. Teaching songs: The current demo which is playing. Select the teaching songs by switching Demo.

Chord

1. Press Chord button, cyclic switching, SINGLE → FINGERS → Off → SINGLE → ...
2. During the playing of rhythm, the system enters the chord mode.
 Chord function: Press the key in the area C3~F4# to play the chords that match the rhythm, and the tone of the chords changes with the pitch of the hard.

Sustain

1. Press Sustain button to open the sustain function, then press off.
2. Turn on the sustain function, and make the tone produce the effect of continuance in performance.

Demo

1. Short press Demo button to play the demo. Press the demo button again to next song.
 (Demo from 000-020)
2. Long press the Demo button to select the demo from 000-020 quickly.
3. Press to stop the demo.

Metronome

Press and the metronome will display the beat selection of 1/4, 2/4, 3/4 and 4/4.

Tone

1. Press Tone- or Tone+ to select the tone from 000-127 (see the attached tone table).
The serial number of the adjusted tone will be displayed on the screen.
2. Long press Tone- or Tone+ to select the tone quickly.
3. Press Tone- and Tone+ at the same time to move back to tone 000 and play the piano tone.

Tempo

1. Press Tempo- or Tempo+ to adjust tempo, the default tempo is 241 level (from 40-280 level).
2. Long press Tempo- or Tempo+ to adjust the tempo quickly.
3. Press Tempo- or Tempo+ at the same time to move back to 8 level.

Transpose

1. Press Trans+ or Trans- to select rhythm. The shift can be selected from level -6 to +6, and the default level is +0.
2. Long press Trans+ or Trans- to quickly switch it.
3. Press and hold the Trans+ or Trans- at the same time to move back to level +0.

Rhythm

1. Press Rhy+ or Rhy- to select rhythm. 000-127 rhythms (please refer to the attached rhythm list),
The sequence number will be displayed on the display.
2. Long press Rhy+ or Rhy- to adjust the rhythm quickly.
3. Press and hold the Rhy+ or Rhy- at the same time to move back to Rhy 0 and play the Rhy 0.

Sleep Mode

In the default mode, when the piano is not played after 10 minutes, the electric piano will turn off. Then you need to press the ON/OFF button to restart the piano again.

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

Dual Bluetooth function:

It can connect App bluetooth & Audio bluetooth.

APP Bluetooth (Bluetooth Name:GZUT-MIDI)

iPhone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the iPhone.
2. Open the POPiano App after turning on the bluetooth of the iPhone, select any song, and choose to start playing after entering.
3. Click on the upper right of the iPhone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
4. After confirming bluetooth connection, the icon is displayed as blue check mark .

GarageBand connection:

1. Open GarageBand App,
2. Turn on bluetooth on your phone.
3. Open GarageBand App and click the Settings icon in the upper right corner of the screen.
4. Connect the piano's bluetooth through the: Song Settings - Advanced - Bluetooth MIDI Devices.

Perfect Piano and PianoBar connection:

1. Download the Perfect Piano App and PianoBar.
2. Turn on bluetooth on your phone.
3. First connect the GarageBand App. When them is connect successfully, then open the Perfect Piano App and PianoBar can be used directly.

Android phone connection:

POPiano connection:

1. Search and download POPiano APP from App store of the mobile phone.
2. Turn on the bluetooth function, some phones need to turn on the phone location function.
3. Open the POPiano App to select any song, and choose to start playing after entering.
4. Click on the upper right of the mobile phone screen , and then you can choose: connect to the piano through: BlueTooth - Confirmed, next - confirm to connect to the piano.
5. After confirming bluetooth connection, the icon is displayed as blue check mark .

Audio Bluetooth playback

Open the phone Settings to search for Bluetooth name: GZUT-MUSIC.

After the connection is successful, the phone music is played, and the music is emitted from the piano.

■ Demo

0.Castle in the Sky	11.Milk Song
1.Song of Joy	12.A comme amour
2.Little Stars	13.Les premiers sourires de Vanessa
3.By Alice	14.Snowdreams
4.Dancing Girl	15.Bandari
5.Deskmate	16.Edelweiss
6.Ten Years	17.Dance of fireflie
7.Colourful Clouds Chasing The Moon	18.My soul
8.In My Song	19.Croatian Rhapsody
9.CrystalLake	20.CSIKOS POST
10.Green Sleeves	

■ List Of Tone

Piano	28.Electric Guitar (muted)
0.Piano 1	29.Overdriven Guitar
1.Piano 2	30.Distortion Guitar
2.Piano 3	31.Guitar Harmonics
3.Honky-Tonk Piano	Bass
4.Rhodes Piano	32.Acoustic Bass
5.Chorused Piano	33.Electric Bass(finger)
6.Harpsichord	34.Electric Bass(pick)
7.Clavinet	35.Fretless Bass
Percussion Instrument	36.Slap Bass 1
8.Celesta	37.Slap Bass 2
9.Glockenspiel	38.Synth Bass 1
10.Music Box	39.Synth Bass 2
11.Vibraphone	Strings
12.Marimba	40.Violin
13.Xylophone	41.Viola
14.Tubular Bells	42.Cello
15.Santur	43.Contrabass
Organ	44.Tremolo Strings
16.Hammond Organ	45.Pizzicato Strings
17.Percussive Organ	46.Orchestral Harp
18.Rock Organ	47.Timpani
19.Church Organ	Ensemble
20.Reed Organ	48.String Ensemble 1
21.Accordion	49.String Ensemble 2
22.Harmonica	50.SynthStrings 1
23.Bandoneon	51.SynthStrings 2
Guitar	52.Choir Aahs
24.Acoustic Guitar (nylon)	53.Voice Oohs
25.Acoustic Guitar(steel)	54.Synth Voice
26.Electric Guitar (jazz)	55.Orchestra Hit
27.Electric Guitar (clean)	Brass Instrument

56.Trumpet	92.Pad 5 (bowed)
57.Trombone	93.Pad 6 (metallic)
58.Tuba	94.Pad 7 (halo)
59.Muted Trumpet	95.Pad 8 (sweep)
60.French Horn	Fx
61.Brass Section	96.FX 1 (rain)
62.Synth Brass 1	97.FX 2 (soundtrack)
63.Synth Brass 2	98.FX 3 (crystal)
Reeds Instrument	99.FX 4 (atmosphere)
64.Soprano Sax	100.FX 5 (brightness)
65.Alto Sax	101.FX 6 (goblins)
66.Tenor Sax	102.FX 7 (echoes)
67.Baritone Sax	103.FX 8 (sci-fi)
68.Oboe	National Instrument
69.English Horn	104.Sitar
70.Bassoon	105.Banjo
71.Clarinet	106.Shamisen
Tongue	107.Koto
72.Piccolo	108.alimba
73.Flute	109.Bagpipe
74.Recorder	110.Fiddle
75.Pan Flute	111.Shanai
76.Bottle Blow	Percussion
77.Skakuhachi	112.Tinkle Bell
78.Whistle	113.Agogo
79.Ocarina	114.Steel Drums
Soft Leads	115.Woodblock
80.Lead 1 (square)	116.Taiko Drum
81.Lead 2 (sawtooth)	117.Melodic Tom
82.Lead 3 (calliope lead)	118.Synth Drum
83.Lead 4 (chiff lead)	119.Reverse Cymbal
84.Lead 5 (charang)	FxPhone
85.Lead 6 (voice)	120.Guitar Fret Noise
86.Lead 7 (fifths)	121.Breath Noise
87.Lead 8 (bass+lead)	122.Seashore
Synth Pad	123.Bird Tweet
88.Pad 1 (new age)	124.Telephone Ring
89.Pad 2 (warm)	125.Helicopter
90.Pad 3 (polysynth)	126.Applause
91.Pad 4 (choir)	127.Gun shot

■ List Of Rhythm

0.Beguines Wing	43.Rock_1	86.R.roll_2
1.Beguine_2	44.Rock_2	87.Fast Beat
2.Beguine_3	45.Rock_3	88.Quick Beat
3.Pop hit	46.Airy Rock	89.Smooth Beat
4.Pop	47.Heart Rock	90.Square Beat
5.Pop Malay	48.Rock & Roll	91.Euro Beat
6.Bossa nova	49.Urban Rock	92.Alpha Dance
7.Disco_1	50.Ballad	93.Beta Dance
8.Disco_2	51.Jazz Ballad	94.Dream Dance
9.Blue grass disco	52.C.Ballad	95.Dance_1
10.Waltzl_1	53.J.Ballad	96.Dance_2
11.Waltzl_2	54.60s Slow Ballad	97.Dance_3
12.True ballad waltz	55.Piano Ballad	98.RAP
13.Bossa Waltz	56.50s Ballad	99.The Country
14.Easy Waltz	57.Snake Base	100.Country Shuffle
15.Shuffle Waltz	58.Happy Blues	101.Electric Keys
16.Reggae Waltz	59.Old Blues	102.Dark Keys
17.Rumba Waltz	60.Blue Gras	103.Easy Walk
18.March_1	61.Boodie_1	104.Destiny
19.March_2	62.Boodie_2	105.Comedy
20.Rumba_1	63.Boodie_3	106.Drive
21.Rumba_2	64.Shuffle_1	107.Liquid Nova
22.Slow_1	65.Shuffle_2	108.Indonesian folk
23.Slow_2	66.Dream Shuffle	109.Absolute Music
24.Disco cha cha	67.Country Shuffle	110.Jamaica
25.Guala cha	68.Quick Shuffle	111.Synthesis
26.Char	69.Reggae Shuffle	112.Feel
27.Samba_1	70.R&B	113.Accelerate
28.Samba_2	71.Reggae_1	114.Beach Night
29.Ubminimal	72.Reggae_2	115.Irish
30.8Bit_1	73.Reggae_3	116.Tarantella
31.8Bit_2	74.Salsa_1	117.Big band
32.16Bit_1	75.Salsa_2	118.Dan
33.16bit_2	76.Salsa_3	119.Fusion
34.Ballad_16T	77.Tecno_1	120.Horse
35.Country_16T	78.Tecno_2	121.Canon
36.Tango_1	79.Funky_1	122.Latin
37.Tango_2	80.Funky_2	123.Mambo
38.Polka_1	81.Dixie_1	124.New age
39.Polka_2	82.Dixie_2	125.Slow rc
40.Pop Swing	83.Foxtrot_1	126.Soul
41.Easy Swing	84.Foxtrot_2	127.Twist
42.Soft Swing	85.R.roll_1	

Tillverkare: Shanghaimuxinmuyeyouxiangongsi **Adress:**

Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Importerad till AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122

Australien

Importerad till USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho

Cucamonga, CA 91730

EC REP

E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.

UK REP

YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX