



Technical Support and E-Warranty Certificate
www.vevor.com/support

Hand roll up piano user manual

Model: BR-A88



Technical Support and E-Warranty Certificate
www.vevor.com/support

We continue to be committed to provide you tools with competitive price.
"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]
TOUGH TOOLS, HALF PRICE

Hand roll up piano

Model:BR-A88



 
(The picture is for reference only, please refer to the actual object)

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

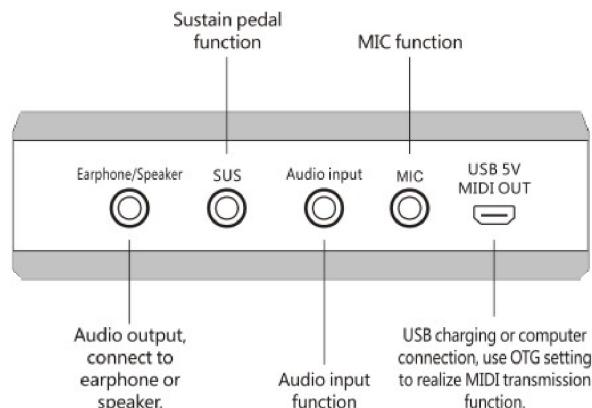

Power indicator light

1. The red LED is the power on indicator.
2. The charging indicator is green. After USB charging, the light will turn on and go out when it is full. When the power is high or full, plug in the USB charging, charging indicator will flash or off is normal.
3. Battery: High-capacity lithium battery, charging time is about 5H, please charge it for more than 5H for the first time. Charging adapter: 5V 1A

Product Function Description

1. Tone

- Built-in 128 kinds of tone.
- The preset number is 000, and the digital screen displays "000". When the tone is selected, press the [Tone + / Tone -] button to select the loop.
- Press the digital tone key, you can directly choose 000-127 tone.

2. Rhythm

- Built-in 128 kinds of rhythm.
- Press [►||] key to enter rhythm mode automatically, and the digital screen displays "000". Press [►||] key again, rhythm mode will stop.
- In the Rhythm mode, press the [Rhy + / Rhy -] button to select the loop.

3. Fill in

- In the Rhythm mode, press the [Fill in] button to insert a 1-2 syllable on the original basis.

4. Teaching Function

- Press the [OKON] button to enter the teaching mode automatically. Demo song accompaniment plays cycle, and wait for the user to play. Touch any key to play the main theme of the demo song. Press the [OKON] button to select the loop. Press [►||] to stops demo.

5. [►||]

- Press [►||] , automatically enter rhythm playing mode, press [►||] again, rhythm playing stops.

6. Demonstration song

- Built-in 15 demo songs.
- Press the [Demo] key to play the demo song automatically.
- You can play the piano with demo song at the same time.

Number	English song name	Number	English song name
S000	Sky Castle	S010	A Comme Amour
S001	Canon	S011	The Serene Afternoon
S002	Seven Mile Fragrance	S012	Street Where Wind Resides
S003	Mariage D'amour	S013	Suddenly Missing You
S004	Melody of the Night 5	S014	Platforms
S005	The Wind Forest	S015	Clarinet Polka
S006	One Summer's Day	S016	Fountain
S007	Summer	S017	She Wore A Yellow Ribbon
S008	Serenade	S018	Go Home
S009	The Silence of the Night Sky	S019	Dingdong Merry Gentlemen

7. Record / Play

- Record :
Press this key to enter recording mode, and then press any key or drum key to start recording. The maximum number of recordings is 700, when the record is full, it cannot continue to record a note, when recording, you can press the play button to play any time. Each time this key is pressed, the previous memory is erased and the recording mode is re-entered.
- Play :
The first press the [play] to play the recorded notes or drums, and the second press the [play] to stop playing.
Press [play] to exit recording mode.
If no value has been recorded before, pressing [play] does nothing.

8. Program

- Press the [program], the digital screen display **Prg**, start the program mode, at this time all the keys into percussion.

9. Volume

- Press the [(🔊 / 🔊)] button to increase or decrease the sound, and the digital screen will display the corresponding volume level. The default volume is 8, the maximum volume is 16.

10. Vibrato

- Press the [Vibrato] key to turn on the Vibrato function. The digital screen will display "U16". It will make the sound with vibrato effect in the performance. Press the [Vibrato] button again to turn off the vibrato effect. The digital screen will display "OFF".

11. Sustain

- Press the [Sustain] key to turn on the sustain function. The digital screen will display "SUS". It will make the sound with sustain effect in the performance. Press the [sustain] button again to turn off the sustain effect. The digital screen will display "OFF".

88 key keyboard drum corresponding figure

							
A 1	A # 1	B 1	C 2	C # 2	D 2	D # 2	E 2
							
F 2	F # 2	G 2	G # 2	A 2	A # 2	B 2	C 3
							
C # 3	D 3	D # 3	E 3	F 3	F # 3	G 3	G # 3
							
A 3	A # 3	B 3	C 4	C # 4	D 4	D # 4	E 4
							
F 4	F # 4	G 4	G # 4	A 4	A # 4	B 4	C 5
							
C # 5	D 5	D # 5	E 5	F 5	F # 5	G 5	G # 5
							
A 5	A # 5	B 5	C 6	C # 6	D 6	D # 6	E 6
							
F 6	F # 6	G 6	G # 6	A 6	A # 6	B 6	C 7
							
C # 7	D 7	D # 7	E 7	F 7	F # 7	G 7	G # 7
							
A 7	A # 7	B 7	C 8	C # 8	D 8	D # 8	E 8
							
F 8	F # 8	G 8	G # 8	A 8	A # 8	B 8	C 9

12. Drum kit

- Press the [Drum kit] button, the digital screen will display "ON". Then, all the keys will become into percussion tone. Press the [Drum kit] button again to turn off the percussion tone. The digital screen will display "OFF".

13. Single / finger chord functions

- Press the [►||] key, then press the [Single] key, the digital screen shows "SIN", and the single finger chord is start; or press the [Finger] key, then the digital screen shows "FIN", and the finger chord is open. At this time, 14 white keys and 10 black keys in the bass area of the key can be selected to synchronize the single/finger chord accompaniment; then press the [►||] key, then the single/finger chord accompaniment stops.

14. Tempo

- When playing rhythm or demo song, press [Tempo+ /Tempo -] to adjust the playing speed.
- The default position is 120, the maximum can be adjusted to 300, the minimum can be reduced to 30.
- The speed of different DEMO song is different, and the specific speed shall prevail.

15. Metronome

- Press the [Metronome] button to issue the metronome sound. The metronome will play at the current speed. Press the [metronome] key again to select the beat, a total of 4 beats. Press the [Metronome] button again to turn off the metronome.

16. Sync

- 1. Press [Sync] for the first time to enter the synchronization mode, and press [Sync] for the second time to exit the synchronization mode.
- 2. When entering the synchronous mode, stop playing the rhythm and press the first 19 keys to automatically play the selected rhythm (chord).

Lists of tone

Number	Name	Number	Name	Number	Name
T000	Acoustic Grand Piano	T043	Contrabass	T086	Lead 7 (fifths)
T001	Bright Acoustic Piano	T044	Tremolo Strings	T087	Lead 8 (bass+lead)
T002	Electric Grand Piano	T045	Pizzicato Strings	T088	Pad 1 (new age)
T003	Honky-tonk Piano	T046	Orchestral Harp	T089	Pad 2 (warm)
T004	Rhodes Piano	T047	Timpani	T090	Pad 3 (polysynth)
T005	Chorused Piano	T048	String Ensemble 1	T091	Pad 4 (choir)
T006	Harpsichord	T049	String Ensemble 2	T092	Pad 5 (bowed)
T007	Clavichord	T050	Synth Strings 1	T093	Pad 6 (metallic)
T008	Celesta	T051	Synth Strings 2	T094	Pad 7 (halo)
T009	Glockenspiel	T052	Choir Aahs	T095	Pad 8 (sweep)
T010	Music box	T053	Voice Oohs	T096	FX 1 (rain)
T011	Vibraphone	T054	Synth Voice	T097	FX 2 (soundtrack)
T012	Marimba	T055	Orchestra Hit	T098	FX 3 (crystal)
T013	Xylophone	T056	Trumpet	T099	FX 4 (atmosphere)
T014	Tubular Bell	T057	Trombone	T100	FX 5 (brightness)
T015	Dulcimer	T058	Tuba	T101	FX 6 (goblins)
T016	Drawbar Organ	T059	Muted Trumpet	T102	FX 7 (echoes)
T017	Percussive Organ	T060	French Horn	T103	FX 8 (sci-fi)
T018	Rock Organ	T061	Brass Section	T104	Sitar
T019	Church Organ	T062	Synth Brass 1	T105	Banjo
T020	Reed Organ	T063	Synth Brass 2	T106	Shamisen
T021	Accordion	T064	Soprano Sax	T107	Koto
T022	Harmonica	T065	Alto Sax	T108	Kalimba
T023	Tango Accordion	T066	Tenor Sax	T109	Bagpipe
T024	Acoustic Guitar (nylon)	T067	Baritone Sax	T110	Fiddle
T025	Acoustic Guitar (steel)	T068	Oboe	T111	Shanai
T026	Electric Guitar (jazz)	T069	English Horn	T112	Tinkle Bell
T027	Electric Guitar (clean)	T070	Bassoon	T113	Agogo
T028	Electric Guitar (muted)	T071	Clarinet	T114	Steel Drums
T029	Overdriven Guitar	T072	Piccolo	T115	Woodblock
T030	Distortion Guitar	T073	Flute	T116	Taiko Drum
T031	Guitar Harmonics	T074	Recorder	T117	Melodic Tom
T032	Acoustic Bass	T075	Pan Flute	T118	Synth Drum
T033	Electric Bass(finger)	T076	Bottle Blow	T119	Reverse Cymbal
T034	Electric Bass (pick)	T077	Shakuhachi	T120	Guitar Fret Noise
T035	Fretless Bass	T078	Whistle	T121	Breath Noise
T036	Slap Bass 1	T079	Ocarina	T122	Seashore
T037	Slap Bass 2	T080	Lead 1 (square)	T123	Bird Tweet
T038	Synth Bass 1	T081	Lead 2 (sawtooth)	T124	Telephone Ring
T039	Synth Bass 2	T082	Lead 3 (calliope lead)	T125	Helicopter
T040	Violin	T083	Lead 4 (chiff lead)	T126	Applause
T041	Viola	T084	Lead 5 (charang)	T127	Gunshot
T042	Cello	T085	Lead 6 (voice)		

Lists of rhythm

Number	Name	Number	Name	Number	Name
R000	60's RockN	R043	Fusion Shuffl 2	R086	Country Ballad
R001	Standard Rock	R044	Club Pop1	R087	Love Song
R002	Brit Rock Pop	R045	Club Pop2	R088	Modern Country Pop
R003	60's Vintage Rock	R046	16 Beat Pop1	R089	Electro Pop
R004	Chart Rock Shfl	R047	16 Beat Pop2	R090	Acoustic Ballad
R005	60's Pop Rock	R048	8 Beat Pop1	R091	Piano Ballad
R006	Rock Billy	R049	8 Beat Pop2	R092	R&B Ballad
R007	Rock Boogie	R050	8 Beat Soul1	R093	Rock Ballad
R008	Rock Cha Cha	R051	8 Beat Soul2	R094	Slow & Easy
R009	Rock Classical	R052	8 Beat Rock1	R095	Analog Ballad
R010	Rock Shuffle	R053	8 Beat Rock2	R096	Slow Rock 1
R011	Rock Pop	R054	Classic 8Beat	R097	Slow Rock 2
R012	Rock'n Roll 1	R055	Vintage Gtr Pop	R098	Slow Rock 3
R013	Rock'n Roll 2	R056	Schlager Italia	R099	Slow Soul
R014	Straight Rock	R057	Waltz	R100	8 Beat Adria
R015	Jazz Rock	R058	Cha Cha	R101	Classic Piano
R016	Fast Gospel	R059	Rumba	R102	80's EP Ballad
R017	Folk Rock	R060	Jive	R103	80's Boy Band
R018	Skiffle	R061	Pasodoble	R104	Country Ballad
R019	Funk Pop Rock	R062	Samba1	R105	Country Two Step
R020	Contemp Rock	R063	Samba2	R106	Country 1
R021	Acoustic Rock	R064	Schlager Rock 1	R107	Country 2
R022	50's Pop	R065	Schlager Rock 2	R108	Finger Pickin
R023	Cool Pop	R066	Fox Trot	R109	Country Brothers
R024	Groovy Pop	R067	Viennese Waltz	R110	New Country
R025	60's Vintage Pop	R068	Tango1	R111	Easy Country
R026	80's Pop	R069	Tango2	R112	70's Chart Cntry
R027	Rap Pop	R070	German Waltz	R113	Hoedown
R028	Pop Rock	R071	Carnival	R114	Country Shuffle
R029	60's Soul	R072	Organ Samba	R115	70's Disco1
R030	70's Soul	R073	Reel	R116	70's Disco2
R031	Funk	R074	Gay Gordons	R117	Funky Disco
R032	16 Beat Shuffle	R075	Scand Waltz	R118	Saturday Night
R033	Twist	R076	70's Chart Ballad	R119	Club Latin
R034	British Pop1	R077	Romantic Ballad	R120	Disco Chocolate
R035	British Pop2	R078	90's Cool Ballad	R121	Disco Fox
R036	Hard Rock1	R079	Alp Ballad1	R122	Disco Funk
R037	Hard Rock2	R080	Alp Ballad2	R123	Disco Hands
R038	Fusion1	R081	E. Ballad	R124	Disco Party
R039	Fusion2	R082	Unplugged	R125	Disco Samba
R040	Funk Shuffl 1	R083	Pop Ballad	R126	UK Pop
R041	Funk Shuffl 2	R084	Pop New Age	R127	Club Dance
R042	Fusion Shuffl 1	R085	8 Beat Modern		

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

EC	REP
----	-----

E-CrossStu GmbH
Mainzer Landstr.69, 60329 Frankfurt am Main.

UK	REP
----	-----

YH CONSULTING LIMITED.
C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX





Assistance technique et certificat de garantie
électronique www.vevor.com/support

Manuel d'utilisation du piano à enroulement manuel

Modèle : BR-A88



Assistance technique et certificat de garantie électronique
www.vevor.com/support

Nous continuons à nous engager à vous fournir des outils à des prix compétitifs.
"Économisez la moitié", "Moitié prix" ou toute autre expression similaire que nous utilisons ne représente qu'une estimation des économies dont vous pourriez bénéficier en achetant certains outils chez nous par rapport aux grandes marques et ne signifie pas nécessairement couvrir toutes les catégories d'outils proposés. par nous. Nous vous rappelons de vérifier attentivement lorsque vous passez une commande chez nous si vous économisez réellement la moitié par rapport aux grandes marques.

Modèle: BR-A88



 
(L'image est uniquement à titre de référence, veuillez vous référer à l'objet réel)

BESOIN D'AIDE? CONTACTEZ-NOUS!

Vous avez des questions sur les produits ? Besoin d'une assistance technique ? N'hésitez pas à nous

contacter : Support technique et certificat de garantie électronique
www.vevor.com/support

Il s'agit des instructions originales, veuillez lire attentivement toutes les instructions du manuel avant de l'utiliser. VEVOR se réserve une interprétation claire de notre manuel d'utilisation. L'apparence du produit dépend du produit que vous avez reçu. Veuillez nous pardonner que nous ne vous informons plus s'il y a des mises à jour technologiques ou logicielles sur notre produit.

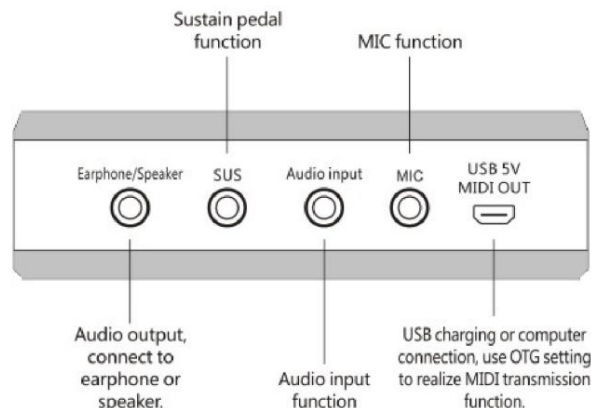

Power indicator light

1. The red LED is the power on indicator.
2. The charging indicator is green. After USB charging, the light will turn on and go out when it is full. When the power is high or full, plug in the USB charging, charging indicator will flash or off is normal.
3. Battery: High-capacity lithium battery, charging time is about 5H, please charge it for more than 5H for the first time. Charging adapter: 5V 1A

Product Function Description

1. Tone

- Built-in 128 kinds of tone.
- The preset number is 000, and the digital screen displays "000". When the tone is selected, press the [Tone + / Tone -] button to select the loop.
- Press the digital tone key, you can directly choose 000-127 tone.

2. Rhythm

- Built-in 128 kinds of rhythm.
- Press [▶ ||] key to enter rhythm mode automatically, and the digital screen displays "000". Press [▶ ||] key again, rhythm mode will stop.
- In the Rhythm mode, press the [Rhy + / Rhy -] button to select the loop.

3. Fill in

- In the Rhythm mode, press the [Fill in] button to insert a 1-2 syllable on the original basis.

4. Teaching Function

- Press the [OKON] button to enter the teaching mode automatically. Demo song accompaniment plays cycle, and wait for the user to play. Touch any key to play the main theme of the demo song. Press the [OKON] button to select the loop. Press [▶ ||] to stops demo.

5. [▶ ||]

- Press [▶ ||] , automatically enter rhythm playing mode, press [▶ ||] again, rhythm playing stops.

6. Demonstration song

- Built-in 15 demo songs.
- Press the [Demo] key to play the demo song automatically.
- You can play the piano with demo song at the same time.

Number	English song name	Number	English song name
S000	Sky Castle	S010	A Comme Amour
S001	Canon	S011	The Serene Afternoon
S002	Seven Mile Fragrance	S012	Street Where Wind Resides
S003	Mariage D'amour	S013	Suddenly Missing You
S004	Melody of the Night 5	S014	Platforms
S005	The Wind Forest	S015	Clarinet Polka
S006	One Summer's Day	S016	Fountain
S007	Summer	S017	She Wore A Yellow Ribbon
S008	Serenade	S018	Go Home
S009	The Silence of the Night Sky	S019	Dingdong Merry Gentlemen

7. Record / Play

- Record :
Press this key to enter recording mode, and then press any key or drum key to start recording. The maximum number of recordings is 700, when the record is full, it cannot continue to record a note, when recording, you can press the play button to play any time. Each time this key is pressed, the previous memory is erased and the recording mode is re-entered.
- Play :
The first press the [play] to play the recorded notes or drums, and the second press the [play] to stop playing.
Press [play] to exit recording mode.
If no value has been recorded before, pressing [play] does nothing.

8. Program

- Press the [program], the digital screen display **P 0 0** , start the program mode, at this time all the keys into percussion.

9. Volume

- Press the [() / ()] button to increase or decrease the sound, and the digital screen will display the corresponding volume level. The default volume is 8, the maximum volume is 16.

10. Vibrato

- Press the [Vibrato] key to turn on the Vibrato function. The digital screen will display "U16". It will make the sound with vibrato effect in the performance. Press the [Vibrato] button again to turn off the vibrato effect. The digital screen will display "OFF".

11. Sustain

- Press the [Sustain] key to turn on the sustain function. The digital screen will display "SUS". It will make the sound with sustain effect in the performance. Press the [sustain] button again to turn off the sustain effect. The digital screen will display "OFF".

88 key keyboard drum corresponding figure

							
A 1	A # 1	B 1	C 2	C # 2	D 2	D # 2	E 2
							
F 2	F # 2	G 2	G # 2	A 2	A # 2	B 2	C 3
							
C # 3	D 3	D # 3	E 3	F 3	F # 3	G 3	G # 3
							
A 3	A # 3	B 3	C 4	C # 4	D 4	D # 4	E 4
							
F 4	F # 4	G 4	G # 4	A 4	A # 4	B 4	C 5
							
C # 5	D 5	D # 5	E 5	F 5	F # 5	G 5	G # 5
							
A 5	A # 5	B 5	C 6	C # 6	D 6	D # 6	E 6
							
F 6	F # 6	G 6	G # 6	A 6	A # 6	B 6	C 7
							
C # 7	D 7	D # 7	E 7	F 7	F # 7	G 7	G # 7
							
A 7	A # 7	B 7	C 8	C # 8	D 8	D # 8	E 8
							
F 8	F # 8	G 8	G # 8	A 8	A # 8	B 8	C 9

12. Drum kit

- Press the [Drum kit] button, the digital screen will display "ON". Then, all the keys will become into percussion tone. Press the [Drum kit] button again to turn off the percussion tone. The digital screen will display "OFF".

13. Single / finger chord functions

- Press the [►] key, then press the [Single] key, the digital screen shows "SIN", and the single finger chord is start; or press the [Finger] key, then the digital screen shows "FIN", and the finger chord is open. At this time, 14 white keys and 10 black keys in the bass area of the key can be selected to synchronize the single/finger chord accompaniment; then press the [►] key, then the single/finger chord accompaniment stops.

14. Tempo

- When playing rhythm or demo song, press [Tempo+ /Tempo -] to adjust the playing speed.
- The default position is 120, the maximum can be adjusted to 300, the minimum can be reduced to 30.
- The speed of different DEMO song is different, and the specific speed shall prevail.

15. Metronome

- Press the [Metronome] button to issue the metronome sound. The metronome will play at the current speed. Press the [metronome] key again to select the beat, a total of 4 beats. Press the [Metronome] button again to turn off the metronome.

16. Sync

- 1. Press [Sync] for the first time to enter the synchronization mode, and press [Sync] for the second time to exit the synchronization mode.
- 2. When entering the synchronous mode, stop playing the rhythm and press the first 19 keys to automatically play the selected rhythm (chord).

Lists of tone

Number	Name	Number	Name	Number	Name
T000	Acoustic Grand Piano	T043	Contrabass	T086	Lead 7 (fifths)
T001	Bright Acoustic Piano	T044	Tremolo Strings	T087	Lead 8 (bass+lead)
T002	Electric Grand Piano	T045	Pizzicato Strings	T088	Pad 1 (new age)
T003	Honky-tonk Piano	T046	Orchestral Harp	T089	Pad 2 (warm)
T004	Rhodes Piano	T047	Timpani	T090	Pad 3 (polysynth)
T005	Chorused Piano	T048	String Ensemble 1	T091	Pad 4 (choir)
T006	Harpsichord	T049	String Ensemble 2	T092	Pad 5 (bowed)
T007	Clavichord	T050	Synth Strings 1	T093	Pad 6 (metallic)
T008	Celesta	T051	Synth Strings 2	T094	Pad 7 (halo)
T009	Glockenspiel	T052	Choir Aahs	T095	Pad 8 (sweep)
T010	Music box	T053	Voice Oohs	T096	FX 1 (rain)
T011	Vibraphone	T054	Synth Voice	T097	FX 2 (soundtrack)
T012	Marimba	T055	Orchestra Hit	T098	FX 3 (crystal)
T013	Xylophone	T056	Trumpet	T099	FX 4 (atmosphere)
T014	Tubular Bell	T057	Trombone	T100	FX 5 (brightness)
T015	Dulcimer	T058	Tuba	T101	FX 6 (goblins)
T016	Drawbar Organ	T059	Muted Trumpet	T102	FX 7 (echoes)
T017	Percussive Organ	T060	French Horn	T103	FX 8 (sci-fi)
T018	Rock Organ	T061	Brass Section	T104	Sitar
T019	Church Organ	T062	Synth Brass 1	T105	Banjo
T020	Reed Organ	T063	Synth Brass 2	T106	Shamisen
T021	Accordion	T064	Soprano Sax	T107	Koto
T022	Harmonica	T065	Alto Sax	T108	Kalimba
T023	Tango Accordion	T066	Tenor Sax	T109	Bagpipe
T024	Acoustic Guitar (nylon)	T067	Baritone Sax	T110	Fiddle
T025	Acoustic Guitar (steel)	T068	Oboe	T111	Shanai
T026	Electric Guitar (jazz)	T069	English Horn	T112	Tinkle Bell
T027	Electric Guitar (clean)	T070	Bassoon	T113	Agogo
T028	Electric Guitar (muted)	T071	Clarinet	T114	Steel Drums
T029	Overdriven Guitar	T072	Piccolo	T115	Woodblock
T030	Distortion Guitar	T073	Flute	T116	Taiko Drum
T031	Guitar Harmonics	T074	Recorder	T117	Melodic Tom
T032	Acoustic Bass	T075	Pan Flute	T118	Synth Drum
T033	Electric Bass(finger)	T076	Bottle Blow	T119	Reverse Cymbal
T034	Electric Bass (pick)	T077	Shakuhachi	T120	Guitar Fret Noise
T035	Fretless Bass	T078	Whistle	T121	Breath Noise
T036	Slap Bass 1	T079	Ocarina	T122	Seashore
T037	Slap Bass 2	T080	Lead 1 (square)	T123	Bird Tweet
T038	Synth Bass 1	T081	Lead 2 (sawtooth)	T124	Telephone Ring
T039	Synth Bass 2	T082	Lead 3 (calliope lead)	T125	Helicopter
T040	Violin	T083	Lead 4 (chiff lead)	T126	Applause
T041	Viola	T084	Lead 5 (charang)	T127	Gunshot
T042	Cello	T085	Lead 6 (voice)		

Lists of rhythm

Number	Name	Number	Name	Number	Name
R000	60's RockN	R043	Fusion Shuffl 2	R086	Country Ballad
R001	Standard Rock	R044	Club Pop1	R087	Love Song
R002	Brit Rock Pop	R045	Club Pop2	R088	Modern Country Pop
R003	60's Vintage Rock	R046	16 Beat Pop1	R089	Electro Pop
R004	Chart Rock Shfl	R047	16 Beat Pop2	R090	Acoustic Ballad
R005	60's Pop Rock	R048	8 Beat Pop1	R091	Piano Ballad
R006	Rock Billy	R049	8 Beat Pop2	R092	R&B Ballad
R007	Rock Boogie	R050	8 Beat Soul1	R093	Rock Ballad
R008	Rock Cha Cha	R051	8 Beat Soul2	R094	Slow & Easy
R009	Rock Classical	R052	8 Beat Rock1	R095	Analog Ballad
R010	Rock Shuffle	R053	8 Beat Rock2	R096	Slow Rock 1
R011	Rock Pop	R054	Classic 8Beat	R097	Slow Rock 2
R012	Rock'n Roll 1	R055	Vintage Gtr Pop	R098	Slow Rock 3
R013	Rock'n Roll 2	R056	Schlager Italia	R099	Slow Soul
R014	Straight Rock	R057	Waltz	R100	8 Beat Adria
R015	Jazz Rock	R058	Cha Cha	R101	Classic Piano
R016	Fast Gospel	R059	Rumba	R102	80's EP Ballad
R017	Folk Rock	R060	Jive	R103	80's Boy Band
R018	Skiffle	R061	Pasodoble	R104	Country Ballad
R019	Funk Pop Rock	R062	Samba1	R105	Country Two Step
R020	Contemp Rock	R063	Samba2	R106	Country 1
R021	Acoustic Rock	R064	Schlager Rock 1	R107	Country 2
R022	50's Pop	R065	Schlager Rock 2	R108	Finger Pickin
R023	Cool Pop	R066	Fox Trot	R109	Country Brothers
R024	Groovy Pop	R067	Viennese Waltz	R110	New Country
R025	60's Vintage Pop	R068	Tango1	R111	Easy Country
R026	80's Pop	R069	Tango2	R112	70's Chart Cntry
R027	Rap Pop	R070	German Waltz	R113	Hoedown
R028	Pop Rock	R071	Carnival	R114	Country Shuffle
R029	60's Soul	R072	Organ Samba	R115	70's Disco1
R030	70's Soul	R073	Reel	R116	70's Disco2
R031	Funk	R074	Gay Gordons	R117	Funky Disco
R032	16 Beat Shuffle	R075	Scand Waltz	R118	Saturday Night
R033	Twist	R076	70's Chart Ballad	R119	Club Latin
R034	British Pop1	R077	Romantic Ballad	R120	Disco Chocolate
R035	British Pop2	R078	90's Cool Ballad	R121	Disco Fox
R036	Hard Rock1	R079	Alp Ballad1	R122	Disco Funk
R037	Hard Rock2	R080	Alp Ballad2	R123	Disco Hands
R038	Fusion1	R081	E. Ballad	R124	Disco Party
R039	Fusion2	R082	Unplugged	R125	Disco Samba
R040	Funk Shuffl 1	R083	Pop Ballad	R126	UK Pop
R041	Funk Shuffl 2	R084	Pop New Age	R127	Club Dance
R042	Fusion Shuffl 1	R085	8 Beat Modern		

Fabricant : Shanghaimuxinmuyeyouxiangongsi Adresse :
Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Importé en Australie : SIHAO PTY LTD, 1 ROKEVA STREETASTWOOD NSW 2122
Australie

Importé aux États-Unis : Sanven Technology Ltd., Suite 250, 9166 Anaheim Place,
Rancho Cucamonga, CA 91730

REPRÉSENTANT CE	
-----------------	--

E-CrossStu GmbH
Mainzer Landstr.69, 60329 Francfort-sur-le-Main.

REPRÉSENTANT DU ROYAUME-UNI	
-----------------------------	--

YH CONSULTING LIMITÉE.
C/O YH Consulting Limited Bureau 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX





Technischer Support und E-Garantie-Zertifikat
www.vevor.com/support

Bedienungsanleitung für das Hand-Roll-Up-Piano

Modell: BR-A88



Technischer Support und E-Garantie-Zertifikat
www.vevor.com/support

Wir sind weiterhin bestrebt, Ihnen Werkzeuge zu wettbewerbsfähigen Preisen anzubieten.
„Sparen Sie die Hälfte“, „Halber Preis“ oder andere ähnliche Ausdrücke, die wir verwenden, stellen nur eine Schätzung der Ersparnis dar, die Sie beim Kauf bestimmter Werkzeuge bei uns im Vergleich zu den großen Topmarken erzielen können, und decken nicht unbedingt alle von uns angebotenen Werkzeugkategorien ab. Wir möchten Sie freundlich daran erinnern, bei Ihrer Bestellung bei uns sorgfältig zu prüfen, ob Sie im Vergleich zu den großen Topmarken tatsächlich die Hälfte sparen.

Modell: BR-A88



 
(Das Bild dient nur als Referenz, bitte beziehen Sie sich auf das tatsächliche Objekt)

Brauchen Sie Hilfe? Kontaktieren Sie uns!

Haben Sie Fragen zum Produkt? Benötigen Sie technischen Support? Bitte kontaktieren Sie uns:

Technischer Support und E-Garantie-Zertifikat www.vevor.com/support

Dies ist die Originalanleitung. Bitte lesen Sie alle Anweisungen sorgfältig durch, bevor Sie das Gerät in Betrieb nehmen. VEVOR behält sich eine klare Auslegung unserer Bedienungsanleitung vor. Das Erscheinungsbild des Produkts richtet sich nach dem Produkt, das Sie erhalten haben. Bitte verzeihen Sie uns, dass wir Sie nicht erneut informieren, wenn es Technologie- oder Software-Updates für unser Produkt gibt.

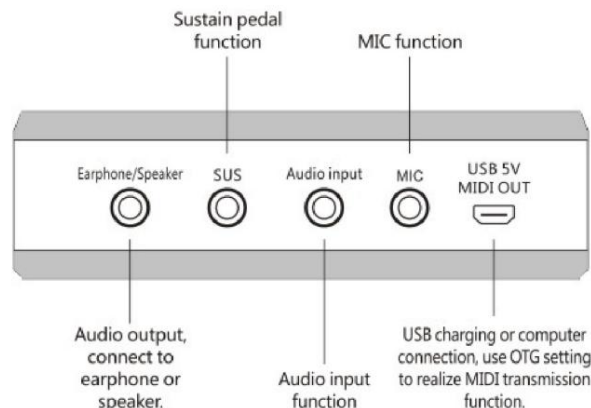

Power indicator light

1. The red LED is the power on indicator.
2. The charging indicator is green. After USB charging, the light will turn on and go out when it is full. When the power is high or full, plug in the USB charging, charging indicator will flash or off is normal.
3. Battery: High-capacity lithium battery, charging time is about 5H, please charge it for more than 5H for the first time. Charging adapter: 5V 1A

Product Function Description

1. Tone

- Built-in 128 kinds of tone.
- The preset number is 000, and the digital screen displays "000". When the tone is selected, press the [Tone + / Tone -] button to select the loop.
- Press the digital tone key, you can directly choose 000-127 tone.

2. Rhythm

- Built-in 128 kinds of rhythm.
- Press [►||] key to enter rhythm mode automatically, and the digital screen displays "000". Press [►||] key again, rhythm mode will stop.
- In the Rhythm mode, press the [Rhy + / Rhy -] button to select the loop.

3. Fill in

- In the Rhythm mode, press the [Fill in] button to insert a 1-2 syllable on the original basis.

4. Teaching Function

- Press the [OKON] button to enter the teaching mode automatically. Demo song accompaniment plays cycle, and wait for the user to play. Touch any key to play the main theme of the demo song. Press the [OKON] button to select the loop. Press [►||] to stops demo.

5. [►||]

- Press [►||], automatically enter rhythm playing mode, press [►||] again, rhythm playing stops.

6. Demonstration song

- Built-in 15 demo songs.
- Press the [Demo] key to play the demo song automatically.
- You can play the piano with demo song at the same time.

Number	English song name	Number	English song name
S000	Sky Castle	S010	A Comme Amour
S001	Canon	S011	The Serene Afternoon
S002	Seven Mile Fragrance	S012	Street Where Wind Resides
S003	Mariage D'amour	S013	Suddenly Missing You
S004	Melody of the Night 5	S014	Platforms
S005	The Wind Forest	S015	Clarinet Polka
S006	One Summer's Day	S016	Fountain
S007	Summer	S017	She Wore A Yellow Ribbon
S008	Serenade	S018	Go Home
S009	The Silence of the Night Sky	S019	Dingdong Merry Gentlemen

7. Record / Play

- Record :
Press this key to enter recording mode, and then press any key or drum key to start recording. The maximum number of recordings is 700, when the record is full, it cannot continue to record a note, when recording, you can press the play button to play any time. Each time this key is pressed, the previous memory is erased and the recording mode is re-entered.
- Play :
The first press the [play] to play the recorded notes or drums, and the second press the [play] to stop playing.
Press [play] to exit recording mode.
If no value has been recorded before, pressing [play] does nothing.

8. Program

- Press the [program], the digital screen display **P 0 0**, start the program mode, at this time all the keys into percussion.

9. Volume

- Press the [(V) / (V)] button to increase or decrease the sound, and the digital screen will display the corresponding volume level. The default volume is 8, the maximum volume is 16.

10. Vibrato

- Press the [Vibrato] key to turn on the Vibrato function. The digital screen will display "U16". It will make the sound with vibrato effect in the performance. Press the [Vibrato] button again to turn off the vibrato effect. The digital screen will display "OFF".

11. Sustain

- Press the [Sustain] key to turn on the sustain function. The digital screen will display "SUS". It will make the sound with sustain effect in the performance. Press the [sustain] button again to turn off the sustain effect. The digital screen will display "OFF".

88 key keyboard drum corresponding figure

							
A 1	A # 1	B 1	C 2	C # 2	D 2	D # 2	E 2
							
F 2	F # 2	G 2	G # 2	A 2	A # 2	B 2	C 3
							
C # 3	D 3	D # 3	E 3	F 3	F # 3	G 3	G # 3
							
A 3	A # 3	B 3	C 4	C # 4	D 4	D # 4	E 4
							
F 4	F # 4	G 4	G # 4	A 4	A # 4	B 4	C 5
							
C # 5	D 5	D # 5	E 5	F 5	F # 5	G 5	G # 5
							
A 5	A # 5	B 5	C 6	C # 6	D 6	D # 6	E 6
							
F 6	F # 6	G 6	G # 6	A 6	A # 6	B 6	C 7
							
C # 7	D 7	D # 7	E 7	F 7	F # 7	G 7	G # 7
							
A 7	A # 7	B 7	C 8	C # 8	D 8	D # 8	E 8
							
F 8	F # 8	G 8	G # 8	A 8	A # 8	B 8	C 9

12. Drum kit

- Press the [Drum kit] button, the digital screen will display "ON". Then, all the keys will become into percussion tone. Press the [Drum kit] button again to turn off the percussion tone. The digital screen will display "OFF".

13. Single / finger chord functions

- Press the [►||] key, then press the [Single] key, the digital screen shows "SIN", and the single finger chord is start; or press the [Finger] key, then the digital screen shows "FIN", and the finger chord is open. At this time, 14 white keys and 10 black keys in the bass area of the key can be selected to synchronize the single/finger chord accompaniment; then press the [►||] key, then the single/finger chord accompaniment stops.

14. Tempo

- When playing rhythm or demo song, press [Tempo+ /Tempo -] to adjust the playing speed.
- The default position is 120, the maximum can be adjusted to 300, the minimum can be reduced to 30.
- The speed of different DEMO song is different, and the specific speed shall prevail.

15. Metronome

- Press the [Metronome] button to issue the metronome sound. The metronome will play at the current speed. Press the [metronome] key again to select the beat, a total of 4 beats. Press the [Metronome] button again to turn off the metronome.

16. Sync

- 1. Press [Sync] for the first time to enter the synchronization mode, and press [Sync] for the second time to exit the synchronization mode.
- 2. When entering the synchronous mode, stop playing the rhythm and press the first 19 keys to automatically play the selected rhythm (chord).

Lists of tone

Number	Name	Number	Name	Number	Name
T000	Acoustic Grand Piano	T043	Contrabass	T086	Lead 7 (fifths)
T001	Bright Acoustic Piano	T044	Tremolo Strings	T087	Lead 8 (bass+lead)
T002	Electric Grand Piano	T045	Pizzicato Strings	T088	Pad 1 (new age)
T003	Honky-tonk Piano	T046	Orchestral Harp	T089	Pad 2 (warm)
T004	Rhodes Piano	T047	Timpani	T090	Pad 3 (polysynth)
T005	Chorused Piano	T048	String Ensemble 1	T091	Pad 4 (choir)
T006	Harpsichord	T049	String Ensemble 2	T092	Pad 5 (bowed)
T007	Clavichord	T050	Synth Strings 1	T093	Pad 6 (metallic)
T008	Celesta	T051	Synth Strings 2	T094	Pad 7 (halo)
T009	Glockenspiel	T052	Choir Aahs	T095	Pad 8 (sweep)
T010	Music box	T053	Voice Oohs	T096	FX 1 (rain)
T011	Vibraphone	T054	Synth Voice	T097	FX 2 (soundtrack)
T012	Marimba	T055	Orchestra Hit	T098	FX 3 (crystal)
T013	Xylophone	T056	Trumpet	T099	FX 4 (atmosphere)
T014	Tubular Bell	T057	Trombone	T100	FX 5 (brightness)
T015	Dulcimer	T058	Tuba	T101	FX 6 (goblins)
T016	Drawbar Organ	T059	Muted Trumpet	T102	FX 7 (echoes)
T017	Percussive Organ	T060	French Horn	T103	FX 8 (sci-fi)
T018	Rock Organ	T061	Brass Section	T104	Sitar
T019	Church Organ	T062	Synth Brass 1	T105	Banjo
T020	Reed Organ	T063	Synth Brass 2	T106	Shamisen
T021	Accordion	T064	Soprano Sax	T107	Koto
T022	Harmonica	T065	Alto Sax	T108	Kalimba
T023	Tango Accordion	T066	Tenor Sax	T109	Bagpipe
T024	Acoustic Guitar (nylon)	T067	Baritone Sax	T110	Fiddle
T025	Acoustic Guitar (steel)	T068	Oboe	T111	Shanai
T026	Electric Guitar (jazz)	T069	English Horn	T112	Tinkle Bell
T027	Electric Guitar (clean)	T070	Bassoon	T113	Agogo
T028	Electric Guitar (muted)	T071	Clarinet	T114	Steel Drums
T029	Overdriven Guitar	T072	Piccolo	T115	Woodblock
T030	Distortion Guitar	T073	Flute	T116	Taiko Drum
T031	Guitar Harmonics	T074	Recorder	T117	Melodic Tom
T032	Acoustic Bass	T075	Pan Flute	T118	Synth Drum
T033	Electric Bass(finger)	T076	Bottle Blow	T119	Reverse Cymbal
T034	Electric Bass (pick)	T077	Shakuhachi	T120	Guitar Fret Noise
T035	Fretless Bass	T078	Whistle	T121	Breath Noise
T036	Slap Bass 1	T079	Ocarina	T122	Seashore
T037	Slap Bass 2	T080	Lead 1 (square)	T123	Bird Tweet
T038	Synth Bass 1	T081	Lead 2 (sawtooth)	T124	Telephone Ring
T039	Synth Bass 2	T082	Lead 3 (calliope lead)	T125	Helicopter
T040	Violin	T083	Lead 4 (chiff lead)	T126	Applause
T041	Viola	T084	Lead 5 (charang)	T127	Gunshot
T042	Cello	T085	Lead 6 (voice)		

Lists of rhythm

Number	Name	Number	Name	Number	Name
R000	60's RockN	R043	Fusion Shuffl 2	R086	Country Ballad
R001	Standard Rock	R044	Club Pop1	R087	Love Song
R002	Brit Rock Pop	R045	Club Pop2	R088	Modern Country Pop
R003	60's Vintage Rock	R046	16 Beat Pop1	R089	Electro Pop
R004	Chart Rock Shfl	R047	16 Beat Pop2	R090	Acoustic Ballad
R005	60's Pop Rock	R048	8 Beat Pop1	R091	Piano Ballad
R006	Rock Billy	R049	8 Beat Pop2	R092	R&B Ballad
R007	Rock Boogie	R050	8 Beat Soul1	R093	Rock Ballad
R008	Rock Cha Cha	R051	8 Beat Soul2	R094	Slow & Easy
R009	Rock Classical	R052	8 Beat Rock1	R095	Analog Ballad
R010	Rock Shuffle	R053	8 Beat Rock2	R096	Slow Rock 1
R011	Rock Pop	R054	Classic 8Beat	R097	Slow Rock 2
R012	Rock'n Roll 1	R055	Vintage Gtr Pop	R098	Slow Rock 3
R013	Rock'n Roll 2	R056	Schlager Italia	R099	Slow Soul
R014	Straight Rock	R057	Waltz	R100	8 Beat Adria
R015	Jazz Rock	R058	Cha Cha	R101	Classic Piano
R016	Fast Gospel	R059	Rumba	R102	80's EP Ballad
R017	Folk Rock	R060	Jive	R103	80's Boy Band
R018	Skiffle	R061	Pasodoble	R104	Country Ballad
R019	Funk Pop Rock	R062	Samba1	R105	Country Two Step
R020	Contemp Rock	R063	Samba2	R106	Country 1
R021	Acoustic Rock	R064	Schlager Rock 1	R107	Country 2
R022	50's Pop	R065	Schlager Rock 2	R108	Finger Pickin
R023	Cool Pop	R066	Fox Trot	R109	Country Brothers
R024	Groovy Pop	R067	Viennese Waltz	R110	New Country
R025	60's Vintage Pop	R068	Tango1	R111	Easy Country
R026	80's Pop	R069	Tango2	R112	70's Chart Cntry
R027	Rap Pop	R070	German Waltz	R113	Hoedown
R028	Pop Rock	R071	Carnival	R114	Country Shuffle
R029	60's Soul	R072	Organ Samba	R115	70's Disco1
R030	70's Soul	R073	Reel	R116	70's Disco2
R031	Funk	R074	Gay Gordons	R117	Funky Disco
R032	16 Beat Shuffle	R075	Scand Waltz	R118	Saturday Night
R033	Twist	R076	70's Chart Ballad	R119	Club Latin
R034	British Pop1	R077	Romantic Ballad	R120	Disco Chocolate
R035	British Pop2	R078	90's Cool Ballad	R121	Disco Fox
R036	Hard Rock1	R079	Alp Ballad1	R122	Disco Funk
R037	Hard Rock2	R080	Alp Ballad2	R123	Disco Hands
R038	Fusion1	R081	E. Ballad	R124	Disco Party
R039	Fusion2	R082	Unplugged	R125	Disco Samba
R040	Funk Shuffl 1	R083	Pop Ballad	R126	UK Pop
R041	Funk Shuffl 2	R084	Pop New Age	R127	Club Dance
R042	Fusion Shuffl 1	R085	8 Beat Modern		

Hersteller: Shanghaimuxinmuyeyouxiangongsi **Adresse:**

Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, Shanghai 200000 CN.

Nach AUS importiert: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122
Australien

Importiert in die USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place,
Rancho Cucamonga, CA 91730

Vertreter der EG

E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.

UK REP

YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX





Supporto tecnico e certificato di garanzia
elettronica www.vevor.com/support

**Manuale utente del
pianoforte arrotolabile a mano**

Modello: BR-A88



Supporto tecnico e certificato di garanzia
elettronica www.vevor.com/support

Continuiamo a impegnarci per fornirvi strumenti a prezzi competitivi.
"Risparmia la metà", "Metà prezzo" o qualsiasi altra espressione simile da noi utilizzata rappresenta solo una stima del risparmio che potresti trarre dall'acquistare determinati strumenti con noi rispetto ai principali marchi più importanti e non significa necessariamente coprire tutte le categorie di strumenti offerti da noi. Ti ricordiamo di verificare attentamente quando effettui un ordine con noi se stai effettivamente risparmiando la metà rispetto ai migliori marchi principali.

VEVOR[®]
TOUGH TOOLS, HALF PRICE

Pianoforte arrotolabile a mano

Modello:BR-A88



(L'immagine è solo di riferimento, fare riferimento all'oggetto reale)

 
HO BISOGNO DI AIUTO? CONTATTACI!

Hai domande sul prodotto? Hai bisogno di supporto tecnico? Non esitate a contattarci:

Supporto

tecnico e certificato di garanzia elettronica www.vevor.com/support

Queste sono le istruzioni originali, leggere attentamente tutte le istruzioni del manuale prima dell'uso. VEVOR si riserva una chiara interpretazione del nostro manuale d'uso. L'aspetto del prodotto sarà soggetto al prodotto ricevuto. Ti preghiamo di perdonarci se non ti informeremo più se sono presenti aggiornamenti tecnologici o software sul nostro prodotto.

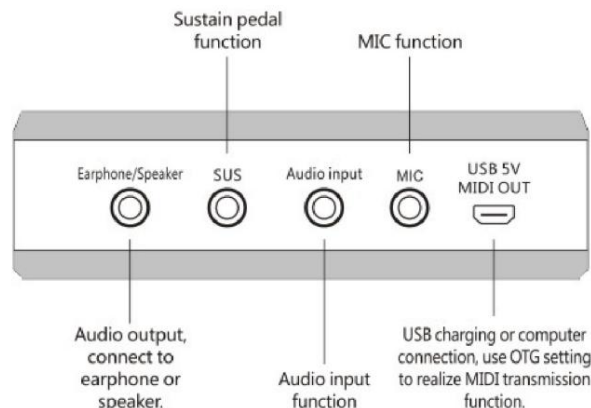

Power indicator light

1. The red LED is the power on indicator.
2. The charging indicator is green. After USB charging, the light will turn on and go out when it is full. When the power is high or full, plug in the USB charging, charging indicator will flash or off is normal.
3. Battery: High-capacity lithium battery, charging time is about 5H, please charge it for more than 5H for the first time. Charging adapter: 5V 1A

Product Function Description

1. Tone

- Built-in 128 kinds of tone.
- The preset number is 000, and the digital screen displays "000". When the tone is selected, press the [Tone + / Tone -] button to select the loop.
- Press the digital tone key, you can directly choose 000-127 tone.

2. Rhythm

- Built-in 128 kinds of rhythm.
- Press [►||] key to enter rhythm mode automatically, and the digital screen displays "000". Press [►||] key again, rhythm mode will stop.
- In the Rhythm mode, press the [Rhy + / Rhy -] button to select the loop.

3. Fill in

- In the Rhythm mode, press the [Fill in] button to insert a 1-2 syllable on the original basis.

4. Teaching Function

- Press the [OKON] button to enter the teaching mode automatically. Demo song accompaniment plays cycle, and wait for the user to play. Touch any key to play the main theme of the demo song. Press the [OKON] button to select the loop. Press [►||] to stops demo.

5. [►||]

- Press [►||] , automatically enter rhythm playing mode, press [►||] again, rhythm playing stops.

6. Demonstration song

- Built-in 15 demo songs.
- Press the [Demo] key to play the demo song automatically.
- You can play the piano with demo song at the same time.

Number	English song name	Number	English song name
S000	Sky Castle	S010	A Comme Amour
S001	Canon	S011	The Serene Afternoon
S002	Seven Mile Fragrance	S012	Street Where Wind Resides
S003	Mariage D'amour	S013	Suddenly Missing You
S004	Melody of the Night 5	S014	Platforms
S005	The Wind Forest	S015	Clarinet Polka
S006	One Summer's Day	S016	Fountain
S007	Summer	S017	She Wore A Yellow Ribbon
S008	Serenade	S018	Go Home
S009	The Silence of the Night Sky	S019	Dingdong Merry Gentlemen

7. Record / Play

- Record :
Press this key to enter recording mode, and then press any key or drum key to start recording. The maximum number of recordings is 700, when the record is full, it cannot continue to record a note, when recording, you can press the play button to play any time. Each time this key is pressed, the previous memory is erased and the recording mode is re-entered.
- Play :
The first press the [play] to play the recorded notes or drums, and the second press the [play] to stop playing.
Press [play] to exit recording mode.
If no value has been recorded before, pressing [play] does nothing.

8. Program

- Press the [program], the digital screen display **P r g** , start the program mode, at this time all the keys into percussion.

9. Volume

- Press the [(v) / (v)] button to increase or decrease the sound, and the digital screen will display the corresponding volume level. The default volume is 8, the maximum volume is 16.

10. Vibrato

- Press the [Vibrato] key to turn on the Vibrato function. The digital screen will display "U16". It will make the sound with vibrato effect in the performance. Press the [Vibrato] button again to turn off the vibrato effect. The digital screen will display "OFF".

11. Sustain

- Press the [Sustain] key to turn on the sustain function. The digital screen will display "SUS". It will make the sound with sustain effect in the performance. Press the [sustain] button again to turn off the sustain effect. The digital screen will display "OFF".

88 key keyboard drum corresponding figure

							
A 1	A # 1	B 1	C 2	C # 2	D 2	D # 2	E 2
							
F 2	F # 2	G 2	G # 2	A 2	A # 2	B 2	C 3
							
C # 3	D 3	D # 3	E 3	F 3	F # 3	G 3	G # 3
							
A 3	A # 3	B 3	C 4	C # 4	D 4	D # 4	E 4
							
F 4	F # 4	G 4	G # 4	A 4	A # 4	B 4	C 5
							
C # 5	D 5	D # 5	E 5	F 5	F # 5	G 5	G # 5
							
A 5	A # 5	B 5	C 6	C # 6	D 6	D # 6	E 6
							
F 6	F # 6	G 6	G # 6	A 6	A # 6	B 6	C 7
							
C # 7	D 7	D # 7	E 7	F 7	F # 7	G 7	G # 7
							
A 7	A # 7	B 7	C 8	C # 8	D 8	D # 8	E 8
							
F 8	F # 8	G 8	G # 8	A 8	A # 8	B 8	C 9

12. Drum kit

- Press the [Drum kit] button, the digital screen will display "ON". Then, all the keys will become into percussion tone. Press the [Drum kit] button again to turn off the percussion tone. The digital screen will display "OFF".

13. Single / finger chord functions

- Press the [►] key, then press the [Single] key, the digital screen shows "SIN", and the single finger chord is start; or press the [Finger] key, then the digital screen shows "FIN", and the finger chord is open. At this time, 14 white keys and 10 black keys in the bass area of the key can be selected to synchronize the single/finger chord accompaniment; then press the [►] key, then the single/finger chord accompaniment stops.

14. Tempo

- When playing rhythm or demo song, press [Tempo+ /Tempo -] to adjust the playing speed.
- The default position is 120, the maximum can be adjusted to 300, the minimum can be reduced to 30.
- The speed of different DEMO song is different, and the specific speed shall prevail.

15. Metronome

- Press the [Metronome] button to issue the metronome sound. The metronome will play at the current speed. Press the [metronome] key again to select the beat, a total of 4 beats. Press the [Metronome] button again to turn off the metronome.

16. Sync

- 1. Press [Sync] for the first time to enter the synchronization mode, and press [Sync] for the second time to exit the synchronization mode.
- 2. When entering the synchronous mode, stop playing the rhythm and press the first 19 keys to automatically play the selected rhythm (chord).

Lists of tone

Number	Name	Number	Name	Number	Name
T000	Acoustic Grand Piano	T043	Contrabass	T086	Lead 7 (fifths)
T001	Bright Acoustic Piano	T044	Tremolo Strings	T087	Lead 8 (bass+lead)
T002	Electric Grand Piano	T045	Pizzicato Strings	T088	Pad 1 (new age)
T003	Honky-tonk Piano	T046	Orchestral Harp	T089	Pad 2 (warm)
T004	Rhodes Piano	T047	Timpani	T090	Pad 3 (polysynth)
T005	Chorused Piano	T048	String Ensemble 1	T091	Pad 4 (choir)
T006	Harpsichord	T049	String Ensemble 2	T092	Pad 5 (bowed)
T007	Clavichord	T050	Synth Strings 1	T093	Pad 6 (metallic)
T008	Celesta	T051	Synth Strings 2	T094	Pad 7 (halo)
T009	Glockenspiel	T052	Choir Aahs	T095	Pad 8 (sweep)
T010	Music box	T053	Voice Oohs	T096	FX 1 (rain)
T011	Vibraphone	T054	Synth Voice	T097	FX 2 (soundtrack)
T012	Marimba	T055	Orchestra Hit	T098	FX 3 (crystal)
T013	Xylophone	T056	Trumpet	T099	FX 4 (atmosphere)
T014	Tubular Bell	T057	Trombone	T100	FX 5 (brightness)
T015	Dulcimer	T058	Tuba	T101	FX 6 (goblins)
T016	Drawbar Organ	T059	Muted Trumpet	T102	FX 7 (echoes)
T017	Percussive Organ	T060	French Horn	T103	FX 8 (sci-fi)
T018	Rock Organ	T061	Brass Section	T104	Sitar
T019	Church Organ	T062	Synth Brass 1	T105	Banjo
T020	Reed Organ	T063	Synth Brass 2	T106	Shamisen
T021	Accordion	T064	Soprano Sax	T107	Koto
T022	Harmonica	T065	Alto Sax	T108	Kalimba
T023	Tango Accordion	T066	Tenor Sax	T109	Bagpipe
T024	Acoustic Guitar (nylon)	T067	Baritone Sax	T110	Fiddle
T025	Acoustic Guitar (steel)	T068	Oboe	T111	Shanai
T026	Electric Guitar (jazz)	T069	English Horn	T112	Tinkle Bell
T027	Electric Guitar (clean)	T070	Bassoon	T113	Agogo
T028	Electric Guitar (muted)	T071	Clarinet	T114	Steel Drums
T029	Overdriven Guitar	T072	Piccolo	T115	Woodblock
T030	Distortion Guitar	T073	Flute	T116	Taiko Drum
T031	Guitar Harmonics	T074	Recorder	T117	Melodic Tom
T032	Acoustic Bass	T075	Pan Flute	T118	Synth Drum
T033	Electric Bass(finger)	T076	Bottle Blow	T119	Reverse Cymbal
T034	Electric Bass (pick)	T077	Shakuhachi	T120	Guitar Fret Noise
T035	Fretless Bass	T078	Whistle	T121	Breath Noise
T036	Slap Bass 1	T079	Ocarina	T122	Seashore
T037	Slap Bass 2	T080	Lead 1 (square)	T123	Bird Tweet
T038	Synth Bass 1	T081	Lead 2 (sawtooth)	T124	Telephone Ring
T039	Synth Bass 2	T082	Lead 3 (calliope lead)	T125	Helicopter
T040	Violin	T083	Lead 4 (chiff lead)	T126	Applause
T041	Viola	T084	Lead 5 (charang)	T127	Gunshot
T042	Cello	T085	Lead 6 (voice)		

Lists of rhythm

Number	Name	Number	Name	Number	Name
R000	60's RockN	R043	Fusion Shuffl 2	R086	Country Ballad
R001	Standard Rock	R044	Club Pop1	R087	Love Song
R002	Brit Rock Pop	R045	Club Pop2	R088	Modern Country Pop
R003	60's Vintage Rock	R046	16 Beat Pop1	R089	Electro Pop
R004	Chart Rock Shfl	R047	16 Beat Pop2	R090	Acoustic Ballad
R005	60's Pop Rock	R048	8 Beat Pop1	R091	Piano Ballad
R006	Rock Billy	R049	8 Beat Pop2	R092	R&B Ballad
R007	Rock Boogie	R050	8 Beat Soul1	R093	Rock Ballad
R008	Rock Cha Cha	R051	8 Beat Soul2	R094	Slow & Easy
R009	Rock Classical	R052	8 Beat Rock1	R095	Analog Ballad
R010	Rock Shuffle	R053	8 Beat Rock2	R096	Slow Rock 1
R011	Rock Pop	R054	Classic 8Beat	R097	Slow Rock 2
R012	Rock'n Roll 1	R055	Vintage Gtr Pop	R098	Slow Rock 3
R013	Rock'n Roll 2	R056	Schlager Italia	R099	Slow Soul
R014	Straight Rock	R057	Waltz	R100	8 Beat Adria
R015	Jazz Rock	R058	Cha Cha	R101	Classic Piano
R016	Fast Gospel	R059	Rumba	R102	80's EP Ballad
R017	Folk Rock	R060	Jive	R103	80's Boy Band
R018	Skiffle	R061	Pasodoble	R104	Country Ballad
R019	Funk Pop Rock	R062	Samba1	R105	Country Two Step
R020	Contemp Rock	R063	Samba2	R106	Country 1
R021	Acoustic Rock	R064	Schlager Rock 1	R107	Country 2
R022	50's Pop	R065	Schlager Rock 2	R108	Finger Pickin
R023	Cool Pop	R066	Fox Trot	R109	Country Brothers
R024	Groovy Pop	R067	Viennese Waltz	R110	New Country
R025	60's Vintage Pop	R068	Tango1	R111	Easy Country
R026	80's Pop	R069	Tango2	R112	70's Chart Cntry
R027	Rap Pop	R070	German Waltz	R113	Hoedown
R028	Pop Rock	R071	Carnival	R114	Country Shuffle
R029	60's Soul	R072	Organ Samba	R115	70's Disco1
R030	70's Soul	R073	Reel	R116	70's Disco2
R031	Funk	R074	Gay Gordons	R117	Funky Disco
R032	16 Beat Shuffle	R075	Scand Waltz	R118	Saturday Night
R033	Twist	R076	70's Chart Ballad	R119	Club Latin
R034	British Pop1	R077	Romantic Ballad	R120	Disco Chocolate
R035	British Pop2	R078	90's Cool Ballad	R121	Disco Fox
R036	Hard Rock1	R079	Alp Ballad1	R122	Disco Funk
R037	Hard Rock2	R080	Alp Ballad2	R123	Disco Hands
R038	Fusion1	R081	E. Ballad	R124	Disco Party
R039	Fusion2	R082	Unplugged	R125	Disco Samba
R040	Funk Shuffl 1	R083	Pop Ballad	R126	UK Pop
R041	Funk Shuffl 2	R084	Pop New Age	R127	Club Dance
R042	Fusion Shuffl 1	R085	8 Beat Modern		

Produttore: Shanghaimuxinmuyeyouxiangongsi **Indirizzo:**

 
Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Importato in AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122
Australia

Importato negli Stati Uniti: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place,
Rancho Cucamonga, CA 91730



E-CrossStu GmbH
Mainzer Landstr.69, 60329 Francoforte sul Meno.



YH CONSULENZA LIMITATA.
C/O YH Consulting Limited Ufficio 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX





Soporte técnico y certificado de garantía
electrónica www.vevor.com/support

Manual de usuario del piano enrollable manual

Modelo: BR-A88



Soporte técnico y certificado de garantía electrónica
www.vevor.com/support

Seguimos comprometidos a proporcionarle herramientas a precios competitivos.
"Ahorre a mitad de precio", "A mitad de precio" o cualquier otra expresión similar utilizada por nosotros solo representa una estimación de los ahorros que podría beneficiarse al comprar ciertas herramientas con nosotros en comparación con las principales marcas y no significa necesariamente cubrir todas las categorías de herramientas ofrecidas por nosotros. Le recordamos que, cuando realice un pedido con nosotros, verifique cuidadosamente si realmente está ahorrando la mitad en comparación con las principales marcas.

Modelo:BR-A88



 
(La imagen es solo para referencia, consulte el objeto real)

¿NECESITAS AYUDA? ¡CONTÁCTENOS!

¿Tiene preguntas sobre el producto? ¿Necesita soporte técnico? No dude en contactarnos:
Soporte

técnico y certificado de garantía electrónica www.vevor.com/support

Estas son las instrucciones originales; lea atentamente todas las instrucciones del manual antes de operar. VEVOR se reserva una interpretación clara de nuestro manual de usuario. La apariencia del producto estará sujeta al producto que recibió. Perdone que no le informaremos nuevamente si hay actualizaciones de tecnología o software en nuestro producto.

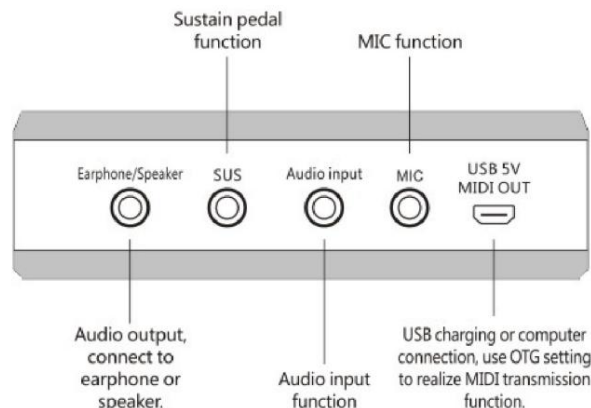

Power indicator light

1. The red LED is the power on indicator.
2. The charging indicator is green. After USB charging, the light will turn on and go out when it is full. When the power is high or full, plug in the USB charging, charging indicator will flash or off is normal.
3. Battery: High-capacity lithium battery, charging time is about 5H, please charge it for more than 5H for the first time. Charging adapter: 5V 1A

Product Function Description

1. Tone

- Built-in 128 kinds of tone.
- The preset number is 000, and the digital screen displays "000". When the tone is selected, press the [Tone + / Tone -] button to select the loop.
- Press the digital tone key, you can directly choose 000-127 tone.

2. Rhythm

- Built-in 128 kinds of rhythm.
- Press [▶||] key to enter rhythm mode automatically, and the digital screen displays "000". Press [▶||] key again, rhythm mode will stop.
- In the Rhythm mode, press the [Rhy + / Rhy -] button to select the loop.

3. Fill in

- In the Rhythm mode, press the [Fill in] button to insert a 1-2 syllable on the original basis.

4. Teaching Function

- Press the [OKON] button to enter the teaching mode automatically. Demo song accompaniment plays cycle, and wait for the user to play. Touch any key to play the main theme of the demo song. Press the [OKON] button to select the loop. Press [▶||] to stops demo.

5. [▶||]

- Press [▶||] , automatically enter rhythm playing mode, press [▶||] again, rhythm playing stops.

6. Demonstration song

- Built-in 15 demo songs.
- Press the [Demo] key to play the demo song automatically.
- You can play the piano with demo song at the same time.

Number	English song name	Number	English song name
S000	Sky Castle	S010	A Comme Amour
S001	Canon	S011	The Serene Afternoon
S002	Seven Mile Fragrance	S012	Street Where Wind Resides
S003	Mariage D'amour	S013	Suddenly Missing You
S004	Melody of the Night 5	S014	Platforms
S005	The Wind Forest	S015	Clarinet Polka
S006	One Summer's Day	S016	Fountain
S007	Summer	S017	She Wore A Yellow Ribbon
S008	Serenade	S018	Go Home
S009	The Silence of the Night Sky	S019	Dingdong Merry Gentlemen

7. Record / Play

- Record :
Press this key to enter recording mode, and then press any key or drum key to start recording. The maximum number of recordings is 700, when the record is full, it cannot continue to record a note, when recording, you can press the play button to play any time. Each time this key is pressed, the previous memory is erased and the recording mode is re-entered.
- Play :
The first press the [play] to play the recorded notes or drums, and the second press the [play] to stop playing.
Press [play] to exit recording mode.
If no value has been recorded before, pressing [play] does nothing.

8. Program

- Press the [program], the digital screen display **P 0 0** , start the program mode, at this time all the keys into percussion.

9. Volume

- Press the [(🔊 / 🔊)] button to increase or decrease the sound, and the digital screen will display the corresponding volume level. The default volume is 8, the maximum volume is 16.

10. Vibrato

- Press the [Vibrato] key to turn on the Vibrato function. The digital screen will display "U16". It will make the sound with vibrato effect in the performance. Press the [Vibrato] button again to turn off the vibrato effect. The digital screen will display "OFF".

11. Sustain

- Press the [Sustain] key to turn on the sustain function. The digital screen will display "SUS". It will make the sound with sustain effect in the performance. Press the [sustain] button again to turn off the sustain effect. The digital screen will display "OFF".

88 key keyboard drum corresponding figure

							
A 1	A # 1	B 1	C 2	C # 2	D 2	D # 2	E 2
							
F 2	F # 2	G 2	G # 2	A 2	A # 2	B 2	C 3
							
C # 3	D 3	D # 3	E 3	F 3	F # 3	G 3	G # 3
							
A 3	A # 3	B 3	C 4	C # 4	D 4	D # 4	E 4
							
F 4	F # 4	G 4	G # 4	A 4	A # 4	B 4	C 5
							
C # 5	D 5	D # 5	E 5	F 5	F # 5	G 5	G # 5
							
A 5	A # 5	B 5	C 6	C # 6	D 6	D # 6	E 6
							
F 6	F # 6	G 6	G # 6	A 6	A # 6	B 6	C 7
							
C # 7	D 7	D # 7	E 7	F 7	F # 7	G 7	G # 7
							
A 7	A # 7	B 7	C 8	C # 8	D 8	D # 8	E 8
							
F 8	F # 8	G 8	G # 8	A 8	A # 8	B 8	C 9

12. Drum kit

- Press the [Drum kit] button, the digital screen will display "ON". Then, all the keys will become into percussion tone. Press the [Drum kit] button again to turn off the percussion tone. The digital screen will display "OFF".

13. Single / finger chord functions

- Press the [►||] key, then press the [Single] key, the digital screen shows "SIN", and the single finger chord is start; or press the [Finger] key, then the digital screen shows "FIN", and the finger chord is open. At this time, 14 white keys and 10 black keys in the bass area of the key can be selected to synchronize the single/finger chord accompaniment; then press the [►||] key, then the single/finger chord accompaniment stops.

14. Tempo

- When playing rhythm or demo song, press [Tempo+ /Tempo -] to adjust the playing speed.
- The default position is 120, the maximum can be adjusted to 300, the minimum can be reduced to 30.
- The speed of different DEMO song is different, and the specific speed shall prevail.

15. Metronome

- Press the [Metronome] button to issue the metronome sound. The metronome will play at the current speed. Press the [metronome] key again to select the beat, a total of 4 beats. Press the [Metronome] button again to turn off the metronome.

16. Sync

- 1. Press [Sync] for the first time to enter the synchronization mode, and press [Sync] for the second time to exit the synchronization mode.
- 2. When entering the synchronous mode, stop playing the rhythm and press the first 19 keys to automatically play the selected rhythm (chord).

Lists of tone

Number	Name	Number	Name	Number	Name
T000	Acoustic Grand Piano	T043	Contrabass	T086	Lead 7 (fifths)
T001	Bright Acoustic Piano	T044	Tremolo Strings	T087	Lead 8 (bass+lead)
T002	Electric Grand Piano	T045	Pizzicato Strings	T088	Pad 1 (new age)
T003	Honky-tonk Piano	T046	Orchestral Harp	T089	Pad 2 (warm)
T004	Rhodes Piano	T047	Timpani	T090	Pad 3 (polysynth)
T005	Chorused Piano	T048	String Ensemble 1	T091	Pad 4 (choir)
T006	Harpsichord	T049	String Ensemble 2	T092	Pad 5 (bowed)
T007	Clavichord	T050	Synth Strings 1	T093	Pad 6 (metallic)
T008	Celesta	T051	Synth Strings 2	T094	Pad 7 (halo)
T009	Glockenspiel	T052	Choir Aahs	T095	Pad 8 (sweep)
T010	Music box	T053	Voice Oohs	T096	FX 1 (rain)
T011	Vibraphone	T054	Synth Voice	T097	FX 2 (soundtrack)
T012	Marimba	T055	Orchestra Hit	T098	FX 3 (crystal)
T013	Xylophone	T056	Trumpet	T099	FX 4 (atmosphere)
T014	Tubular Bell	T057	Trombone	T100	FX 5 (brightness)
T015	Dulcimer	T058	Tuba	T101	FX 6 (goblins)
T016	Drawbar Organ	T059	Muted Trumpet	T102	FX 7 (echoes)
T017	Percussive Organ	T060	French Horn	T103	FX 8 (sci-fi)
T018	Rock Organ	T061	Brass Section	T104	Sitar
T019	Church Organ	T062	Synth Brass 1	T105	Banjo
T020	Reed Organ	T063	Synth Brass 2	T106	Shamisen
T021	Accordion	T064	Soprano Sax	T107	Koto
T022	Harmonica	T065	Alto Sax	T108	Kalimba
T023	Tango Accordion	T066	Tenor Sax	T109	Bagpipe
T024	Acoustic Guitar (nylon)	T067	Baritone Sax	T110	Fiddle
T025	Acoustic Guitar (steel)	T068	Oboe	T111	Shanai
T026	Electric Guitar (jazz)	T069	English Horn	T112	Tinkle Bell
T027	Electric Guitar (clean)	T070	Bassoon	T113	Agogo
T028	Electric Guitar (muted)	T071	Clarinet	T114	Steel Drums
T029	Overdriven Guitar	T072	Piccolo	T115	Woodblock
T030	Distortion Guitar	T073	Flute	T116	Taiko Drum
T031	Guitar Harmonics	T074	Recorder	T117	Melodic Tom
T032	Acoustic Bass	T075	Pan Flute	T118	Synth Drum
T033	Electric Bass(finger)	T076	Bottle Blow	T119	Reverse Cymbal
T034	Electric Bass (pick)	T077	Shakuhachi	T120	Guitar Fret Noise
T035	Fretless Bass	T078	Whistle	T121	Breath Noise
T036	Slap Bass 1	T079	Ocarina	T122	Seashore
T037	Slap Bass 2	T080	Lead 1 (square)	T123	Bird Tweet
T038	Synth Bass 1	T081	Lead 2 (sawtooth)	T124	Telephone Ring
T039	Synth Bass 2	T082	Lead 3 (calliope lead)	T125	Helicopter
T040	Violin	T083	Lead 4 (chiff lead)	T126	Applause
T041	Viola	T084	Lead 5 (charang)	T127	Gunshot
T042	Cello	T085	Lead 6 (voice)		

Lists of rhythm

Number	Name	Number	Name	Number	Name
R000	60's RockN	R043	Fusion Shuffl 2	R086	Country Ballad
R001	Standard Rock	R044	Club Pop1	R087	Love Song
R002	Brit Rock Pop	R045	Club Pop2	R088	Modern Country Pop
R003	60's Vintage Rock	R046	16 Beat Pop1	R089	Electro Pop
R004	Chart Rock Shfl	R047	16 Beat Pop2	R090	Acoustic Ballad
R005	60's Pop Rock	R048	8 Beat Pop1	R091	Piano Ballad
R006	Rock Billy	R049	8 Beat Pop2	R092	R&B Ballad
R007	Rock Boogie	R050	8 Beat Soul1	R093	Rock Ballad
R008	Rock Cha Cha	R051	8 Beat Soul2	R094	Slow & Easy
R009	Rock Classical	R052	8 Beat Rock1	R095	Analog Ballad
R010	Rock Shuffle	R053	8 Beat Rock2	R096	Slow Rock 1
R011	Rock Pop	R054	Classic 8Beat	R097	Slow Rock 2
R012	Rock'n Roll 1	R055	Vintage Gtr Pop	R098	Slow Rock 3
R013	Rock'n Roll 2	R056	Schlager Italia	R099	Slow Soul
R014	Straight Rock	R057	Waltz	R100	8 Beat Adria
R015	Jazz Rock	R058	Cha Cha	R101	Classic Piano
R016	Fast Gospel	R059	Rumba	R102	80's EP Ballad
R017	Folk Rock	R060	Jive	R103	80's Boy Band
R018	Skiffle	R061	Pasodoble	R104	Country Ballad
R019	Funk Pop Rock	R062	Samba1	R105	Country Two Step
R020	Contemp Rock	R063	Samba2	R106	Country 1
R021	Acoustic Rock	R064	Schlager Rock 1	R107	Country 2
R022	50's Pop	R065	Schlager Rock 2	R108	Finger Pickin
R023	Cool Pop	R066	Fox Trot	R109	Country Brothers
R024	Groovy Pop	R067	Viennese Waltz	R110	New Country
R025	60's Vintage Pop	R068	Tango1	R111	Easy Country
R026	80's Pop	R069	Tango2	R112	70's Chart Cntry
R027	Rap Pop	R070	German Waltz	R113	Hoedown
R028	Pop Rock	R071	Carnival	R114	Country Shuffle
R029	60's Soul	R072	Organ Samba	R115	70's Disco1
R030	70's Soul	R073	Reel	R116	70's Disco2
R031	Funk	R074	Gay Gordons	R117	Funky Disco
R032	16 Beat Shuffle	R075	Scand Waltz	R118	Saturday Night
R033	Twist	R076	70's Chart Ballad	R119	Club Latin
R034	British Pop1	R077	Romantic Ballad	R120	Disco Chocolate
R035	British Pop2	R078	90's Cool Ballad	R121	Disco Fox
R036	Hard Rock1	R079	Alp Ballad1	R122	Disco Funk
R037	Hard Rock2	R080	Alp Ballad2	R123	Disco Hands
R038	Fusion1	R081	E. Ballad	R124	Disco Party
R039	Fusion2	R082	Unplugged	R125	Disco Samba
R040	Funk Shuffl 1	R083	Pop Ballad	R126	UK Pop
R041	Funk Shuffl 2	R084	Pop New Age	R127	Club Dance
R042	Fusion Shuffl 1	R085	8 Beat Modern		

Fabricante: Shanghaimuxinmuyeyouxiangongsi Dirección:
Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Importado a AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122
Australia

Importado a EE. UU.: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho
Cucamonga, CA 91730

REPRESENTANTE DE LA CE	
------------------------	--

E-CrossStu GmbH
Mainzer Landstr.69, 60329 Fráncfort del Meno.

REPRESENTANTE DEL REINO UNIDO	
-------------------------------	--

YH CONSULTING LIMITADO.
C/O YH Consulting Limited Oficina 147, Casa Centurión,
London Road, Staines upon Thames, Surrey, TW18 4AX





Wsparcie techniczne i certyfikat e-gwarancji
www.vevor.com/support

Ręcznie zwijana instrukcja obsługi pianina

Model: BR-A88



Wsparcie techniczne i certyfikat e-gwarancji
www.vevor.com/support

Nadal dokładamy wszelkich starań, aby zapewnić Państwu narzędzia w konkurencyjnej cenie. „Zaoszczędź o połowę”, „o połowę ceny” lub inne podobne wyrażenia używane przez nas przedstawiają jedynie szacunkową oszczędność, jaką możesz zyskać kupując u nas określone narzędzia w porównaniu z głównymi najlepszymi markami i niekoniecznie oznaczają uwzględnienie wszystkich kategorii oferowanych narzędzi przez nas. Przypominamy, aby podczas składania zamówienia u nas dokładnie sprawdzić, czy faktycznie oszczędzasz połowę w porównaniu z czołowymi markami.

Model:BR-A88



 
(Zdjęcie ma charakter wyłącznie poglądowy, proszę zapoznać się z rzeczywistym obiektem)

POTRZEBUJĘ POMOCY? SKONTAKTUJ SIĘ Z NAMI!

Masz pytania dotyczące produktu? Potrzebujesz wsparcia technicznego? Prosimy o kontakt:
Wsparcie

techniczne i certyfikat e-gwarancji www.vevor.com/support

To jest oryginalna instrukcja. Przed przystąpieniem do obsługi prosimy o dokładne zapoznanie się ze wszystkimi instrukcjami. VEVOR zastrzega sobie jasną interpretację naszej instrukcji obsługi. Wygląd produktu zależy od produktu, który otrzymałeś. Proszę wybaczyć nam, że nie będziemy ponownie informować Państwa, jeśli pojawią się jakieś aktualizacje technologii lub oprogramowania naszego produktu.

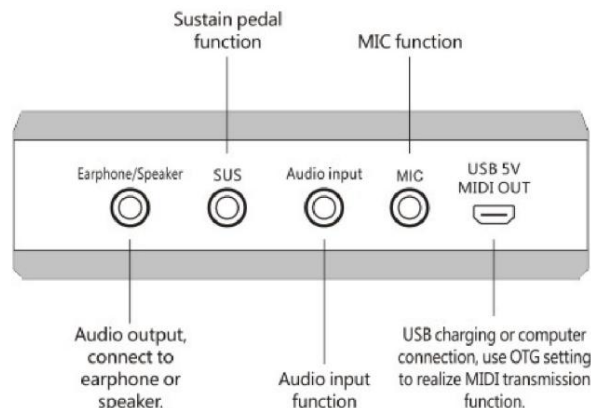

Power indicator light

1. The red LED is the power on indicator.
2. The charging indicator is green. After USB charging, the light will turn on and go out when it is full. When the power is high or full, plug in the USB charging, charging indicator will flash or off is normal.
3. Battery: High-capacity lithium battery, charging time is about 5H, please charge it for more than 5H for the first time. Charging adapter: 5V 1A

Product Function Description

1. Tone

- Built-in 128 kinds of tone.
- The preset number is 000, and the digital screen displays "000". When the tone is selected, press the [Tone + / Tone -] button to select the loop.
- Press the digital tone key, you can directly choose 000-127 tone.

2. Rhythm

- Built-in 128 kinds of rhythm.
- Press [►||] key to enter rhythm mode automatically, and the digital screen displays "000". Press [►||] key again, rhythm mode will stop.
- In the Rhythm mode, press the [Rhy + / Rhy -] button to select the loop.

3. Fill in

- In the Rhythm mode, press the [Fill in] button to insert a 1-2 syllable on the original basis.

4. Teaching Function

- Press the [OKON] button to enter the teaching mode automatically. Demo song accompaniment plays cycle, and wait for the user to play. Touch any key to play the main theme of the demo song. Press the [OKON] button to select the loop. Press [►||] to stops demo.

5. [►||]

- Press [►||] , automatically enter rhythm playing mode, press [►||] again, rhythm playing stops.

6. Demonstration song

- Built-in 15 demo songs.
- Press the [Demo] key to play the demo song automatically.
- You can play the piano with demo song at the same time.

Number	English song name	Number	English song name
S000	Sky Castle	S010	A Comme Amour
S001	Canon	S011	The Serene Afternoon
S002	Seven Mile Fragrance	S012	Street Where Wind Resides
S003	Mariage D'amour	S013	Suddenly Missing You
S004	Melody of the Night 5	S014	Platforms
S005	The Wind Forest	S015	Clarinet Polka
S006	One Summer's Day	S016	Fountain
S007	Summer	S017	She Wore A Yellow Ribbon
S008	Serenade	S018	Go Home
S009	The Silence of the Night Sky	S019	Dingdong Merry Gentlemen

7. Record / Play

- Record :
Press this key to enter recording mode, and then press any key or drum key to start recording. The maximum number of recordings is 700, when the record is full, it cannot continue to record a note, when recording, you can press the play button to play any time. Each time this key is pressed, the previous memory is erased and the recording mode is re-entered.
- Play :
The first press the [play] to play the recorded notes or drums, and the second press the [play] to stop playing.
Press [play] to exit recording mode.
If no value has been recorded before, pressing [play] does nothing.

8. Program

- Press the [program], the digital screen display **P 0 0** , start the program mode, at this time all the keys into percussion.

9. Volume

- Press the [() / ()] button to increase or decrease the sound, and the digital screen will display the corresponding volume level. The default volume is 8, the maximum volume is 16.

10. Vibrato

- Press the [Vibrato] key to turn on the Vibrato function. The digital screen will display "U16". It will make the sound with vibrato effect in the performance. Press the [Vibrato] button again to turn off the vibrato effect. The digital screen will display "OFF".

11. Sustain

- Press the [Sustain] key to turn on the sustain function. The digital screen will display "SUS". It will make the sound with sustain effect in the performance. Press the [sustain] button again to turn off the sustain effect. The digital screen will display "OFF".

88 key keyboard drum corresponding figure

							
A 1	A # 1	B 1	C 2	C # 2	D 2	D # 2	E 2
							
F 2	F # 2	G 2	G # 2	A 2	A # 2	B 2	C 3
							
C # 3	D 3	D # 3	E 3	F 3	F # 3	G 3	G # 3
							
A 3	A # 3	B 3	C 4	C # 4	D 4	D # 4	E 4
							
F 4	F # 4	G 4	G # 4	A 4	A # 4	B 4	C 5
							
C # 5	D 5	D # 5	E 5	F 5	F # 5	G 5	G # 5
							
A 5	A # 5	B 5	C 6	C # 6	D 6	D # 6	E 6
							
F 6	F # 6	G 6	G # 6	A 6	A # 6	B 6	C 7
							
C # 7	D 7	D # 7	E 7	F 7	F # 7	G 7	G # 7
							
A 7	A # 7	B 7	C 8	C # 8	D 8	D # 8	E 8
							
F 8	F # 8	G 8	G # 8	A 8	A # 8	B 8	C 9

12. Drum kit

- Press the [Drum kit] button, the digital screen will display "ON". Then, all the keys will become into percussion tone. Press the [Drum kit] button again to turn off the percussion tone. The digital screen will display "OFF".

13. Single / finger chord functions

- Press the [►] key, then press the [Single] key, the digital screen shows "SIN", and the single finger chord is start; or press the [Finger] key, then the digital screen shows "FIN", and the finger chord is open. At this time, 14 white keys and 10 black keys in the bass area of the key can be selected to synchronize the single/finger chord accompaniment; then press the [►] key, then the single/finger chord accompaniment stops.

14. Tempo

- When playing rhythm or demo song, press [Tempo+ /Tempo -] to adjust the playing speed.
- The default position is 120, the maximum can be adjusted to 300, the minimum can be reduced to 30.
- The speed of different DEMO song is different, and the specific speed shall prevail.

15. Metronome

- Press the [Metronome] button to issue the metronome sound. The metronome will play at the current speed. Press the [metronome] key again to select the beat, a total of 4 beats. Press the [Metronome] button again to turn off the metronome.

16. Sync

- 1. Press [Sync] for the first time to enter the synchronization mode, and press [Sync] for the second time to exit the synchronization mode.
- 2. When entering the synchronous mode, stop playing the rhythm and press the first 19 keys to automatically play the selected rhythm (chord).

Lists of tone

Number	Name	Number	Name	Number	Name
T000	Acoustic Grand Piano	T043	Contrabass	T086	Lead 7 (fifths)
T001	Bright Acoustic Piano	T044	Tremolo Strings	T087	Lead 8 (bass+lead)
T002	Electric Grand Piano	T045	Pizzicato Strings	T088	Pad 1 (new age)
T003	Honky-tonk Piano	T046	Orchestral Harp	T089	Pad 2 (warm)
T004	Rhodes Piano	T047	Timpani	T090	Pad 3 (polysynth)
T005	Chorused Piano	T048	String Ensemble 1	T091	Pad 4 (choir)
T006	Harpsichord	T049	String Ensemble 2	T092	Pad 5 (bowed)
T007	Clavichord	T050	Synth Strings 1	T093	Pad 6 (metallic)
T008	Celesta	T051	Synth Strings 2	T094	Pad 7 (halo)
T009	Glockenspiel	T052	Choir Aahs	T095	Pad 8 (sweep)
T010	Music box	T053	Voice Oohs	T096	FX 1 (rain)
T011	Vibraphone	T054	Synth Voice	T097	FX 2 (soundtrack)
T012	Marimba	T055	Orchestra Hit	T098	FX 3 (crystal)
T013	Xylophone	T056	Trumpet	T099	FX 4 (atmosphere)
T014	Tubular Bell	T057	Trombone	T100	FX 5 (brightness)
T015	Dulcimer	T058	Tuba	T101	FX 6 (goblins)
T016	Drawbar Organ	T059	Muted Trumpet	T102	FX 7 (echoes)
T017	Percussive Organ	T060	French Horn	T103	FX 8 (sci-fi)
T018	Rock Organ	T061	Brass Section	T104	Sitar
T019	Church Organ	T062	Synth Brass 1	T105	Banjo
T020	Reed Organ	T063	Synth Brass 2	T106	Shamisen
T021	Accordion	T064	Soprano Sax	T107	Koto
T022	Harmonica	T065	Alto Sax	T108	Kalimba
T023	Tango Accordion	T066	Tenor Sax	T109	Bagpipe
T024	Acoustic Guitar (nylon)	T067	Baritone Sax	T110	Fiddle
T025	Acoustic Guitar (steel)	T068	Oboe	T111	Shanai
T026	Electric Guitar (jazz)	T069	English Horn	T112	Tinkle Bell
T027	Electric Guitar (clean)	T070	Bassoon	T113	Agogo
T028	Electric Guitar (muted)	T071	Clarinet	T114	Steel Drums
T029	Overdriven Guitar	T072	Piccolo	T115	Woodblock
T030	Distortion Guitar	T073	Flute	T116	Taiko Drum
T031	Guitar Harmonics	T074	Recorder	T117	Melodic Tom
T032	Acoustic Bass	T075	Pan Flute	T118	Synth Drum
T033	Electric Bass(finger)	T076	Bottle Blow	T119	Reverse Cymbal
T034	Electric Bass (pick)	T077	Shakuhachi	T120	Guitar Fret Noise
T035	Fretless Bass	T078	Whistle	T121	Breath Noise
T036	Slap Bass 1	T079	Ocarina	T122	Seashore
T037	Slap Bass 2	T080	Lead 1 (square)	T123	Bird Tweet
T038	Synth Bass 1	T081	Lead 2 (sawtooth)	T124	Telephone Ring
T039	Synth Bass 2	T082	Lead 3 (calliope lead)	T125	Helicopter
T040	Violin	T083	Lead 4 (chiff lead)	T126	Applause
T041	Viola	T084	Lead 5 (charang)	T127	Gunshot
T042	Cello	T085	Lead 6 (voice)		

Lists of rhythm

Number	Name	Number	Name	Number	Name
R000	60's RockN	R043	Fusion Shuffl 2	R086	Country Ballad
R001	Standard Rock	R044	Club Pop1	R087	Love Song
R002	Brit Rock Pop	R045	Club Pop2	R088	Modern Country Pop
R003	60's Vintage Rock	R046	16 Beat Pop1	R089	Electro Pop
R004	Chart Rock Shfl	R047	16 Beat Pop2	R090	Acoustic Ballad
R005	60's Pop Rock	R048	8 Beat Pop1	R091	Piano Ballad
R006	Rock Billy	R049	8 Beat Pop2	R092	R&B Ballad
R007	Rock Boogie	R050	8 Beat Soul1	R093	Rock Ballad
R008	Rock Cha Cha	R051	8 Beat Soul2	R094	Slow & Easy
R009	Rock Classical	R052	8 Beat Rock1	R095	Analog Ballad
R010	Rock Shuffle	R053	8 Beat Rock2	R096	Slow Rock 1
R011	Rock Pop	R054	Classic 8Beat	R097	Slow Rock 2
R012	Rock'n Roll 1	R055	Vintage Gtr Pop	R098	Slow Rock 3
R013	Rock'n Roll 2	R056	Schlager Italia	R099	Slow Soul
R014	Straight Rock	R057	Waltz	R100	8 Beat Adria
R015	Jazz Rock	R058	Cha Cha	R101	Classic Piano
R016	Fast Gospel	R059	Rumba	R102	80's EP Ballad
R017	Folk Rock	R060	Jive	R103	80's Boy Band
R018	Skiffle	R061	Pasodoble	R104	Country Ballad
R019	Funk Pop Rock	R062	Samba1	R105	Country Two Step
R020	Contemp Rock	R063	Samba2	R106	Country 1
R021	Acoustic Rock	R064	Schlager Rock 1	R107	Country 2
R022	50's Pop	R065	Schlager Rock 2	R108	Finger Pickin
R023	Cool Pop	R066	Fox Trot	R109	Country Brothers
R024	Groovy Pop	R067	Viennese Waltz	R110	New Country
R025	60's Vintage Pop	R068	Tango1	R111	Easy Country
R026	80's Pop	R069	Tango2	R112	70's Chart Cntry
R027	Rap Pop	R070	German Waltz	R113	Hoedown
R028	Pop Rock	R071	Carnival	R114	Country Shuffle
R029	60's Soul	R072	Organ Samba	R115	70's Disco1
R030	70's Soul	R073	Reel	R116	70's Disco2
R031	Funk	R074	Gay Gordons	R117	Funky Disco
R032	16 Beat Shuffle	R075	Scand Waltz	R118	Saturday Night
R033	Twist	R076	70's Chart Ballad	R119	Club Latin
R034	British Pop1	R077	Romantic Ballad	R120	Disco Chocolate
R035	British Pop2	R078	90's Cool Ballad	R121	Disco Fox
R036	Hard Rock1	R079	Alp Ballad1	R122	Disco Funk
R037	Hard Rock2	R080	Alp Ballad2	R123	Disco Hands
R038	Fusion1	R081	E. Ballad	R124	Disco Party
R039	Fusion2	R082	Unplugged	R125	Disco Samba
R040	Funk Shuffl 1	R083	Pop Ballad	R126	UK Pop
R041	Funk Shuffl 2	R084	Pop New Age	R127	Club Dance
R042	Fusion Shuffl 1	R085	8 Beat Modern		

Producent: Shanghai muxinmuyeyouxiangongsi Adres:
Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, szanghaj 200000 CN.

Import do AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Import do USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

REP	REZENT KE
-----	-----------

E-CrossStu GmbH
Mainzer Landstr.69, 60329 Frankfurt nad Menem.

REPUBLIKA	Wielkiej Brytanii
-----------	-------------------

YH CONSULTING SPÓŁKA Z OGRANICZONĄ ODPOWIEDZIALNOŚCIĄ,
C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX





Technische ondersteuning en e-garantiecertificaat
www.vevor.com/support

Handoprolbare piano gebruikershandleiding

Model: BR-A88



Technische ondersteuning en e-garantiecertificaat
www.vevor.com/support

We blijven ons inzetten om u gereedschap tegen een concurrerende prijs te bieden.
"Bespaar de helft", "Halve prijs" of andere soortgelijke uitdrukkingen die door ons worden gebruikt vertegenwoordigt slechts een schatting van de besparingen die u zou kunnen profiteren als u bepaalde gereedschappen bij ons koopt in vergelijking met de grote topmerken en betekent niet noodzakelijkerwijs dat deze alle categorieën van aangeboden gereedschappen omvatten door ons. Wij verzoeken u vriendelijk om bij het plaatsen van een bestelling bij ons goed na te gaan of u daadwerkelijk de helft bespaart in vergelijking met de grote topmerken.

Model:BR-A88



(De afbeelding is alleen ter referentie, raadpleeg het werkelijke object)

 
HULP NODIG? NEEM CONTACT MET ONS OP!

Heeft u productvragen? Technische ondersteuning nodig? Neem gerust contact met ons op:

Technische

ondersteuning en e-garantiecertificaat www.vevor.com/support

Dit is de originele instructie. Lees alle handleidingen zorgvuldig door voordat u ermee aan de slag gaat. VEVOR behoudt zich een duidelijke interpretatie van onze gebruikershandleiding voor. Het uiterlijk van het product is afhankelijk van het product dat u heeft ontvangen. Vergeef ons alstublieft dat we u niet opnieuw informeren als er technologie- of software-updates zijn voor ons product.

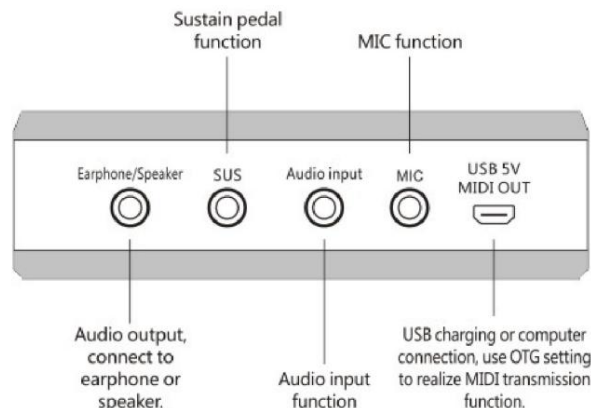

Power indicator light

1. The red LED is the power on indicator.
2. The charging indicator is green. After USB charging, the light will turn on and go out when it is full. When the power is high or full, plug in the USB charging, charging indicator will flash or off is normal.
3. Battery: High-capacity lithium battery, charging time is about 5H, please charge it for more than 5H for the first time. Charging adapter: 5V 1A

Product Function Description

1. Tone

- Built-in 128 kinds of tone.
- The preset number is 000, and the digital screen displays "000". When the tone is selected, press the [Tone + / Tone -] button to select the loop.
- Press the digital tone key, you can directly choose 000-127 tone.

2. Rhythm

- Built-in 128 kinds of rhythm.
- Press [►||] key to enter rhythm mode automatically, and the digital screen displays "000". Press [►||] key again, rhythm mode will stop.
- In the Rhythm mode, press the [Rhy + / Rhy -] button to select the loop.

3. Fill in

- In the Rhythm mode, press the [Fill in] button to insert a 1-2 syllable on the original basis.

4. Teaching Function

- Press the [OKON] button to enter the teaching mode automatically. Demo song accompaniment plays cycle, and wait for the user to play. Touch any key to play the main theme of the demo song. Press the [OKON] button to select the loop. Press [►||] to stops demo.

5. [►||]

- Press [►||], automatically enter rhythm playing mode, press [►||] again, rhythm playing stops.

6. Demonstration song

- Built-in 15 demo songs.
- Press the [Demo] key to play the demo song automatically.
- You can play the piano with demo song at the same time.

Number	English song name	Number	English song name
S000	Sky Castle	S010	A Comme Amour
S001	Canon	S011	The Serene Afternoon
S002	Seven Mile Fragrance	S012	Street Where Wind Resides
S003	Mariage D'amour	S013	Suddenly Missing You
S004	Melody of the Night 5	S014	Platforms
S005	The Wind Forest	S015	Clarinet Polka
S006	One Summer's Day	S016	Fountain
S007	Summer	S017	She Wore A Yellow Ribbon
S008	Serenade	S018	Go Home
S009	The Silence of the Night Sky	S019	Dingdong Merry Gentlemen

7. Record / Play

- Record :
Press this key to enter recording mode, and then press any key or drum key to start recording. The maximum number of recordings is 700, when the record is full, it cannot continue to record a note, when recording, you can press the play button to play any time. Each time this key is pressed, the previous memory is erased and the recording mode is re-entered.
- Play :
The first press the [play] to play the recorded notes or drums, and the second press the [play] to stop playing.
Press [play] to exit recording mode.
If no value has been recorded before, pressing [play] does nothing.

8. Program

- Press the [program], the digital screen display **P 0 9**, start the program mode, at this time all the keys into percussion.

9. Volume

- Press the [() / ()] button to increase or decrease the sound, and the digital screen will display the corresponding volume level. The default volume is 8, the maximum volume is 16.

10. Vibrato

- Press the [Vibrato] key to turn on the Vibrato function. The digital screen will display "U16". It will make the sound with vibrato effect in the performance. Press the [Vibrato] button again to turn off the vibrato effect. The digital screen will display "OFF".

11. Sustain

- Press the [Sustain] key to turn on the sustain function. The digital screen will display "SUS". It will make the sound with sustain effect in the performance. Press the [sustain] button again to turn off the sustain effect. The digital screen will display "OFF".

88 key keyboard drum corresponding figure

							
A 1	A # 1	B 1	C 2	C # 2	D 2	D # 2	E 2
							
F 2	F # 2	G 2	G # 2	A 2	A # 2	B 2	C 3
							
C # 3	D 3	D # 3	E 3	F 3	F # 3	G 3	G # 3
							
A 3	A # 3	B 3	C 4	C # 4	D 4	D # 4	E 4
							
F 4	F # 4	G 4	G # 4	A 4	A # 4	B 4	C 5
							
C # 5	D 5	D # 5	E 5	F 5	F # 5	G 5	G # 5
							
A 5	A # 5	B 5	C 6	C # 6	D 6	D # 6	E 6
							
F 6	F # 6	G 6	G # 6	A 6	A # 6	B 6	C 7
							
C # 7	D 7	D # 7	E 7	F 7	F # 7	G 7	G # 7
							
A 7	A # 7	B 7	C 8	C # 8	D 8	D # 8	E 8
							
F 8	F # 8	G 8	G # 8	A 8	A # 8	B 8	C 9

12. Drum kit

- Press the [Drum kit] button, the digital screen will display "ON". Then, all the keys will become into percussion tone. Press the [Drum kit] button again to turn off the percussion tone. The digital screen will display "OFF".

13. Single / finger chord functions

- Press the [►] key, then press the [Single] key, the digital screen shows "SIN", and the single finger chord is start; or press the [Finger] key, then the digital screen shows "FIN", and the finger chord is open. At this time, 14 white keys and 10 black keys in the bass area of the key can be selected to synchronize the single/finger chord accompaniment; then press the [►] key, then the single/finger chord accompaniment stops.

14. Tempo

- When playing rhythm or demo song, press [Tempo+ /Tempo -] to adjust the playing speed.
- The default position is 120, the maximum can be adjusted to 300, the minimum can be reduced to 30.
- The speed of different DEMO song is different, and the specific speed shall prevail.

15. Metronome

- Press the [Metronome] button to issue the metronome sound. The metronome will play at the current speed. Press the [metronome] key again to select the beat, a total of 4 beats. Press the [Metronome] button again to turn off the metronome.

16. Sync

- 1. Press [Sync] for the first time to enter the synchronization mode, and press [Sync] for the second time to exit the synchronization mode.
- 2. When entering the synchronous mode, stop playing the rhythm and press the first 19 keys to automatically play the selected rhythm (chord).

Lists of tone

Number	Name	Number	Name	Number	Name
T000	Acoustic Grand Piano	T043	Contrabass	T086	Lead 7 (fifths)
T001	Bright Acoustic Piano	T044	Tremolo Strings	T087	Lead 8 (bass+lead)
T002	Electric Grand Piano	T045	Pizzicato Strings	T088	Pad 1 (new age)
T003	Honky-tonk Piano	T046	Orchestral Harp	T089	Pad 2 (warm)
T004	Rhodes Piano	T047	Timpani	T090	Pad 3 (polysynth)
T005	Chorused Piano	T048	String Ensemble 1	T091	Pad 4 (choir)
T006	Harpsichord	T049	String Ensemble 2	T092	Pad 5 (bowed)
T007	Clavichord	T050	Synth Strings 1	T093	Pad 6 (metallic)
T008	Celesta	T051	Synth Strings 2	T094	Pad 7 (halo)
T009	Glockenspiel	T052	Choir Aahs	T095	Pad 8 (sweep)
T010	Music box	T053	Voice Oohs	T096	FX 1 (rain)
T011	Vibraphone	T054	Synth Voice	T097	FX 2 (soundtrack)
T012	Marimba	T055	Orchestra Hit	T098	FX 3 (crystal)
T013	Xylophone	T056	Trumpet	T099	FX 4 (atmosphere)
T014	Tubular Bell	T057	Trombone	T100	FX 5 (brightness)
T015	Dulcimer	T058	Tuba	T101	FX 6 (goblins)
T016	Drawbar Organ	T059	Muted Trumpet	T102	FX 7 (echoes)
T017	Percussive Organ	T060	French Horn	T103	FX 8 (sci-fi)
T018	Rock Organ	T061	Brass Section	T104	Sitar
T019	Church Organ	T062	Synth Brass 1	T105	Banjo
T020	Reed Organ	T063	Synth Brass 2	T106	Shamisen
T021	Accordion	T064	Soprano Sax	T107	Koto
T022	Harmonica	T065	Alto Sax	T108	Kalimba
T023	Tango Accordion	T066	Tenor Sax	T109	Bagpipe
T024	Acoustic Guitar (nylon)	T067	Baritone Sax	T110	Fiddle
T025	Acoustic Guitar (steel)	T068	Oboe	T111	Shanai
T026	Electric Guitar (jazz)	T069	English Horn	T112	Tinkle Bell
T027	Electric Guitar (clean)	T070	Bassoon	T113	Agogo
T028	Electric Guitar (muted)	T071	Clarinet	T114	Steel Drums
T029	Overdriven Guitar	T072	Piccolo	T115	Woodblock
T030	Distortion Guitar	T073	Flute	T116	Taiko Drum
T031	Guitar Harmonics	T074	Recorder	T117	Melodic Tom
T032	Acoustic Bass	T075	Pan Flute	T118	Synth Drum
T033	Electric Bass(finger)	T076	Bottle Blow	T119	Reverse Cymbal
T034	Electric Bass (pick)	T077	Shakuhachi	T120	Guitar Fret Noise
T035	Fretless Bass	T078	Whistle	T121	Breath Noise
T036	Slap Bass 1	T079	Ocarina	T122	Seashore
T037	Slap Bass 2	T080	Lead 1 (square)	T123	Bird Tweet
T038	Synth Bass 1	T081	Lead 2 (sawtooth)	T124	Telephone Ring
T039	Synth Bass 2	T082	Lead 3 (calliope lead)	T125	Helicopter
T040	Violin	T083	Lead 4 (chiff lead)	T126	Applause
T041	Viola	T084	Lead 5 (charang)	T127	Gunshot
T042	Cello	T085	Lead 6 (voice)		

Lists of rhythm

Number	Name	Number	Name	Number	Name
R000	60's RockN	R043	Fusion Shuffl 2	R086	Country Ballad
R001	Standard Rock	R044	Club Pop1	R087	Love Song
R002	Brit Rock Pop	R045	Club Pop2	R088	Modern Country Pop
R003	60's Vintage Rock	R046	16 Beat Pop1	R089	Electro Pop
R004	Chart Rock Shfl	R047	16 Beat Pop2	R090	Acoustic Ballad
R005	60's Pop Rock	R048	8 Beat Pop1	R091	Piano Ballad
R006	Rock Billy	R049	8 Beat Pop2	R092	R&B Ballad
R007	Rock Boogie	R050	8 Beat Soul1	R093	Rock Ballad
R008	Rock Cha Cha	R051	8 Beat Soul2	R094	Slow & Easy
R009	Rock Classical	R052	8 Beat Rock1	R095	Analog Ballad
R010	Rock Shuffle	R053	8 Beat Rock2	R096	Slow Rock 1
R011	Rock Pop	R054	Classic 8Beat	R097	Slow Rock 2
R012	Rock'n Roll 1	R055	Vintage Gtr Pop	R098	Slow Rock 3
R013	Rock'n Roll 2	R056	Schlager Italia	R099	Slow Soul
R014	Straight Rock	R057	Waltz	R100	8 Beat Adria
R015	Jazz Rock	R058	Cha Cha	R101	Classic Piano
R016	Fast Gospel	R059	Rumba	R102	80's EP Ballad
R017	Folk Rock	R060	Jive	R103	80's Boy Band
R018	Skiffle	R061	Pasodoble	R104	Country Ballad
R019	Funk Pop Rock	R062	Samba1	R105	Country Two Step
R020	Contemp Rock	R063	Samba2	R106	Country 1
R021	Acoustic Rock	R064	Schlager Rock 1	R107	Country 2
R022	50's Pop	R065	Schlager Rock 2	R108	Finger Pickin
R023	Cool Pop	R066	Fox Trot	R109	Country Brothers
R024	Groovy Pop	R067	Viennese Waltz	R110	New Country
R025	60's Vintage Pop	R068	Tango1	R111	Easy Country
R026	80's Pop	R069	Tango2	R112	70's Chart Cntry
R027	Rap Pop	R070	German Waltz	R113	Hoedown
R028	Pop Rock	R071	Carnival	R114	Country Shuffle
R029	60's Soul	R072	Organ Samba	R115	70's Disco1
R030	70's Soul	R073	Reel	R116	70's Disco2
R031	Funk	R074	Gay Gordons	R117	Funky Disco
R032	16 Beat Shuffle	R075	Scand Waltz	R118	Saturday Night
R033	Twist	R076	70's Chart Ballad	R119	Club Latin
R034	British Pop1	R077	Romantic Ballad	R120	Disco Chocolate
R035	British Pop2	R078	90's Cool Ballad	R121	Disco Fox
R036	Hard Rock1	R079	Alp Ballad1	R122	Disco Funk
R037	Hard Rock2	R080	Alp Ballad2	R123	Disco Hands
R038	Fusion1	R081	E. Ballad	R124	Disco Party
R039	Fusion2	R082	Unplugged	R125	Disco Samba
R040	Funk Shuffl 1	R083	Pop Ballad	R126	UK Pop
R041	Funk Shuffl 2	R084	Pop New Age	R127	Club Dance
R042	Fusion Shuffl 1	R085	8 Beat Modern		

Fabrikant: Shanghaimuxinmuyeyouxiangongsi **Adres:**

Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Geïmporteerd naar AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW
2122 Australië

Geïmporteerd naar de VS: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place,
Rancho Cucamonga, CA 91730



E-CrossStu GmbH
Mainzer Landstr.69, 60329 Frankfurt am Main.



YH CONSULTING LIMITED.
C/O YH Consulting Limited Kantoor 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX





Teknisk support och e-garanticertifikat
www.vevor.com/support

Hand roll up piano bruksanvisning

Modell: BR-A88



Teknisk support och e-garanticertifikat
www.vevor.com/support

Vi fortsätter att vara engagerade i att ge dig verktyg till konkurrenskraftiga priser. "Spara hälften", "halva priset" eller andra liknande uttryck som används av oss representerar bara en uppskattning av besparingar du kan dra nytta av att köpa vissa verktyg hos oss jämfört med de stora toppmärkena och betyder inte nödvändigtvis att täcka alla kategorier av verktyg som erbjuds av oss. Du påminns vänligen om att noggrant kontrollera när du gör en beställning hos oss om du faktiskt sparar hälften i jämförelse med de främsta stora varumärkena.

Modell: BR-A88

 


(Bilderna är endast för referens, se det faktiska objektet)

BEHÖVS HJÄLP? KONTAKTA OSS!

Har du produktfrågor? Behöver du teknisk support? Kontakta oss gärna: **Teknisk support och e-garanticertifikat** www.vevor.com/support

Detta är den ursprungliga instruktionen, läs alla instruktioner noggrant innan du använder den. VEVOR reserverar sig för en tydlig tolkning av vår användarmanual. Utseendet på produkten är beroende av den produkt du fått. Ursäkta oss att vi inte kommer att informera dig igen om det finns någon teknik eller mjukvaruuppdateringar på vår produkt.

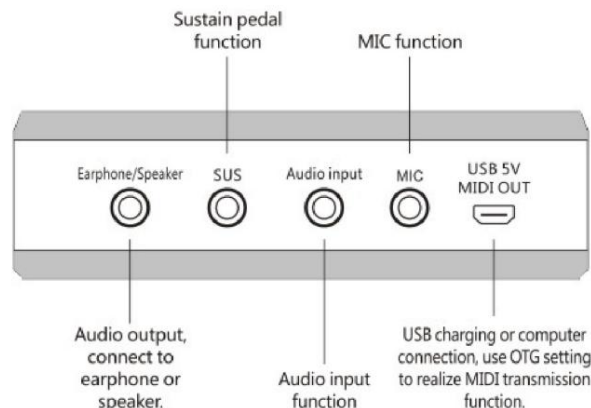

Power indicator light

1. The red LED is the power on indicator.
2. The charging indicator is green. After USB charging, the light will turn on and go out when it is full. When the power is high or full, plug in the USB charging, charging indicator will flash or off is normal.
3. Battery: High-capacity lithium battery, charging time is about 5H, please charge it for more than 5H for the first time. Charging adapter: 5V 1A

Product Function Description

1. Tone

- Built-in 128 kinds of tone.
- The preset number is 000, and the digital screen displays "000". When the tone is selected, press the [Tone + / Tone -] button to select the loop.
- Press the digital tone key, you can directly choose 000-127 tone.

2. Rhythm

- Built-in 128 kinds of rhythm.
- Press [►||] key to enter rhythm mode automatically, and the digital screen displays "000". Press [►||] key again, rhythm mode will stop.
- In the Rhythm mode, press the [Rhy + / Rhy -] button to select the loop.

3. Fill in

- In the Rhythm mode, press the [Fill in] button to insert a 1-2 syllable on the original basis.

4. Teaching Function

- Press the [OKON] button to enter the teaching mode automatically. Demo song accompaniment plays cycle, and wait for the user to play. Touch any key to play the main theme of the demo song. Press the [OKON] button to select the loop. Press [►||] to stops demo.

5. [►||]

- Press [►||] , automatically enter rhythm playing mode, press [►||] again, rhythm playing stops.

6. Demonstration song

- Built-in 15 demo songs.
- Press the [Demo] key to play the demo song automatically.
- You can play the piano with demo song at the same time.

Number	English song name	Number	English song name
S000	Sky Castle	S010	A Comme Amour
S001	Canon	S011	The Serene Afternoon
S002	Seven Mile Fragrance	S012	Street Where Wind Resides
S003	Mariage D'amour	S013	Suddenly Missing You
S004	Melody of the Night 5	S014	Platforms
S005	The Wind Forest	S015	Clarinet Polka
S006	One Summer's Day	S016	Fountain
S007	Summer	S017	She Wore A Yellow Ribbon
S008	Serenade	S018	Go Home
S009	The Silence of the Night Sky	S019	Dingdong Merry Gentlemen

7. Record / Play

- Record :
Press this key to enter recording mode, and then press any key or drum key to start recording. The maximum number of recordings is 700, when the record is full, it cannot continue to record a note, when recording, you can press the play button to play any time. Each time this key is pressed, the previous memory is erased and the recording mode is re-entered.
- Play :
The first press the [play] to play the recorded notes or drums, and the second press the [play] to stop playing.
Press [play] to exit recording mode.
If no value has been recorded before, pressing [play] does nothing.

8. Program

- Press the [program], the digital screen display **P 0 0** , start the program mode, at this time all the keys into percussion.

9. Volume

- Press the [(V) / (V)] button to increase or decrease the sound, and the digital screen will display the corresponding volume level. The default volume is 8, the maximum volume is 16.

10. Vibrato

- Press the [Vibrato] key to turn on the Vibrato function. The digital screen will display "U16". It will make the sound with vibrato effect in the performance. Press the [Vibrato] button again to turn off the vibrato effect. The digital screen will display "OFF".

11. Sustain

- Press the [Sustain] key to turn on the sustain function. The digital screen will display "SUS". It will make the sound with sustain effect in the performance. Press the [sustain] button again to turn off the sustain effect. The digital screen will display "OFF".

88 key keyboard drum corresponding figure

							
A 1	A # 1	B 1	C 2	C # 2	D 2	D # 2	E 2
							
F 2	F # 2	G 2	G # 2	A 2	A # 2	B 2	C 3
							
C # 3	D 3	D # 3	E 3	F 3	F # 3	G 3	G # 3
							
A 3	A # 3	B 3	C 4	C # 4	D 4	D # 4	E 4
							
F 4	F # 4	G 4	G # 4	A 4	A # 4	B 4	C 5
							
C # 5	D 5	D # 5	E 5	F 5	F # 5	G 5	G # 5
							
A 5	A # 5	B 5	C 6	C # 6	D 6	D # 6	E 6
							
F 6	F # 6	G 6	G # 6	A 6	A # 6	B 6	C 7
							
C # 7	D 7	D # 7	E 7	F 7	F # 7	G 7	G # 7
							
A 7	A # 7	B 7	C 8	C # 8	D 8	D # 8	E 8
							
F 8	F # 8	G 8	G # 8	A 8	A # 8	B 8	C 9

12. Drum kit

- Press the [Drum kit] button, the digital screen will display "ON". Then, all the keys will become into percussion tone. Press the [Drum kit] button again to turn off the percussion tone. The digital screen will display "OFF".

13. Single / finger chord functions

- Press the [►||] key, then press the [Single] key, the digital screen shows "SIN", and the single finger chord is start; or press the [Finger] key, then the digital screen shows "FIN", and the finger chord is open. At this time, 14 white keys and 10 black keys in the bass area of the key can be selected to synchronize the single/finger chord accompaniment; then press the [►||] key, then the single/finger chord accompaniment stops.

14. Tempo

- When playing rhythm or demo song, press [Tempo+ /Tempo -] to adjust the playing speed.
- The default position is 120, the maximum can be adjusted to 300, the minimum can be reduced to 30.
- The speed of different DEMO song is different, and the specific speed shall prevail.

15. Metronome

- Press the [Metronome] button to issue the metronome sound. The metronome will play at the current speed. Press the [metronome] key again to select the beat, a total of 4 beats. Press the [Metronome] button again to turn off the metronome.

16. Sync

- 1. Press [Sync] for the first time to enter the synchronization mode, and press [Sync] for the second time to exit the synchronization mode.
- 2. When entering the synchronous mode, stop playing the rhythm and press the first 19 keys to automatically play the selected rhythm (chord).

Lists of tone

Number	Name	Number	Name	Number	Name
T000	Acoustic Grand Piano	T043	Contrabass	T086	Lead 7 (fifths)
T001	Bright Acoustic Piano	T044	Tremolo Strings	T087	Lead 8 (bass+lead)
T002	Electric Grand Piano	T045	Pizzicato Strings	T088	Pad 1 (new age)
T003	Honky-tonk Piano	T046	Orchestral Harp	T089	Pad 2 (warm)
T004	Rhodes Piano	T047	Timpani	T090	Pad 3 (polysynth)
T005	Chorused Piano	T048	String Ensemble 1	T091	Pad 4 (choir)
T006	Harpsichord	T049	String Ensemble 2	T092	Pad 5 (bowed)
T007	Clavichord	T050	Synth Strings 1	T093	Pad 6 (metallic)
T008	Celesta	T051	Synth Strings 2	T094	Pad 7 (halo)
T009	Glockenspiel	T052	Choir Aahs	T095	Pad 8 (sweep)
T010	Music box	T053	Voice Oohs	T096	FX 1 (rain)
T011	Vibraphone	T054	Synth Voice	T097	FX 2 (soundtrack)
T012	Marimba	T055	Orchestra Hit	T098	FX 3 (crystal)
T013	Xylophone	T056	Trumpet	T099	FX 4 (atmosphere)
T014	Tubular Bell	T057	Trombone	T100	FX 5 (brightness)
T015	Dulcimer	T058	Tuba	T101	FX 6 (goblins)
T016	Drawbar Organ	T059	Muted Trumpet	T102	FX 7 (echoes)
T017	Percussive Organ	T060	French Horn	T103	FX 8 (sci-fi)
T018	Rock Organ	T061	Brass Section	T104	Sitar
T019	Church Organ	T062	Synth Brass 1	T105	Banjo
T020	Reed Organ	T063	Synth Brass 2	T106	Shamisen
T021	Accordion	T064	Soprano Sax	T107	Koto
T022	Harmonica	T065	Alto Sax	T108	Kalimba
T023	Tango Accordion	T066	Tenor Sax	T109	Bagpipe
T024	Acoustic Guitar (nylon)	T067	Baritone Sax	T110	Fiddle
T025	Acoustic Guitar (steel)	T068	Oboe	T111	Shanai
T026	Electric Guitar (jazz)	T069	English Horn	T112	Tinkle Bell
T027	Electric Guitar (clean)	T070	Bassoon	T113	Agogo
T028	Electric Guitar (muted)	T071	Clarinet	T114	Steel Drums
T029	Overdriven Guitar	T072	Piccolo	T115	Woodblock
T030	Distortion Guitar	T073	Flute	T116	Taiko Drum
T031	Guitar Harmonics	T074	Recorder	T117	Melodic Tom
T032	Acoustic Bass	T075	Pan Flute	T118	Synth Drum
T033	Electric Bass(finger)	T076	Bottle Blow	T119	Reverse Cymbal
T034	Electric Bass (pick)	T077	Shakuhachi	T120	Guitar Fret Noise
T035	Fretless Bass	T078	Whistle	T121	Breath Noise
T036	Slap Bass 1	T079	Ocarina	T122	Seashore
T037	Slap Bass 2	T080	Lead 1 (square)	T123	Bird Tweet
T038	Synth Bass 1	T081	Lead 2 (sawtooth)	T124	Telephone Ring
T039	Synth Bass 2	T082	Lead 3 (calliope lead)	T125	Helicopter
T040	Violin	T083	Lead 4 (chiff lead)	T126	Applause
T041	Viola	T084	Lead 5 (charang)	T127	Gunshot
T042	Cello	T085	Lead 6 (voice)		

Lists of rhythm

Number	Name	Number	Name	Number	Name
R000	60's RockN	R043	Fusion Shuffl 2	R086	Country Ballad
R001	Standard Rock	R044	Club Pop1	R087	Love Song
R002	Brit Rock Pop	R045	Club Pop2	R088	Modern Country Pop
R003	60's Vintage Rock	R046	16 Beat Pop1	R089	Electro Pop
R004	Chart Rock Shfl	R047	16 Beat Pop2	R090	Acoustic Ballad
R005	60's Pop Rock	R048	8 Beat Pop1	R091	Piano Ballad
R006	Rock Billy	R049	8 Beat Pop2	R092	R&B Ballad
R007	Rock Boogie	R050	8 Beat Soul1	R093	Rock Ballad
R008	Rock Cha Cha	R051	8 Beat Soul2	R094	Slow & Easy
R009	Rock Classical	R052	8 Beat Rock1	R095	Analog Ballad
R010	Rock Shuffle	R053	8 Beat Rock2	R096	Slow Rock 1
R011	Rock Pop	R054	Classic 8Beat	R097	Slow Rock 2
R012	Rock'n Roll 1	R055	Vintage Gtr Pop	R098	Slow Rock 3
R013	Rock'n Roll 2	R056	Schlager Italia	R099	Slow Soul
R014	Straight Rock	R057	Waltz	R100	8 Beat Adria
R015	Jazz Rock	R058	Cha Cha	R101	Classic Piano
R016	Fast Gospel	R059	Rumba	R102	80's EP Ballad
R017	Folk Rock	R060	Jive	R103	80's Boy Band
R018	Skiffle	R061	Pasodoble	R104	Country Ballad
R019	Funk Pop Rock	R062	Samba1	R105	Country Two Step
R020	Contemp Rock	R063	Samba2	R106	Country 1
R021	Acoustic Rock	R064	Schlager Rock 1	R107	Country 2
R022	50's Pop	R065	Schlager Rock 2	R108	Finger Pickin
R023	Cool Pop	R066	Fox Trot	R109	Country Brothers
R024	Groovy Pop	R067	Viennese Waltz	R110	New Country
R025	60's Vintage Pop	R068	Tango1	R111	Easy Country
R026	80's Pop	R069	Tango2	R112	70's Chart Cntry
R027	Rap Pop	R070	German Waltz	R113	Hoedown
R028	Pop Rock	R071	Carnival	R114	Country Shuffle
R029	60's Soul	R072	Organ Samba	R115	70's Disco1
R030	70's Soul	R073	Reel	R116	70's Disco2
R031	Funk	R074	Gay Gordons	R117	Funky Disco
R032	16 Beat Shuffle	R075	Scand Waltz	R118	Saturday Night
R033	Twist	R076	70's Chart Ballad	R119	Club Latin
R034	British Pop1	R077	Romantic Ballad	R120	Disco Chocolate
R035	British Pop2	R078	90's Cool Ballad	R121	Disco Fox
R036	Hard Rock1	R079	Alp Ballad1	R122	Disco Funk
R037	Hard Rock2	R080	Alp Ballad2	R123	Disco Hands
R038	Fusion1	R081	E. Ballad	R124	Disco Party
R039	Fusion2	R082	Unplugged	R125	Disco Samba
R040	Funk Shuffl 1	R083	Pop Ballad	R126	UK Pop
R041	Funk Shuffl 2	R084	Pop New Age	R127	Club Dance
R042	Fusion Shuffl 1	R085	8 Beat Modern		

Tillverkare: Shanghaimuxinmuyeyouxiangongsi **Adress:**

Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Importerad till AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122

Australien

Importerad till USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho

Cucamonga, CA 91730



E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.



YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX

