

INTELLIGENT PET



1. CAUTIONS AND ADVICES

The crossed-out dustbin symbol indicates that batteries, rechargeable batteries, button cells, battery packs, etc. must not be put in the household waste. Batteries are harmful to health and the environment. Please help to protect the environment from health risks. If the toy is out of use, please use common household tool to break the product for built-in rechargeable battery operated toy or unscrew the battery door for replaceable battery operated toy, then take the battery out from the toy. Dispose of battery in accordance with your local battery recycling or disposal laws.

Care and Maintenance:

- Always remove batteries from the toy when it is not being used for a long period of time. (Transmitter only)
- Wipe the toy gently with a clean cloth.
- Keep the toy away from direct heat.
- Do not submerge the toy into water that can damage the electronic assemblies.

Special notes to adults:

- Before first use, Read the user's information together with your child.
- This toy intended to be used in domestic area (house and garden) only.
- Assembly should be performed under adult supervision (changing batteries/ spare parts, trimming etc.).
- Parental guidance is recommended when installing or replacing batteries.
- Do not change or modify anything on the toy.

Battery warnings:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed before being charged. (Transmitter only)
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed. (Transmitter only)
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy. (Transmitter only)
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries. (Transmitter only)
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. (Transmitter only)

WEEE When this appliance is out of use, please remove all batteries and dispose of them separately. Bring electrical appliances to the local collecting points for waste electrical and electronic equipment. Other components can be disposed of in domestic refuse.

This toy is equipped with a LiPo rechargeable battery, please pay attention to the following cautions for safety use:

- Do not dispose the battery in fire or heat.
- Do not use or leave the battery near a heat source such as fire or heater.
- Do not strike or throw the battery against hard surface.
- Do not immerse the battery in water, and keep the battery in a cool dry environment.
- When recharging, only use the battery charger specifically for that purpose.
- Do not over-discharge the battery.
- Do not connect the battery to an electrical outlet.
- Do not directly solder the battery and pierce the battery with a nail or other sharp object.
- Do not transport or store the battery together with metal objects such as necklaces, hairpins etc.
- Do not disassemble or alter the battery.
- Charge the battery every 6 months.
- Toy battery inside can't be replaced

Notes:

- The toy may malfunction under electrostatic discharge interference. If the toy does not respond, reset it.
- Use new alkaline batteries in this toy to obtain best performance.
- This toy must only be used with the recommended charger.

 
Batteries requirements (Transmitter):

Power supply:
Characteristics: DC 3V
Quality and type: 2 x 1.5V "AAA"/LR6 (not included)

Battery requirements (Robot):

Power supply:
Characteristics: DC 5V
Quality and type: 1x3.7V Li-Po rechargeable battery (included)
Capacity: 400 mAh


2.CONTENT

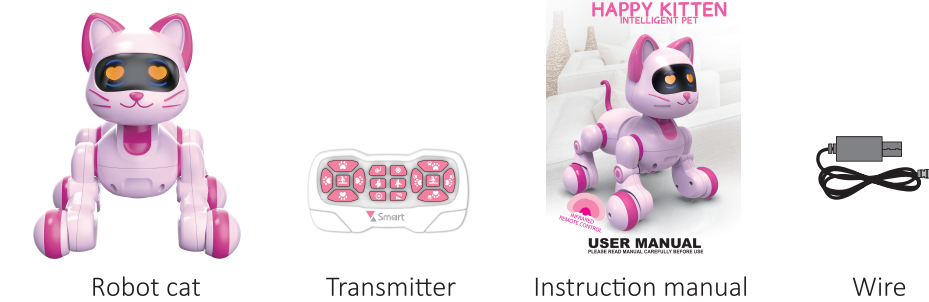

1


3.BATTERIES INSTALLATION IN THE TRANSMITTER

 - 1.Use a philips'head screw to open the battery compartment lid of controller.
- 2.Put 2X1.5V"AAA"batteries inside the battery compartment.
3. Put the lid back and use a screw to tighten it.
- 4.Switch on the on/off button on the back of the transmitter before using

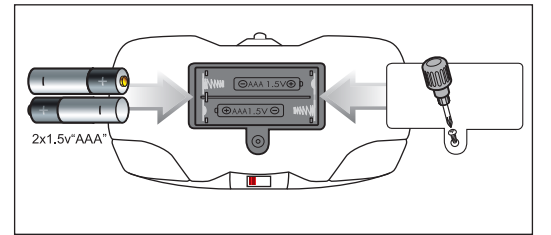


IN THE ROBOT CAT

 - 1.The battery is in the back of the Robot Cat's head.
- 2.To recharge the battery, please connect the robot cat with a power supply through the provided USB wire.
- 3.Switch off the Robot Cat before recharging.
- 4.A red light near the charging port will be on during the recharging process. When fully recharged, this indication light will off.
- 5.The full recharging time is about 2 hours, and it allows about 1 hour playing time after fully charged.

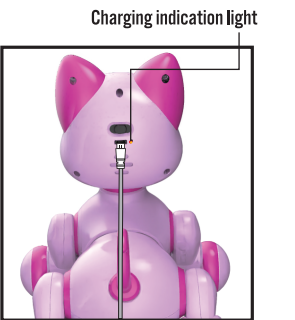

 4.REMOTE CONTROLS AND ROBOT CAT

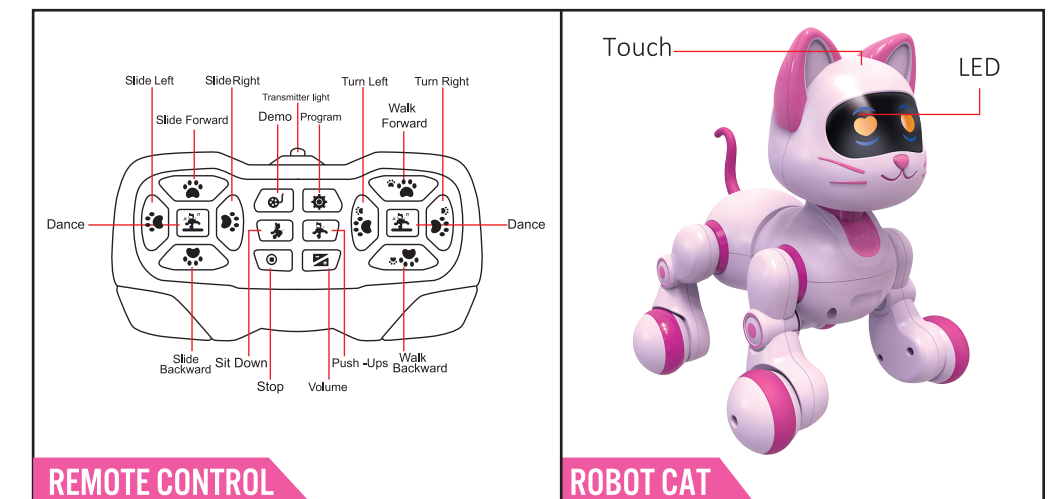

2

5.TURN ON/OFF

 
Switch the ON/OFF button in the back of the Robot Cat's head to start the Robot Cat. The cat will make some Meow sounds.

NOTE: the cat should stay on the flat floor. Without head touching or transmitter from instructions the Robot Cat will enter the Standby mode automatically. Before entering the standby mode, the cat will periodically make some sounds to get attention four times. After entering the standby mode, if to restart the Robot Cat, please switch the ON/OFF button again.



6.INTERACTION FUNCTION

Touch the Robot Cat's forehead, the Robot Cat will make some actions with sounds. There are four types of movement with sounds.

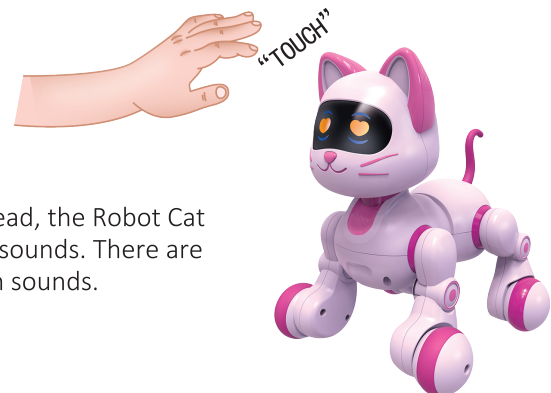


7.SLIDE FORWARD

Press on the transmitter, the robot cat slide forward



8.SLIDE BACKWARD

 Press on the transmitter, the robot cat slide backward.

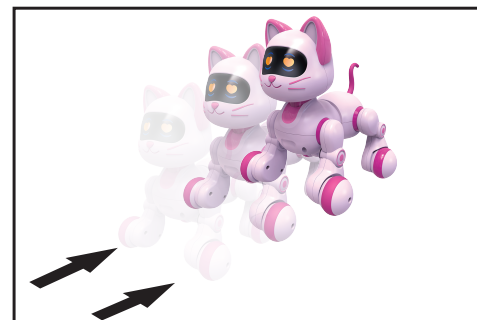

9.TURN LEFT

Press on the transmitter, the robot cat slide to the left.



 
10.TURN RIGHT

Press on the transmitter, the robot cat slide to the right.



11.DANCE MODE

Press on the transmitter, the cat will dance to music. There are five pieces of dancing.

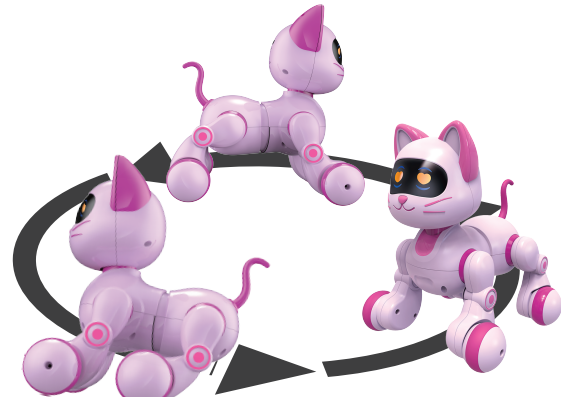


12.WALK FORWARD

Press on the transmitter, the cat walk forward.



13.WALK BACKWARD

 Press on the transmitter, the cat walk backward.

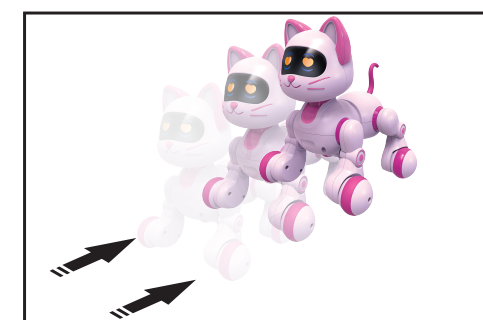

14.WALK TO THE LEFT

Press on the transmitter, the cat walk to the left.



 
15.WALK TO THE RIGHT

Press on the transmitter, the cat walk to the right.




16.DEMO MODE

Press the , the Robot Cat will dance to music and perform some movements and sounds.

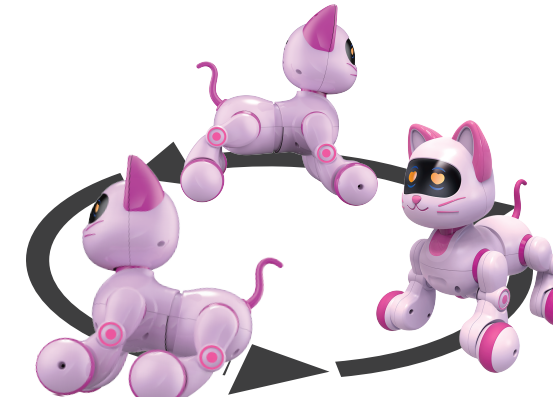

17.PROGRAMMING

 
- 1)Press the "" button and with a "beep" sound to start the programming mode.
- 2)Max 30 actions could be set in the programme, i.e. slide forward/backward, slide left/right, walk forward/backward, walk left/right, sit down, push-up or dance.
- 3)Press the "" button again with two "beep" sounds to perform the program.
- 4)It will automatically exit the program after finished.

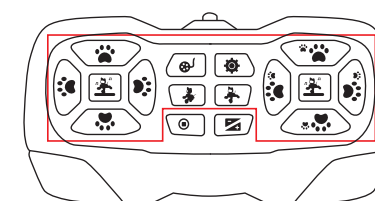

5


18.SIT DOWN

 Press the , the Robot Cat will Meow and sit down. Press this button again, the Robot Cat will stand up with Meow sound.

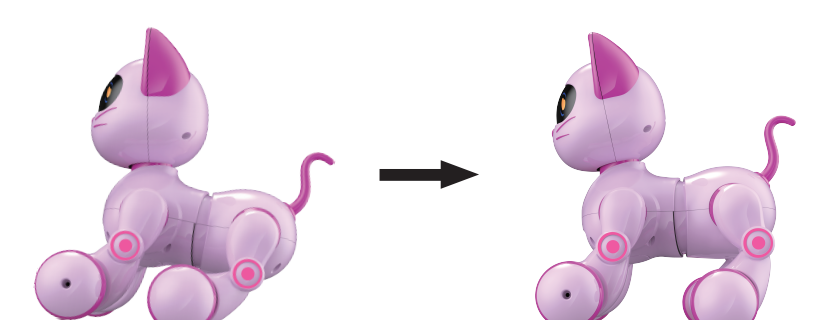

19.PUSH-UPS

 Press the , the Robot Cat will Meow and push-ups. Press this button again, the Robot Cat will stand up with Meow.

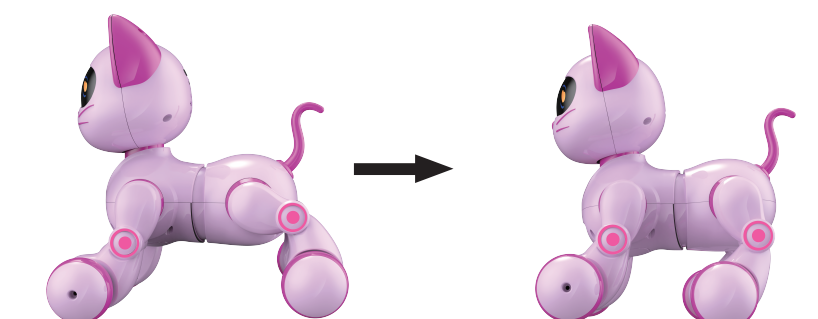

20.STOP

Press on the transmitter, the cat will stop and exit related mode,and stand up.

21.VOLUME CONTROL

Press the , to turn up or turn down the volume. There are 5 levels in circle.

6

3

4

