

Technical Support and E-Warranty Certificate www.vevor.com/support

Manufacturer: SHANTOU CHENGHAI LIANXING TOYS FACTORY

Address: No.3, Row 10, East of Longfeng Road, Longtian, Guangyi Street,

Chenghai District, Shantou, Guangdong province, China

EC REP: E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.

UK REP: YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House, London Road,

Staines-upon-Thames, Surrey, TW18 4AX

Imported to AUS: SIHAO PTY LTD.

1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

RC dump truck Model: 3367

FCC Information (FCC ID:2BEDH-3369):

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2)This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, it may cause harmful interference in radiocommunications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- · Reorient or relocate the receiving antenna.
- · Increase the distance between the product and the receiver.
- · Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for assistance.

Correct Disposal



This product is subject to the provision of european Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be

discarded with normal domestic waste, but must be taken to acollection point for recycling electrical and electronic devices.

Important Notice

Attention please! This product can only be put into massive production after strict performance demonstration and actual testing as well as verify its compliance with the safety standards. The manufacturer or distributor will not be responsible for any accident caused by use of damaged parts or abnormal faulty or broken parts. Nor do we responsible for any accident caused by improper assembly or operation in an unsafe environment during the use of any remote control model. Please make sure to operate this product in a safe environment.

Troubleshooting

| Product problems | Solutions |
|---|--|
| Failure to start the excavator | 1.The power switch is off, please turn it on. 2.The battery is loaded incorrectly. Please check the positive and negative polarity of the battery to ensure correct loading of the battery. 3. The battery is exhausted, please charge the battery or replace the battery. |
| The remote control is unavailable for use | The battery in the transmitter is exhausted, please replace it with a new battery. The excavator is beyond the controlling scope of the transmitter, please keep it in the controllable range. Considering the presence of electromagnetic interference on surroundings, please bring the toy to a spacious site and use it. |

Note: The surrounding electromagnetic wave interference may lead to the remote control car failure, you can restart the remote control car and operate again.










R/C Excavator with Atomizing Function

Instruction Manual

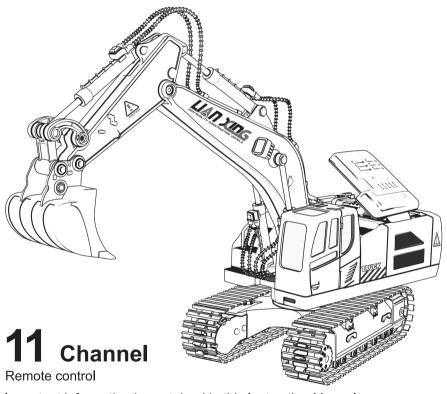

Important information is contained in this Instruction Manual. Please well keep it for future reference.















console in 680









Preface

■ Thank you for purchasing our product. In order to use it correctly, please do read this Instruction Manual carefully before operation. Meanwhile, Important information is contained in this Instruction Manual, please well keep it for future reference.

Content

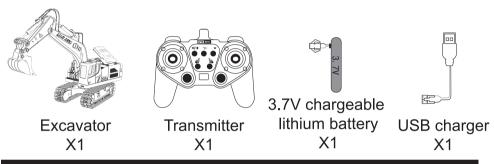


Name of excavator parts

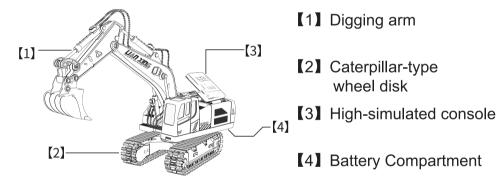

Battery loading and using

1.Battery loading of the transmitter

Loosen the screw on the battery cover of the transmitter, correctly load 2x1.5V "AA" non-chargeable batteries (Battery not included) into the transmitter as per the correct "+/-" polarity indicated, then close the battery cover again and tighten the screw.

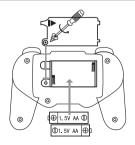

- Please DO NOT play this product in dangerous places such as public roads. Choose a safe place to operate this product so as to avoid danger.
- Please DO NOT use this product on elevated places such as tables or counters so as to prevent high-altitude falling or drops.
- Please DO NOT place this product in direct sunlight or in places where the temperature or the temperature of the heating device are too high so as to avoid deformation or even damage.
- DO NOT play this product during rainy days or on puddles, so that it will not get wet by water and become faulty. If it gets wet accidentally, please absorb the water with a cloth which has good water absorption performance.
- Please DO NOT touch the wheels by fingers, hair, clothes while playing to avoid injury.
- When there is insufficient power with the R/C car or transmitter, the speed of the R/C car will obviously slow down, this time please replace the batteries or charge it timely.
- DO NOT pull the digging arm with your hand by force, so as not to cause damage to the excavator.
- Please DO NOT damage the antenna so as to avoid causing damaged to the transmitter.
- Maintenance: Wipe stains off the surface with a dry cloth.

Attention

The hydraulic rod and track of this product are easy to be damaged or fallen off. In case a part is damaged or missing, please purchase the same model from the manufacturer or dealer and install it by your own. Make sure that the product be complete in structure. Please DO NOT use different models or different brands of parts for installation so as to ensure the structural safety of the product.


- Non-chargeable batteries are NOT allowed to be charged.
- Rechargeable batteries can only be charged under the surveillance of the adult.
- Rechargeable batteries should be removed from toys before recharging.
- How to remove and place batteries? Loosen the screw with a screwdriver, open the battery cover, and load or remove the batteries as per the correct "+/-"polarity.
- Removing or loading batteries should be made as per the marks shown in the battery compartment.
- Only the batteries same as the recommended or the equivalence or the same brand can be used.
- DO NOT mix old batteries with the new ones.
 Batteries of different types can not be mixed using together.
- The battery should be loaded as per correct"+/-" polarity.
- The exhausted battery should be removed from the toy. Batteries in the toy should be removed if left unused for a long time;
- The power terminal MUST NOT be short-circuited;
- Please DO NOT connect with the power supplies more than the quantity recommended.
- USB charging cable connection must be completed by parent.
- This product can only be charged by using the USB charging cable included in this product, never use the USB charging cable not recommended.
- ATTENTION: USB charging cable is not a toy.
- Please check periodically the USB charging cable, wire, plug, outer shell and other parts if they are damaged or not. In case damage, please stop using it until it is well repaired.

SAFETY PRECAUTIONS

 Small parts are contained in this product, please place this product out of the reach of the children so as to avoid the CHOKING HAZARD. Children under 3 years old are NOT allowed to use this product.

2.Battery loading of excavator

Make sure the power switch is in the OFF position, unscrew the battery cover of the excavator, and remove the cover of the battery compartment.
Plug the power loaded with 3.7V rechargeable battery into the power connector of the battery compartment of the excavator and then close the cover of the battery again and tighten the screws.

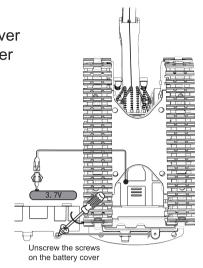




Please remove the batteries if the excavator is left unused for a long time.

3. Battery Charging of the Excavator

Insert the battery plug into the USB charging cable and then connect the USB charging cable with the adapter or USB port on the computer. When the lithium battery is under charging, the red light is normally "ON" and the red light will be "OFF" when the battery is fully charged. It takes about 3-4 hours to get the battery fully charged.

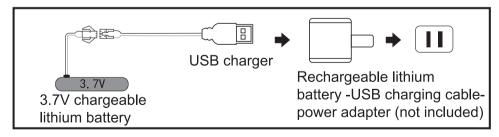




- Please check whether the input voltage of the adapter is consistent with the current voltage before charging.
- The output voltage of the adapter is to be consistent with that of the battery.

- Charging is to be done under the supervision of the adult.
- Keep the product away from combustibles when it is under charging and the charging shall be done under adult supervision.

Operating demonstration




Push the transmitter to (1) so that the excavator moves forward; push the transmitter to (2) so that the excavator moves backward;

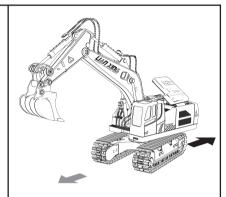





Push the transmitter to (1) so that the excavator turns to the left; push the transmitter to (2) so that the excavator turns to the right.

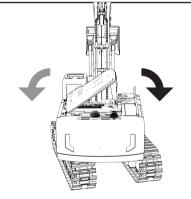




 
Press the key (as shown) and the excavator will make Auto-DEMO.

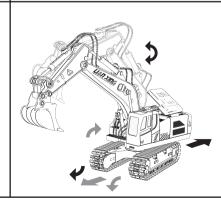



 
Press the transmitter (1) so that the excavator console rotate to the left by 680 degrees; press the transmitter (2) so that the excavator console rotate to the right by 680 degrees.

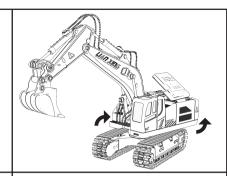




Press the Key (1) on the transmitter and the digging arm of the excavator goes up; Press the Key (2) on the transmitter and the excavator's digging arm goes down.



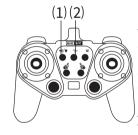

 Keep pressing key (1) for switching on or switching off the sound. Shortly pressing it for switching on or switching off the light; Press the key (2) Atomizing Switch and wait for 2 seconds.



Remove the soft rubber plug, inject with half a bottle of water by using the water filler prepared beforehand and then cover with the soft rubber plug.

More operating functions and more surprises are to be discovered by you.



Please wipe the dirt off the surface of the product with a dry cloth when finish using it so as to avoid damage to the parts and thus extend the service life of the product.

PRECAUTION ON BATTERY

• Type of battery required for the toy:1x 3.7V rechargeable lithium battery is required in this excavator. 2x 1.5V "AA" non-rechargeable batteries (not included) are required in this transmitter.



Assistance technique et certificat de garantie électronique www.vevor.com/support

Fabricant: SHANTOU CHENGHAI LIANXING TOYS FACTORY

Adresse: No. 3, Rangée 10, Est de la Route de Longfeng, Longtian, Rue Guangyi, District de

Chenghai, Shantou, Province du Guangdong, Chine

Représentant CE : E-CrossStu GmbH

Mainzer Landstr.69, 60329 Francfort-sur-le-Main.

REPRÉSENTANT AU ROYAUME-UNI : YH CONSULTING LIMITED.

C/O YH Consulting Limited Bureau 147, Centurion House, London Road,

Staines-upon-Thames, Surrey, TW18 4AX

Importé en AUS : SIHAO PTY LTD.

1 ROKEVA STREET EASTWOOD NSW 2122 Australie

Importé aux États-Unis : Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

Nous continuons à nous engager à vous fournir des outils à des prix compétitifs.

« Économisez la moitié », « Moitié prix » ou toute autre expression similaire utilisée par nous ne représente qu'une estimation des économies que vous pourriez réaliser en achetant certains outils chez nous par rapport aux grandes marques et ne vise pas nécessairement à couvrir toutes les catégories d'outils proposés par nous. Nous vous rappelons de bien vouloir vérifier attentivement lorsque vous passez une commande chez nous si vous économisez réellement la moitié par rapport aux grandes marques.

Il s'agit des instructions d'origine, veuillez lire attentivement toutes les instructions du manuel avant en fonctionnement. VEVOR se réserve une interprétation claire de notre manuel d'utilisation. L'apparence du produit sera soumis au produit que vous avez reçu. Veuillez nous pardonner que nous nous ne vous informerons plus s'il y a des mises à jour technologiques ou logicielles sur notre produit.

Camion benne télécommandé Modèle : 3367 Informations FCC (ID FCC : 2BEDH-3369) :

ATTENTION: Les changements ou modifications non expressément approuvés par la partie responsable

Le non-respect de ces instructions pourrait annuler l'autorisation de l'utilisateur à utiliser l'équipement !

Cet appareil est conforme à la partie 15 des règles de la FCC. Son fonctionnement est soumis aux conditions suivantes deux conditions :

- 1) Ce produit peut provoquer des interférences nuisibles.
- 2) Ce produit doit accepter toute interférence reçue, y compris les interférences qui peuvent provoquer un fonctionnement indésirable.

AVERTISSEMENT : Les changements ou modifications apportés à ce produit non expressément approuvés par la partie responsable de la conformité pourrait annuler l'autorité de l'utilisateur à utiliser le produit.

Remarque : ce produit a été testé et jugé conforme aux limites d'un produit numérique de classe B. appareil conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir protection raisonnable contre les interférences nuisibles dans une installation résidentielle.

Ce produit génère, utilise et peut émettre de l'énergie radiofréquence et, s'il n'est pas installé, et utilisé conformément aux instructions, il peut provoquer des interférences nuisibles dans radiocommunications. Cependant, il n'existe aucune garantie que des interférences ne se produiront pas dans un installation particulière. Si ce produit provoque des interférences nuisibles avec la radio ou la télévision réception, qui peut être déterminée en éteignant et en rallumant le produit, l'utilisateur est encouragés à essayer de corriger l'interférence par une ou plusieurs des mesures suivantes.

- · Réorienter ou déplacer l'antenne de réception.
- · Augmenter la distance entre le produit et le récepteur.
- Branchez le produit sur une prise d'un circuit différent de celui auquel est connecté le récepteur.
 connecté.
- · Consultez le revendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide.

Élimination correcte



Ce produit est soumis aux dispositions de la directive européenne 2012/19/UE.

Le symbole représentant une poubelle à roulettes barrée indique que le produit nécessite collecte séparée des déchets dans l'Union européenne. Cela s'applique au produit et tous les accessoires marqués de ce symbole. Les produits marqués comme tels peuvent ne pas être

tous les accessoires marques de ce symbole. Les produits marques comme tels peuvent ne pas ette

jeté avec les ordures ménagères normales, mais doit être apporté à un point de collecte pour être recyclé appareils électriques et électroniques.

Important Notice

Attention please! This product can only be put into massive production after strict performance demonstration and actual testing as well as verify its compliance with the safety standards. The manufacturer or distributor will not be responsible for any accident caused by use of damaged parts or abnormal faulty or broken parts. Nor do we responsible for any accident caused by improper assembly or operation in an unsafe environment during the use of any remote control model. Please make sure to operate this product in a safe environment.

Troubleshooting

| Product problems | Solutions |
|---|--|
| Failure to start the excavator | The power switch is off, please turn it on. The battery is loaded incorrectly. Please check the positive and negative polarity of the battery to ensure correct loading of the battery. The battery is exhausted, please charge the battery or replace the battery. |
| The remote control is unavailable for use | The battery in the transmitter is exhausted, please replace it with a new battery. The excavator is beyond the controlling scope of the transmitter, please keep it in the controllable range. Considering the presence of electromagnetic interference on surroundings, please bring the toy to a spacious site and use it. |

Note: The surrounding electromagnetic wave interference may lead to the remote control car failure, you can restart the remote control car and operate again.










R/C Excavator with Atomizing Function

Instruction Manual

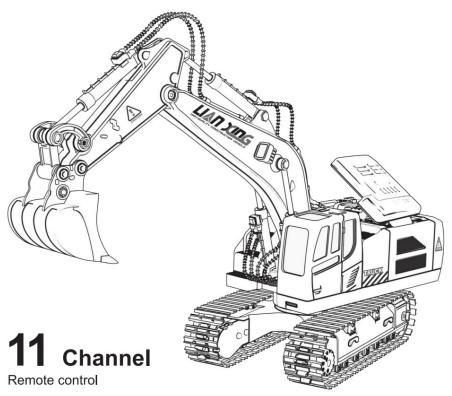

Important information is contained in this Instruction Manual. Please well keep it for future reference.




















console in 680°


Preface

■ Thank you for purchasing our product. In order to use it correctly, please do read this Instruction Manual carefully before operation. Meanwhile, Important information is contained in this Instruction Manual, please well keep it for future reference.

Content

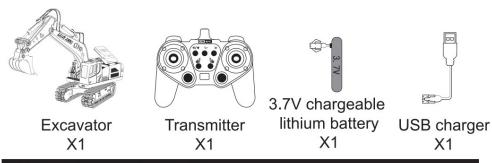

Name of excavator parts

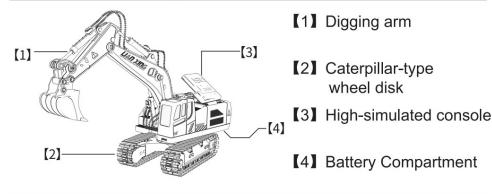

Battery loading and using

1.Battery loading of the transmitter

Loosen the screw on the battery cover of the transmitter, correctly load 2x1.5V "AA" non-chargeable batteries (Battery not included) into the transmitter as per the correct "+/-" polarity indicated, then close the battery cover again and tighten the screw.



- Please DO NOT play this product in dangerous places such as public roads. Choose a safe place to operate this product so as to avoid danger.
- Please DO NOT use this product on elevated places such as tables or counters so as to prevent high-altitude falling or drops.
- Please DO NOT place this product in direct sunlight or in places where the temperature or the temperature of the heating device are too high so as to avoid deformation or even damage.
- DO NOT play this product during rainy days or on puddles, so that it will not get wet by water and become faulty. If it gets wet accidentally, please absorb the water with a cloth which has good water absorption performance.
- Please DO NOT touch the wheels by fingers, hair, clothes while playing to avoid injury.
- When there is insufficient power with the R/C car or transmitter, the speed of the R/C car will obviously slow down, this time please replace the batteries or charge it timely.
- DO NOT pull the digging arm with your hand by force, so as not to cause damage to the excavator.
- Please DO NOT damage the antenna so as to avoid causing damaged to the transmitter.
- Maintenance: Wipe stains off the surface with a dry cloth.

Attention

The hydraulic rod and track of this product are easy to be damaged or fallen off. In case a part is damaged or missing, please purchase the same model from the manufacturer or dealer and install it by your own. Make sure that the product be complete in structure . Please DO NOT use different models or different brands of parts for installation so as to ensure the structural safety of the product.

- Non-chargeable batteries are NOT allowed to be charged.
- Rechargeable batteries can only be charged under the surveillance of the adult.
- Rechargeable batteries should be removed from toys before recharging.
- How to remove and place batteries? Loosen the screw with a screwdriver, open the battery cover, and load or remove the batteries as per the correct "+/-"polarity.
- Removing or loading batteries should be made as per the marks shown in the battery compartment.
- Only the batteries same as the recommended or the equivalence or the same brand can be used.
- DO NOT mix old batteries with the new ones.
 Batteries of different types can not be mixed using together.
- The battery should be loaded as per correct"+/-" polarity.
- The exhausted battery should be removed from the toy. Batteries in the toy should be removed if left unused for a long time;
- The power terminal MUST NOT be short-circuited;
- Please DO NOT connect with the power supplies more than the quantity recommended.
- USB charging cable connection must be completed by parent.
- This product can only be charged by using the USB charging cable included in this product, never use the USB charging cable not recommended.
- ATTENTION: USB charging cable is not a toy.
- Please check periodically the USB charging cable, wire, plug, outer shell and other parts if they are damaged or not. In case damage, please stop using it until it is well repaired.


SAFETY PRECAUTIONS

 Small parts are contained in this product, please place this product out of the reach of the children so as to avoid the CHOKING HAZARD. Children under 3 years old are NOT allowed to use this product.

2.Battery loading of excavator

Make sure the power switch is in the OFF position, unscrew the battery cover of the excavator, and remove the cover of the battery compartment.

Plug the power loaded with 3.7V rechargeable battery into the power connector of the battery compartment of the excavator and then close the cover of the battery again and tighten the screws.

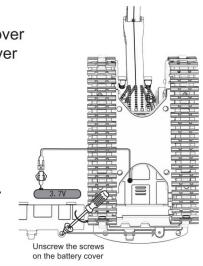


WARNING:

Please remove the batteries if the excavator is left unused for a long time.

3. Battery Charging of the Excavator

Insert the battery plug into the USB charging cable and then connect the USB charging cable with the adapter or USB port on the computer. When the lithium battery is under charging, the red light is normally "ON" and the red light will be "OFF" when the battery is fully charged. It takes about 3-4 hours to get the battery fully charged.

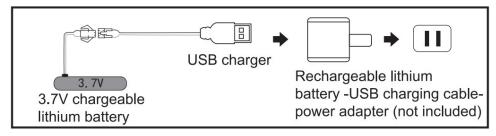


- \triangle
- Please check whether the input voltage of the adapter is consistent with the current voltage before charging.
- The output voltage of the adapter is to be consistent with that of the battery.

- Charging is to be done under the supervision of the adult.
- Keep the product away from combustibles when it is under charging and the charging shall be done under adult supervision.

Operating demonstration




Push the transmitter to (1) so that the excavator moves forward; push the transmitter to (2) so that the excavator moves backward;

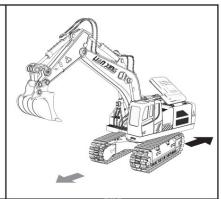





Push the transmitter to (1) so that the excavator turns to the left; push the transmitter to (2) so that the excavator turns to the right.

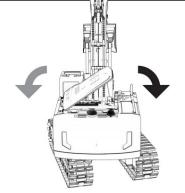




 
Press the key (as shown) and the excavator will make Auto-DEMO.

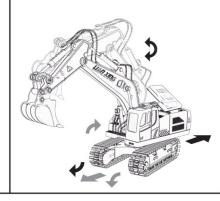



 
Press the transmitter (1) so that the excavator console rotate to the left by 680 degrees; press the transmitter (2) so that the excavator console rotate to the right by 680 degrees.

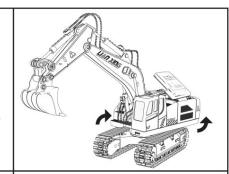




Press the Key (1) on the transmitter and the digging arm of the excavator goes up; Press the Key (2) on the transmitter and the excavator's digging arm goes down.



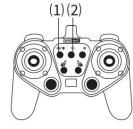

 Keep pressing key (1) for switching on or switching off the sound Shortly pressing it for switching on or switching off the light; Press the key (2) Atomizing Switch and wait for 2 seconds.



Remove the soft rubber plug, inject with half a bottle of water by using the water filler prepared beforehand and then cover with the soft rubber plug.

More operating functions and more surprises are to be discovered by you.



Please wipe the dirt off the surface of the product with a dry cloth when finish using it so as to avoid damage to the parts and thus extend the service life of the product.

PRECAUTION ON BATTERY

 Type of battery required for the toy:1x 3.7V rechargeable lithium battery is required in this excavator. 2x 1.5V "AA" non-rechargeable batteries (not included) are required in this transmitter.



Technischer Support und E-Garantie-Zertifikat www.vevor.com/support

Hersteller: SHANTOU CHENGHAI LIANXING SPIELZEUGFABRIK

Adresse: Nr. 3, Reihe 10, östlich der Longfeng Road, Longtian, Guangyi Street, Bezirk

Chenghai, Shantou, Provinz Guangdong, China

EG-Vertreter: E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.

UK-VERTRETER: YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House, London Road,

Staines-upon-Thames, Surrey, TW18 4AX

Nach AUS importiert: SIHAO PTY LTD.

1 ROKEVA STREETEASTWOOD NSW 2122 Australien

In die USA importiert: Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

Wir sind weiterhin bestrebt, Ihnen Werkzeuge zu wettbewerbsfähigen Preisen anzubieten.

"Sparen Sie die Hälfte", "Halber Preis" oder andere ähnliche Ausdrücke, die wir verwenden, stellen nur eine Schätzung der Einsparungen, die Sie durch den Kauf bestimmter Werkzeuge bei uns erzielen könnten, im Vergleich zu Die wichtigsten Top-Marken und decken nicht zwangsläufig alle angebotenen Werkzeugkategorien ab. von uns. Wir möchten Sie bitten, sorgfältig zu prüfen, wenn Sie eine Bestellung bei uns aufgeben wenn Sie im Vergleich zu den großen Topmarken tatsächlich die Hälfte sparen.

Dies ist die Originalanleitung. Bitte lesen Sie alle Anweisungen im Handbuch sorgfältig durch, bevor Sie Betrieb. VEVOR behält sich eine klare Auslegung unserer Bedienungsanleitung vor. Das Aussehen des Produkts unterliegt dem Produkt, das Sie erhalten haben. Bitte verzeihen Sie uns, dass wir Wir werden Sie nicht erneut informieren, wenn es Technologie- oder Software-Updates für unser Produkt gibt.

RC-Muldenkipper Modell: 3367

FCC-Informationen (FCC- ID: 2BEDH-3369):

ACHTUNG: Änderungen oder Modifikationen, die nicht ausdrücklich von der verantwortlichen Partei genehmigt wurden,

Bei Nichtbeachtung erlischt die Berechtigung des Benutzers zum Betrieb des Geräts!

Dieses Gerät entspricht Teil 15 der FCC-Bestimmungen. Der Betrieb unterliegt den folgenden zwei Bedingungen:

- 1) Dieses Produkt kann schädliche Störungen verursachen.
- 2) Dieses Produkt muss alle empfangenen Störungen akzeptieren, einschließlich Störungen, die zu unerwünschtem Betrieb führen

ACHTUNG: Änderungen oder Modifikationen an diesem Produkt, die nicht ausdrücklich von der Partei genehmigt wurden

Die für die Einhaltung der Vorschriften verantwortliche Person kann zum Erlöschen der Berechtigung des Benutzers zum Betrieb des Produkts führen.

Hinweis: Dieses Produkt wurde getestet und entspricht den Grenzwerten für ein digitales Gerät der Klasse B.

Gerät gemäß Teil 15 der FCC-Regeln. Diese Grenzwerte sollen sicherstellen,

angemessener Schutz gegen schädliche Störungen bei Installation in Wohngebäuden.

Dieses Produkt erzeugt, verwendet und kann Hochfrequenzenergie ausstrahlen. Wenn es nicht installiert ist

Wenn es nicht gemäß den Anweisungen verwendet wird, kann es zu Störungen in

Funkkommunikation. Es gibt jedoch keine Garantie dafür, dass es in einem

bestimmte Installation. Wenn dieses Produkt schädliche Interferenzen mit Radio- oder Fernsehsendern verursacht.

Empfang, der durch Aus- und Einschalten des Produkts ermittelt werden kann, ist der Benutzer

- empfohlen, die Störungen durch eine oder mehrere der folgenden Maßnahmen zu beheben.
- · Vergrößern Sie den Abstand zwischen Produkt und Empfänger.

· Empfangsantenne neu ausrichten oder verlegen.

- Schließen Sie das Produkt an eine Steckdose eines anderen Stromkreises an als den des Empfängers.
 verbunden.
- · Wenden Sie sich an den Händler oder einen erfahrenen Radio-/Fernsehtechniker.

Richtige Entsorgung



Dieses Produkt unterliegt den Bestimmungen der europäischen Richtlinie 2012/19/EU.

Das Symbol einer durchgestrichenen Mülltonne weist darauf hin, dass das Produkt

getrennte Müllentsorgung in der Europäischen Union. Dies gilt für das Produkt und

alle mit diesem Symbol gekennzeichneten Zubehörteile. Als solche gekennzeichnete Produkte sind möglicherweise nicht

nicht mit dem normalen Hausmüll entsorgt werden, sondern müssen zur Wiederverwertung an einer Sammelstelle abgegeben werden. elektrische und elektronische Geräte.

Important Notice

Attention please! This product can only be put into massive production after strict performance demonstration and actual testing as well as verify its compliance with the safety standards. The manufacturer or distributor will not be responsible for any accident caused by use of damaged parts or abnormal faulty or broken parts. Nor do we responsible for any accident caused by improper assembly or operation in an unsafe environment during the use of any remote control model. Please make sure to operate this product in a safe environment.

Troubleshooting

| Product problems | Solutions |
|---|--|
| Failure to start the excavator | The power switch is off, please turn it on. The battery is loaded incorrectly. Please check the positive and negative polarity of the battery to ensure correct loading of the battery. The battery is exhausted, please charge the battery or replace the battery. |
| The remote control is unavailable for use | The battery in the transmitter is exhausted, please replace it with a new battery. The excavator is beyond the controlling scope of the transmitter, please keep it in the controllable range. Considering the presence of electromagnetic interference on surroundings, please bring the toy to a spacious site and use it. |

Note: The surrounding electromagnetic wave interference may lead to the remote control car failure, you can restart the remote control car and operate again.










R/C Excavator with Atomizing Function

Instruction Manual

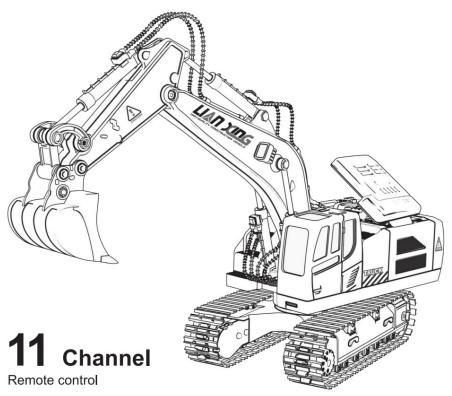

Important information is contained in this Instruction Manual. Please well keep it for future reference.




















console in 680°


Preface

■ Thank you for purchasing our product. In order to use it correctly, please do read this Instruction Manual carefully before operation. Meanwhile, Important information is contained in this Instruction Manual, please well keep it for future reference.

Content

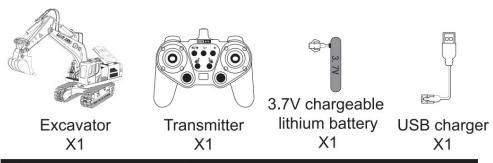


Name of excavator parts

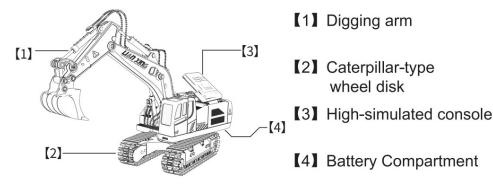

Battery loading and using

1.Battery loading of the transmitter

Loosen the screw on the battery cover of the transmitter, correctly load 2x1.5V "AA" non-chargeable batteries (Battery not included) into the transmitter as per the correct "+/-" polarity indicated, then close the battery cover again and tighten the screw.

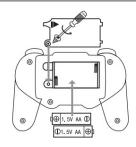

- Please DO NOT play this product in dangerous places such as public roads. Choose a safe place to operate this product so as to avoid danger.
- Please DO NOT use this product on elevated places such as tables or counters so as to prevent high-altitude falling or drops.
- Please DO NOT place this product in direct sunlight or in places where the temperature or the temperature of the heating device are too high so as to avoid deformation or even damage.
- DO NOT play this product during rainy days or on puddles, so that it will not get wet by water and become faulty. If it gets wet accidentally, please absorb the water with a cloth which has good water absorption performance.
- Please DO NOT touch the wheels by fingers, hair, clothes while playing to avoid injury.
- When there is insufficient power with the R/C car or transmitter, the speed of the R/C car will obviously slow down, this time please replace the batteries or charge it timely.
- DO NOT pull the digging arm with your hand by force, so as not to cause damage to the excavator.
- Please DO NOT damage the antenna so as to avoid causing damaged to the transmitter.
- Maintenance: Wipe stains off the surface with a dry cloth.

Attention

The hydraulic rod and track of this product are easy to be damaged or fallen off. In case a part is damaged or missing, please purchase the same model from the manufacturer or dealer and install it by your own. Make sure that the product be complete in structure . Please DO NOT use different models or different brands of parts for installation so as to ensure the structural safety of the product.

- Non-chargeable batteries are NOT allowed to be charged.
- Rechargeable batteries can only be charged under the surveillance of the adult.
- Rechargeable batteries should be removed from toys before recharging.
- How to remove and place batteries? Loosen the screw with a screwdriver, open the battery cover, and load or remove the batteries as per the correct "+/-"polarity.
- Removing or loading batteries should be made as per the marks shown in the battery compartment.
- Only the batteries same as the recommended or the equivalence or the same brand can be used.
- DO NOT mix old batteries with the new ones.
 Batteries of different types can not be mixed using together.
- The battery should be loaded as per correct"+/-" polarity.
- The exhausted battery should be removed from the toy. Batteries in the toy should be removed if left unused for a long time;
- The power terminal MUST NOT be short-circuited;
- Please DO NOT connect with the power supplies more than the quantity recommended.
- USB charging cable connection must be completed by parent.
- This product can only be charged by using the USB charging cable included in this product, never use the USB charging cable not recommended.
- ATTENTION: USB charging cable is not a toy.
- Please check periodically the USB charging cable, wire, plug, outer shell and other parts if they are damaged or not. In case damage, please stop using it until it is well repaired.


SAFETY PRECAUTIONS

 Small parts are contained in this product, please place this product out of the reach of the children so as to avoid the CHOKING HAZARD. Children under 3 years old are NOT allowed to use this product.

2.Battery loading of excavator

Make sure the power switch is in the OFF position, unscrew the battery cover of the excavator, and remove the cover of the battery compartment.

Plug the power loaded with 3.7V rechargeable battery into the power connector of the battery compartment of the excavator and then close the cover of the battery again and tighten the screws.

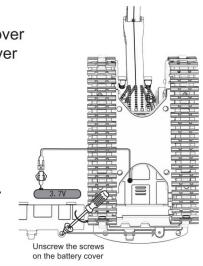


WARNING:

Please remove the batteries if the excavator is left unused for a long time.

3. Battery Charging of the Excavator

Insert the battery plug into the USB charging cable and then connect the USB charging cable with the adapter or USB port on the computer. When the lithium battery is under charging, the red light is normally "ON" and the red light will be "OFF" when the battery is fully charged. It takes about 3-4 hours to get the battery fully charged.

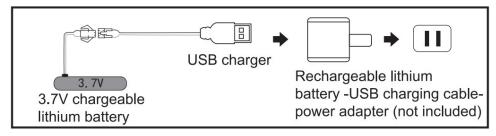


- \triangle
- Please check whether the input voltage of the adapter is consistent with the current voltage before charging.
- The output voltage of the adapter is to be consistent with that of the battery.

- Charging is to be done under the supervision of the adult.
- Keep the product away from combustibles when it is under charging and the charging shall be done under adult supervision.

Operating demonstration




Push the transmitter to (1) so that the excavator moves forward; push the transmitter to (2) so that the excavator moves backward;

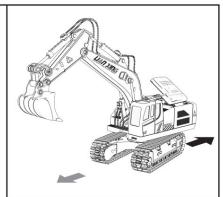





Push the transmitter to (1) so that the excavator turns to the left; push the transmitter to (2) so that the excavator turns to the right.

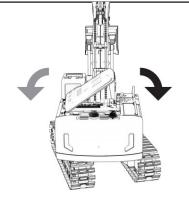




 
Press the key (as shown) and the excavator will make Auto-DEMO.

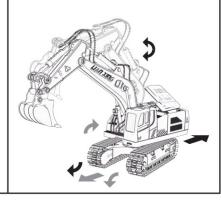




 
Press the transmitter (1) so that the excavator console rotate to the left by 680 degrees; press the transmitter (2) so that the excavator console rotate to the right by 680 degrees.

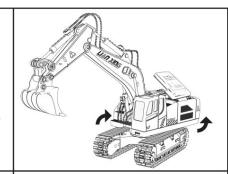




Press the Key (1) on the transmitter and the digging arm of the excavator goes up; Press the Key (2) on the transmitter and the excavator's digging arm goes down.

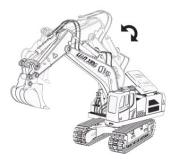

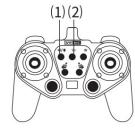

 Keep pressing key (1) for switching on or switching off the sound. Shortly pressing it for switching on or switching off the light; Press the key (2) Atomizing Switch and wait for 2 seconds.



Remove the soft rubber plug, inject with half a bottle of water by using the water filler prepared beforehand and then cover with the soft rubber plug.

More operating functions and more surprises are to be discovered by you.



Please wipe the dirt off the surface of the product with a dry cloth when finish using it so as to avoid damage to the parts and thus extend the service life of the product.

PRECAUTION ON BATTERY

 Type of battery required for the toy:1x 3.7V rechargeable lithium battery is required in this excavator. 2x 1.5V "AA" non-rechargeable batteries (not included) are required in this transmitter.



Supporto tecnico e certificato di garanzia elettronica www.vevor.com/support

Produttore: FABBRICA DI GIOCATTOLI SHANTOU CHENGHAI LIANXING

Indirizzo: No.3, Row 10, East of Longfeng Road, Longtian, Guangyi Street,

Chenghai District, Shantou, provincia del Guangdong, Cina

RAPPRESENTANTE CE: E-CrossStu GmbH

Mainzer Landstr.69, 60329 Francoforte sul Meno.

RAPPRESENTANTE DEL REGNO UNITO: YH CONSULTING LIMITED.

C/O YH Consulting Limited Ufficio 147, Centurion House, London Road,

Staines-upon-Thames, Surrey, TW18 4AX

Importato in AUS: SIHAO PTY LTD.

1 ROKEVA STREET EASTWOOD NSW 2122 Australia

Importato negli USA: Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

Continuiamo a impegnarci per fornirvi strumenti a prezzi competitivi.

"Risparmia la metà", "Metà prezzo" o qualsiasi altra espressione simile da noi utilizzata rappresenta solo un stima del risparmio che potresti ottenere acquistando determinati strumenti con noi rispetto a grandi marchi top e non significa necessariamente coprire tutte le categorie di strumenti offerti da noi. Ti ricordiamo cortesemente di verificare attentamente quando effettui un ordine con noi se si risparmia effettivamente la metà rispetto ai marchi più noti.

Questa è l'istruzione originale, si prega di leggere attentamente tutte le istruzioni del manuale prima operativo. VEVOR si riserva una chiara interpretazione del nostro manuale utente. L'aspetto del prodotto sarà soggetto al prodotto che hai ricevuto. Per favore perdonaci se noi non ti informeremo più se ci saranno aggiornamenti tecnologici o software sul nostro prodotto.

Autocarro con cassone ribaltabile RC Modello: 3367 Informazioni FCC (ID FCC: 2BEDH-3369):

ATTENZIONE: Cambiamenti o modifiche non espressamente approvati dal responsabile la conformità potrebbe invalidare il diritto dell'utente a utilizzare l'apparecchiatura!

Questo dispositivo è conforme alla Parte 15 delle Norme FCC. Il funzionamento è soggetto a quanto segue due condizioni:

- 1) Questo prodotto può causare interferenze dannose.
- 2) Questo prodotto deve accettare qualsiasi interferenza ricevuta, comprese le interferenze che possono causare un funzionamento indesiderato.

ATTENZIONE: Cambiamenti o modifiche a questo prodotto non espressamente approvati dalla parte responsabile della conformità potrebbe invalidare il diritto dell'utente a utilizzare il prodotto.

Nota: questo prodotto è stato testato e ritenuto conforme ai limiti per un dispositivo digitale di Classe B dispositivo ai sensi della Parte 15 delle Norme FCC. Questi limiti sono progettati per fornire protezione ragionevole contro interferenze dannose in un'installazione residenziale.

Questo prodotto genera, utilizza e può irradiare energia a radiofrequenza e, se non installato e utilizzato in conformità alle istruzioni, può causare interferenze dannose in radiocomunicazioni. Tuttavia, non vi è alcuna garanzia che non si verifichino interferenze in un installazione particolare. Se questo prodotto causa interferenze dannose alla radio o alla televisione ricezione, che può essere determinata accendendo e spegnendo il prodotto, l'utente è incoraggiati a provare a correggere l'interferenza mediante una o più delle seguenti misure.

- · Riorientare o riposizionare l'antenna ricevente.
- · Aumentare la distanza tra il prodotto e il ricevitore.
- Collegare il prodotto a una presa su un circuito diverso da quello a cui è collegato il ricevitore collegato.
- · Per assistenza, consultare il rivenditore o un tecnico radio/TV esperto.

Smaltimento corretto



Questo prodotto è soggetto alle disposizioni della Direttiva europea 2012/19/UE.

il simbolo raffigurante un bidone della spazzatura barrato indica che il prodotto richiede raccolta differenziata dei rifiuti nell'Unione Europea. Ciò vale per il prodotto e tutti gli accessori contrassegnati con questo simbolo. I prodotti contrassegnati come tali potrebbero non essere

smaltito con i normali rifiuti domestici, ma deve essere portato in un punto di raccolta per il riciclaggio dispositivi elettrici ed elettronici.

Important Notice

Attention please! This product can only be put into massive production after strict performance demonstration and actual testing as well as verify its compliance with the safety standards. The manufacturer or distributor will not be responsible for any accident caused by use of damaged parts or abnormal faulty or broken parts. Nor do we responsible for any accident caused by improper assembly or operation in an unsafe environment during the use of any remote control model. Please make sure to operate this product in a safe environment.

Troubleshooting

| Product problems | Solutions |
|---|--|
| Failure to start the excavator | The power switch is off, please turn it on. The battery is loaded incorrectly. Please check the positive and negative polarity of the battery to ensure correct loading of the battery. The battery is exhausted, please charge the battery or replace the battery. |
| The remote control is unavailable for use | The battery in the transmitter is exhausted, please replace it with a new battery. The excavator is beyond the controlling scope of the transmitter, please keep it in the controllable range. Considering the presence of electromagnetic interference on surroundings, please bring the toy to a spacious site and use it. |

Note: The surrounding electromagnetic wave interference may lead to the remote control car failure, you can restart the remote control car and operate again.










R/C Excavator with Atomizing Function

Instruction Manual

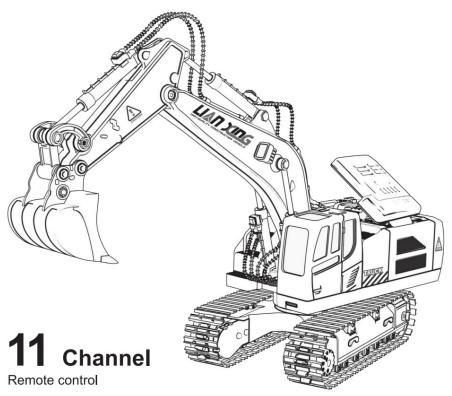

Important information is contained in this Instruction Manual. Please well keep it for future reference.




















console in 680°


Preface

■ Thank you for purchasing our product. In order to use it correctly, please do read this Instruction Manual carefully before operation. Meanwhile, Important information is contained in this Instruction Manual, please well keep it for future reference.

Content

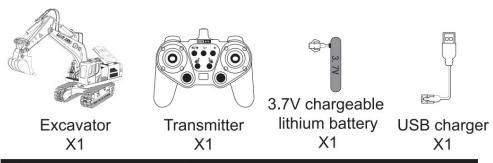


Name of excavator parts

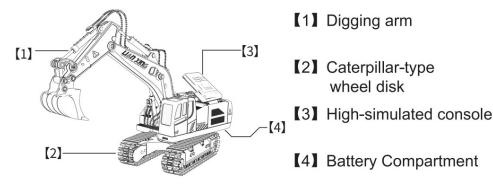

Battery loading and using

1.Battery loading of the transmitter

Loosen the screw on the battery cover of the transmitter, correctly load 2x1.5V "AA" non-chargeable batteries (Battery not included) into the transmitter as per the correct "+/-" polarity indicated, then close the battery cover again and tighten the screw.

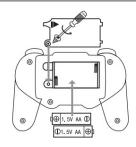

- Please DO NOT play this product in dangerous places such as public roads. Choose a safe place to operate this product so as to avoid danger.
- Please DO NOT use this product on elevated places such as tables or counters so as to prevent high-altitude falling or drops.
- Please DO NOT place this product in direct sunlight or in places where the temperature or the temperature of the heating device are too high so as to avoid deformation or even damage.
- DO NOT play this product during rainy days or on puddles, so that it will not get wet by water and become faulty. If it gets wet accidentally, please absorb the water with a cloth which has good water absorption performance.
- Please DO NOT touch the wheels by fingers, hair, clothes while playing to avoid injury.
- When there is insufficient power with the R/C car or transmitter, the speed of the R/C car will obviously slow down, this time please replace the batteries or charge it timely.
- DO NOT pull the digging arm with your hand by force, so as not to cause damage to the excavator.
- Please DO NOT damage the antenna so as to avoid causing damaged to the transmitter.
- Maintenance: Wipe stains off the surface with a dry cloth.

Attention

The hydraulic rod and track of this product are easy to be damaged or fallen off. In case a part is damaged or missing, please purchase the same model from the manufacturer or dealer and install it by your own. Make sure that the product be complete in structure . Please DO NOT use different models or different brands of parts for installation so as to ensure the structural safety of the product.

- Non-chargeable batteries are NOT allowed to be charged.
- Rechargeable batteries can only be charged under the surveillance of the adult.
- Rechargeable batteries should be removed from toys before recharging.
- How to remove and place batteries? Loosen the screw with a screwdriver, open the battery cover, and load or remove the batteries as per the correct "+/-"polarity.
- Removing or loading batteries should be made as per the marks shown in the battery compartment.
- Only the batteries same as the recommended or the equivalence or the same brand can be used.
- DO NOT mix old batteries with the new ones.
 Batteries of different types can not be mixed using together.
- The battery should be loaded as per correct"+/-" polarity.
- The exhausted battery should be removed from the toy. Batteries in the toy should be removed if left unused for a long time;
- The power terminal MUST NOT be short-circuited;
- Please DO NOT connect with the power supplies more than the quantity recommended.
- USB charging cable connection must be completed by parent.
- This product can only be charged by using the USB charging cable included in this product, never use the USB charging cable not recommended.
- ATTENTION: USB charging cable is not a toy.
- Please check periodically the USB charging cable, wire, plug, outer shell and other parts if they are damaged or not. In case damage, please stop using it until it is well repaired.


SAFETY PRECAUTIONS

 Small parts are contained in this product, please place this product out of the reach of the children so as to avoid the CHOKING HAZARD. Children under 3 years old are NOT allowed to use this product.

2.Battery loading of excavator

Make sure the power switch is in the OFF position, unscrew the battery cover of the excavator, and remove the cover of the battery compartment.

Plug the power loaded with 3.7V rechargeable battery into the power connector of the battery compartment of the excavator and then close the cover of the battery again and tighten the screws.

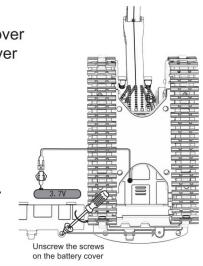


WARNING:

Please remove the batteries if the excavator is left unused for a long time.

3. Battery Charging of the Excavator

Insert the battery plug into the USB charging cable and then connect the USB charging cable with the adapter or USB port on the computer. When the lithium battery is under charging, the red light is normally "ON" and the red light will be "OFF" when the battery is fully charged. It takes about 3-4 hours to get the battery fully charged.

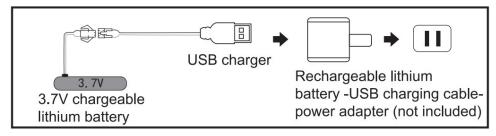


- \triangle
- Please check whether the input voltage of the adapter is consistent with the current voltage before charging.
- The output voltage of the adapter is to be consistent with that of the battery.

- Charging is to be done under the supervision of the adult.
- Keep the product away from combustibles when it is under charging and the charging shall be done under adult supervision.

Operating demonstration




Push the transmitter to (1) so that the excavator moves forward; push the transmitter to (2) so that the excavator moves backward;

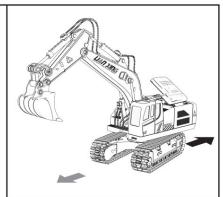





Push the transmitter to (1) so that the excavator turns to the left; push the transmitter to (2) so that the excavator turns to the right.

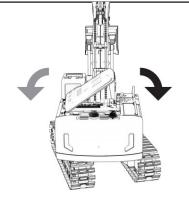




 
Press the key (as shown) and the excavator will make Auto-DEMO.

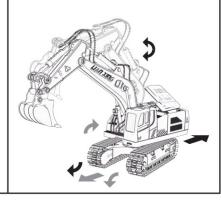




 
Press the transmitter (1) so that the excavator console rotate to the left by 680 degrees; press the transmitter (2) so that the excavator console rotate to the right by 680 degrees.

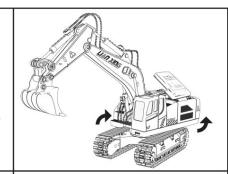




Press the Key (1) on the transmitter and the digging arm of the excavator goes up; Press the Key (2) on the transmitter and the excavator's digging arm goes down.

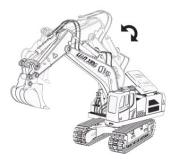

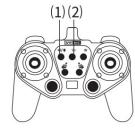

 Keep pressing key (1) for switching on or switching off the sound. Shortly pressing it for switching on or switching off the light; Press the key (2) Atomizing Switch and wait for 2 seconds.



Remove the soft rubber plug, inject with half a bottle of water by using the water filler prepared beforehand and then cover with the soft rubber plug.

More operating functions and more surprises are to be discovered by you.



Please wipe the dirt off the surface of the product with a dry cloth when finish using it so as to avoid damage to the parts and thus extend the service life of the product.

PRECAUTION ON BATTERY

 Type of battery required for the toy:1x 3.7V rechargeable lithium battery is required in this excavator. 2x 1.5V "AA" non-rechargeable batteries (not included) are required in this transmitter.



Soporte técnico y certificado de garantía electrónica www.vevor.com/support

Fabricante: FÁBRICA DE JUGUETES SHANTOU CHENGHAI LIANXING

Dirección: N.º 3, fila 10, este de Longfeng Road, Longtian, calle Guangyi, distrito de

Chenghai, Shantou, provincia de Guangdong, China

REPRESENTANTE CE: E-CrossStu GmbH

Mainzer Landstr.69, 60329 Fráncfort del Meno.

REPRESENTANTE DEL REINO UNIDO: YH CONSULTING LIMITED.

C/O YH Consulting Limited Oficina 147, Centurion House, London Road.

Staines-upon-Thames, Surrey, TW18 4AX

Importado a AUS: SIHAO PTY LTD.

1 ROKEVA STREET EASTWOOD NSW 2122 Australia

Importado a EE. UU.: Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

Seguimos comprometidos a brindarle herramientas a precios competitivos.

"Ahorra la mitad", "mitad de precio" o cualquier otra expresión similar utilizada por nosotros solo representa una Estimación de los ahorros que podría obtener al comprar ciertas herramientas con nosotros en comparación con las Las principales marcas líderes no necesariamente cubren todas las categorías de herramientas que se ofrecen. por nosotros. Le recordamos que debe verificar cuidadosamente cuando realice un pedido con nosotros. Si en realidad estás ahorrando la mitad en comparación con las principales marcas líderes.

Estas son las instrucciones originales, lea atentamente todas las instrucciones del manual antes de VEVOR se reserva una interpretación clara de nuestro manual de usuario. La apariencia del producto estará sujeto al producto que usted recibió. Por favor, perdónenos por no haberlo hecho. No le informaremos nuevamente si hay actualizaciones de tecnología o software en nuestro producto.

Camión volquete RC Modelo: 3367 Información de la FCC (ID de la FCC: 2BEDH-3369):

PRECAUCIÓN: Los cambios o modificaciones no aprobados expresamente por la parte responsable

¡El cumplimiento podría anular la autoridad del usuario para operar el equipo!

Este dispositivo cumple con la Parte 15 de las Normas de la FCC. Su funcionamiento está sujeto a las siguientes dos condiciones:

- 1) Este producto puede causar interferencias dañinas.
- Este producto debe aceptar cualquier interferencia recibida, incluida la interferencia que pueda
 Provocar un funcionamiento no deseado

ADVERTENCIA: Los cambios o modificaciones a este producto no aprobados expresamente por la parte

La responsabilidad del cumplimiento podría anular la autoridad del usuario para operar el producto.

Nota: Este producto ha sido probado y se ha determinado que cumple con los límites para un dispositivo digital de Clase B.

dispositivo de acuerdo con la Parte 15 de las Normas de la FCC. Estos límites están diseñados para proporcionar

protección razonable contra interferencias dañinas en una instalación residencial.

Este producto genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala

y se utiliza de acuerdo con las instrucciones, puede causar interferencias perjudiciales en

radiocomunicaciones. Sin embargo, no hay garantía de que no se produzcan interferencias en una

Instalación particular. Si este producto causa interferencias dañinas a la radio o televisión

recepción, que se puede determinar encendiendo y apagando el producto, el usuario es

Se recomienda intentar corregir la interferencia mediante una o más de las siguientes medidas.

- · Reorientar o reubicar la antena receptora.
- · Aumente la distancia entre el producto y el receptor.
- · Conecte el producto a una toma de corriente de un circuito diferente al que está conectado el receptor.
- · Consulte al distribuidor o a un técnico de radio/TV experimentado para obtener ayuda.

Eliminación correcta



Este producto está sujeto a las disposiciones de la Directiva europea 2012/19/UE.

El símbolo que muestra un contenedor de basura tachado indica que el producto requiere

recogida selectiva de residuos en la Unión Europea. Esto se aplica al producto y

Todos los accesorios marcados con este símbolo. Los productos marcados como tal no pueden

Se desecha con la basura doméstica normal, pero debe llevarse a un punto de recolección para reciclar.

Dispositivos eléctricos y electrónicos.

Important Notice

Attention please! This product can only be put into massive production after strict performance demonstration and actual testing as well as verify its compliance with the safety standards. The manufacturer or distributor will not be responsible for any accident caused by use of damaged parts or abnormal faulty or broken parts. Nor do we responsible for any accident caused by improper assembly or operation in an unsafe environment during the use of any remote control model. Please make sure to operate this product in a safe environment.

Troubleshooting

| Product problems | Solutions |
|---|--|
| Failure to start the excavator | The power switch is off, please turn it on. The battery is loaded incorrectly. Please check the positive and negative polarity of the battery to ensure correct loading of the battery. The battery is exhausted, please charge the battery or replace the battery. |
| The remote control is unavailable for use | The battery in the transmitter is exhausted, please replace it with a new battery. The excavator is beyond the controlling scope of the transmitter, please keep it in the controllable range. Considering the presence of electromagnetic interference on surroundings, please bring the toy to a spacious site and use it. |

Note: The surrounding electromagnetic wave interference may lead to the remote control car failure, you can restart the remote control car and operate again.










R/C Excavator with Atomizing Function

Instruction Manual

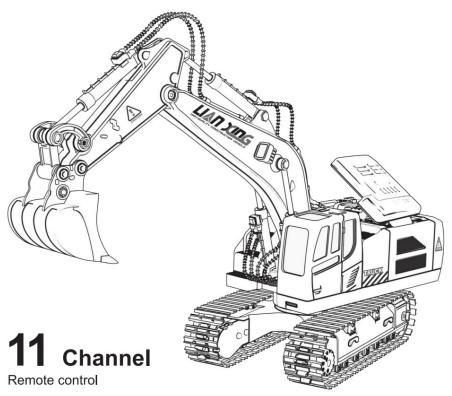

Important information is contained in this Instruction Manual. Please well keep it for future reference.




















console in 680°


Preface

■ Thank you for purchasing our product. In order to use it correctly, please do read this Instruction Manual carefully before operation. Meanwhile, Important information is contained in this Instruction Manual, please well keep it for future reference.

Content

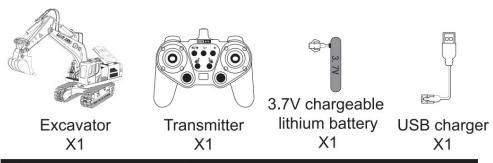


Name of excavator parts

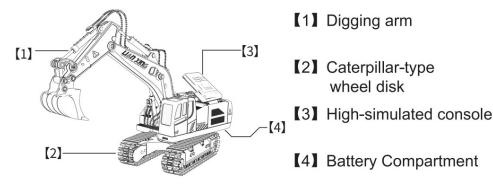

Battery loading and using

1.Battery loading of the transmitter

Loosen the screw on the battery cover of the transmitter, correctly load 2x1.5V "AA" non-chargeable batteries (Battery not included) into the transmitter as per the correct "+/-" polarity indicated, then close the battery cover again and tighten the screw.

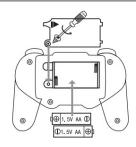

- Please DO NOT play this product in dangerous places such as public roads. Choose a safe place to operate this product so as to avoid danger.
- Please DO NOT use this product on elevated places such as tables or counters so as to prevent high-altitude falling or drops.
- Please DO NOT place this product in direct sunlight or in places where the temperature or the temperature of the heating device are too high so as to avoid deformation or even damage.
- DO NOT play this product during rainy days or on puddles, so that it will not get wet by water and become faulty. If it gets wet accidentally, please absorb the water with a cloth which has good water absorption performance.
- Please DO NOT touch the wheels by fingers, hair, clothes while playing to avoid injury.
- When there is insufficient power with the R/C car or transmitter, the speed of the R/C car will obviously slow down, this time please replace the batteries or charge it timely.
- DO NOT pull the digging arm with your hand by force, so as not to cause damage to the excavator.
- Please DO NOT damage the antenna so as to avoid causing damaged to the transmitter.
- Maintenance: Wipe stains off the surface with a dry cloth.

Attention

The hydraulic rod and track of this product are easy to be damaged or fallen off. In case a part is damaged or missing, please purchase the same model from the manufacturer or dealer and install it by your own. Make sure that the product be complete in structure . Please DO NOT use different models or different brands of parts for installation so as to ensure the structural safety of the product.

- Non-chargeable batteries are NOT allowed to be charged.
- Rechargeable batteries can only be charged under the surveillance of the adult.
- Rechargeable batteries should be removed from toys before recharging.
- How to remove and place batteries? Loosen the screw with a screwdriver, open the battery cover, and load or remove the batteries as per the correct "+/-"polarity.
- Removing or loading batteries should be made as per the marks shown in the battery compartment.
- Only the batteries same as the recommended or the equivalence or the same brand can be used.
- DO NOT mix old batteries with the new ones.
 Batteries of different types can not be mixed using together.
- The battery should be loaded as per correct"+/-" polarity.
- The exhausted battery should be removed from the toy. Batteries in the toy should be removed if left unused for a long time;
- The power terminal MUST NOT be short-circuited;
- Please DO NOT connect with the power supplies more than the quantity recommended.
- USB charging cable connection must be completed by parent.
- This product can only be charged by using the USB charging cable included in this product, never use the USB charging cable not recommended.
- ATTENTION: USB charging cable is not a toy.
- Please check periodically the USB charging cable, wire, plug, outer shell and other parts if they are damaged or not. In case damage, please stop using it until it is well repaired.


SAFETY PRECAUTIONS

 Small parts are contained in this product, please place this product out of the reach of the children so as to avoid the CHOKING HAZARD. Children under 3 years old are NOT allowed to use this product.

2.Battery loading of excavator

Make sure the power switch is in the OFF position, unscrew the battery cover of the excavator, and remove the cover of the battery compartment.

Plug the power loaded with 3.7V rechargeable battery into the power connector of the battery compartment of the excavator and then close the cover of the battery again and tighten the screws.

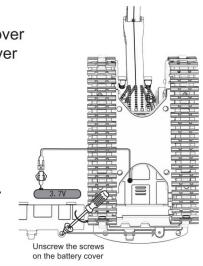


WARNING:

Please remove the batteries if the excavator is left unused for a long time.

3. Battery Charging of the Excavator

Insert the battery plug into the USB charging cable and then connect the USB charging cable with the adapter or USB port on the computer. When the lithium battery is under charging, the red light is normally "ON" and the red light will be "OFF" when the battery is fully charged. It takes about 3-4 hours to get the battery fully charged.

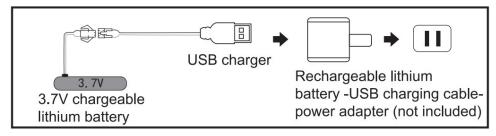


- \triangle
- Please check whether the input voltage of the adapter is consistent with the current voltage before charging.
- The output voltage of the adapter is to be consistent with that of the battery.

- Charging is to be done under the supervision of the adult.
- Keep the product away from combustibles when it is under charging and the charging shall be done under adult supervision.

Operating demonstration




Push the transmitter to (1) so that the excavator moves forward; push the transmitter to (2) so that the excavator moves backward;

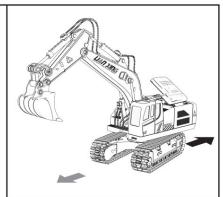





Push the transmitter to (1) so that the excavator turns to the left; push the transmitter to (2) so that the excavator turns to the right.

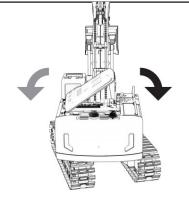




 
Press the key (as shown) and the excavator will make Auto-DEMO.

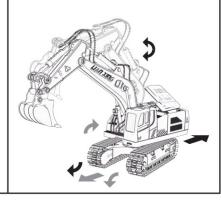




 
Press the transmitter (1) so that the excavator console rotate to the left by 680 degrees; press the transmitter (2) so that the excavator console rotate to the right by 680 degrees.

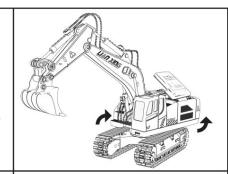




Press the Key (1) on the transmitter and the digging arm of the excavator goes up; Press the Key (2) on the transmitter and the excavator's digging arm goes down.

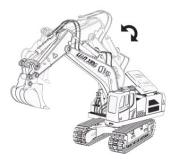

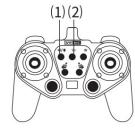

 Keep pressing key (1) for switching on or switching off the sound. Shortly pressing it for switching on or switching off the light; Press the key (2) Atomizing Switch and wait for 2 seconds.



Remove the soft rubber plug, inject with half a bottle of water by using the water filler prepared beforehand and then cover with the soft rubber plug.

More operating functions and more surprises are to be discovered by you.



Please wipe the dirt off the surface of the product with a dry cloth when finish using it so as to avoid damage to the parts and thus extend the service life of the product.

PRECAUTION ON BATTERY

 Type of battery required for the toy:1x 3.7V rechargeable lithium battery is required in this excavator. 2x 1.5V "AA" non-rechargeable batteries (not included) are required in this transmitter.



Wsparcie techniczne i certyfikat e-gwarancji www.vevor.com/support

Producent: SHANTOU CHENGHAI LIANXING FABRYKA ZABAWEK

Adres: nr 3, rząd 10, wschód od Longfeng Road, Longtian, ulica Guangyi, dzielnica Chenghai,

Shantou, prowincja Guangdong, Chiny

Przedstawiciel KE: E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt nad Menem.

ODPOWIEDZIALNOŚĆW WIELKIEI BRYTANII: YH CONSULTING LIMITED.

C/O YH Consulting Limited Biuro 147, Centurion House, London Road,

Staines-upon-Thames, Surrey, TW18 4AX

Importowane do AUS: SIHAO PTY LTD.

1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Importowane do USA: Sanven Technology Ltd.

Apartament 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

Nadal staramy się oferować Państwu narzę dzia w konkurencyjnych cenach.

"Oszczę dź połowę", "Połowa ceny" lub jakiekolwiek inne podobne wyrażenia używane przez nas oznaczają wyłącznie szacunkowe oszczę dności, jakie możesz uzyskać kupując u nas określone narzę dzia w porównaniu z główne, najlepsze marki i niekoniecznie oznacza to, że obejmuje wszystkie kategorie oferowanych narzę dzi przez nas. Uprzejmie przypominamy, aby dokładnie sprawdzić, kiedy składasz u nas zamówienie czy faktycznie oszczę dzasz połowę w porównaniu z najlepszymi markami.

To jest oryginalna instrukcja, przed użyciem należy uważnie przeczytać wszystkie instrukcje.

operacyjny. VEVOR zastrzega sobie jednoznaczną interpretację naszej instrukcji obsługi. Wygląd

produktu bę dzie podlegać produktowi, który otrzymałeś. Proszę wybaczyć nam, że

nie bę dziemy Cię już wię cej informować o aktualizacjach technologii lub oprogramowania dla naszego produktu.

Wywrotka RC Model: 3367

Informacje FCC (FCC ID: 2BEDH-3369):

UWAGA: Zmiany lub modyfikacje, które nie zostały wyraźnie zatwierdzone przez stronę odpowiedzialną za

niezgodność może spowodować unieważnienie prawa użytkownika do korzystania ze sprzę tu!

To urządzenie jest zgodne z czę ścia 15 przepisów FCC. Eksploatacja podlega nastę pującym zasadom

dwa warunki:

1) Produkt ten może powodować szkodliwe zakłócenia.

2) Produkt ten musi akceptować wszelkie odbierane zakłócenia, w tym zakłócenia, które moga

powodować niepożadane działanie.

OSTRZEŻENIE: Zmiany lub modyfikacje tego produktu nie są wyraźnie zatwierdzone przez strone

odpowiedzialność za zgodność może spowodować unieważnienie prawa użytkownika do korzystania z produktu.

Uwaga: Ten produkt został przetestowany i uznany za zgodny z ograniczeniami dla urządzeń cyfrowych klasy B.

urzadzenie zgodnie z Cze ścia 15 Przepisów FCC. Te ograniczenia maja na celu zapewnienie

rozsądna ochrona przed szkodliwymi zakłóceniami w instalacjach domowych.

Ten produkt generuje, wykorzystuje i może emitować energie o cze stotliwości radiowej i jeśli nie jest zainstalowany

i używany zgodnie z instrukcją może powodować szkodliwe zakłócenia w

radiokomunikacji. Nie ma jednak gwarancji, że zakłócenia nie wystąpią w

szczególna instalacja. Jeśli ten produkt powoduje szkodliwe zakłócenia w radiu lub telewizji

odbiór, który można określić poprzez wyłączenie i włączenie produktu, użytkownik jest

zache camy do podję cia próby skorygowania zakłóceń poprzez zastosowanie jednego lub kilku z nastę pujących środków.

- · Zmiana orientacji lub położenia anteny odbiorczej.
- · Zwie ksz odległość mie dzy produktem a odbiornikiem.
- · Podłączyć produkt do gniazdka w innym obwodzie niż ten, do którego podłączony jest odbiornik.

połączony.

· Aby uzyskać pomoc, należy zwrócić się do sprzedawcy lub doświadczonego technika radiowo-telewizyjnego.

Prawidłowa utvlizacia



Ten produkt podlega postanowieniom dyrektywy europejskiej 2012/19/UE.

symbol przedstawiający przekreślony kosz na śmieci oznacza, że produkt wymaga

selektywna zbiórka odpadów w Unii Europejskiej. Dotyczy to produktu i

wszystkie akcesoria oznaczone tym symbolem. Produkty oznaczone w ten sposób nie moga być

wyrzucać razem z normalnymi odpadami domowymi, ale należy je oddać do punktu zbiórki w celu recyklingu urządzenia elektryczne i elektroniczne.

Important Notice

Attention please! This product can only be put into massive production after strict performance demonstration and actual testing as well as verify its compliance with the safety standards. The manufacturer or distributor will not be responsible for any accident caused by use of damaged parts or abnormal faulty or broken parts. Nor do we responsible for any accident caused by improper assembly or operation in an unsafe environment during the use of any remote control model. Please make sure to operate this product in a safe environment.

Troubleshooting

| Product problems | Solutions |
|---|--|
| Failure to start the excavator | The power switch is off, please turn it on. The battery is loaded incorrectly. Please check the positive and negative polarity of the battery to ensure correct loading of the battery. The battery is exhausted, please charge the battery or replace the battery. |
| The remote control is unavailable for use | The battery in the transmitter is exhausted, please replace it with a new battery. The excavator is beyond the controlling scope of the transmitter, please keep it in the controllable range. Considering the presence of electromagnetic interference on surroundings, please bring the toy to a spacious site and use it. |

Note: The surrounding electromagnetic wave interference may lead to the remote control car failure, you can restart the remote control car and operate again.










R/C Excavator with Atomizing Function

Instruction Manual

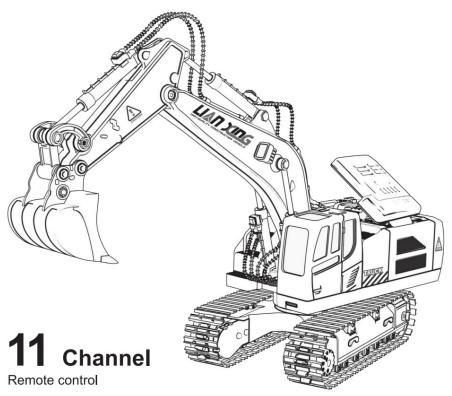

Important information is contained in this Instruction Manual. Please well keep it for future reference.




















console in 680°


Preface

■ Thank you for purchasing our product. In order to use it correctly, please do read this Instruction Manual carefully before operation. Meanwhile, Important information is contained in this Instruction Manual, please well keep it for future reference.

Content

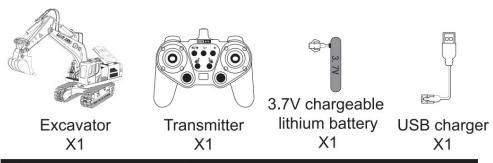


Name of excavator parts

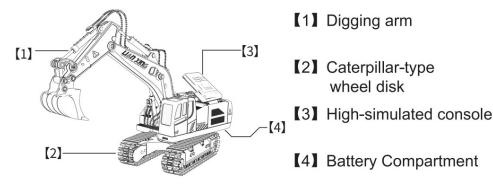

Battery loading and using

1.Battery loading of the transmitter

Loosen the screw on the battery cover of the transmitter, correctly load 2x1.5V "AA" non-chargeable batteries (Battery not included) into the transmitter as per the correct "+/-" polarity indicated, then close the battery cover again and tighten the screw.

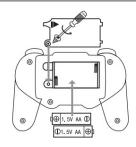

- Please DO NOT play this product in dangerous places such as public roads. Choose a safe place to operate this product so as to avoid danger.
- Please DO NOT use this product on elevated places such as tables or counters so as to prevent high-altitude falling or drops.
- Please DO NOT place this product in direct sunlight or in places where the temperature or the temperature of the heating device are too high so as to avoid deformation or even damage.
- DO NOT play this product during rainy days or on puddles, so that it will not get wet by water and become faulty. If it gets wet accidentally, please absorb the water with a cloth which has good water absorption performance.
- Please DO NOT touch the wheels by fingers, hair, clothes while playing to avoid injury.
- When there is insufficient power with the R/C car or transmitter, the speed of the R/C car will obviously slow down, this time please replace the batteries or charge it timely.
- DO NOT pull the digging arm with your hand by force, so as not to cause damage to the excavator.
- Please DO NOT damage the antenna so as to avoid causing damaged to the transmitter.
- Maintenance: Wipe stains off the surface with a dry cloth.

Attention

The hydraulic rod and track of this product are easy to be damaged or fallen off. In case a part is damaged or missing, please purchase the same model from the manufacturer or dealer and install it by your own. Make sure that the product be complete in structure . Please DO NOT use different models or different brands of parts for installation so as to ensure the structural safety of the product.

- Non-chargeable batteries are NOT allowed to be charged.
- Rechargeable batteries can only be charged under the surveillance of the adult.
- Rechargeable batteries should be removed from toys before recharging.
- How to remove and place batteries? Loosen the screw with a screwdriver, open the battery cover, and load or remove the batteries as per the correct "+/-"polarity.
- Removing or loading batteries should be made as per the marks shown in the battery compartment.
- Only the batteries same as the recommended or the equivalence or the same brand can be used.
- DO NOT mix old batteries with the new ones.
 Batteries of different types can not be mixed using together.
- The battery should be loaded as per correct"+/-" polarity.
- The exhausted battery should be removed from the toy. Batteries in the toy should be removed if left unused for a long time;
- The power terminal MUST NOT be short-circuited;
- Please DO NOT connect with the power supplies more than the quantity recommended.
- USB charging cable connection must be completed by parent.
- This product can only be charged by using the USB charging cable included in this product, never use the USB charging cable not recommended.
- ATTENTION: USB charging cable is not a toy.
- Please check periodically the USB charging cable, wire, plug, outer shell and other parts if they are damaged or not. In case damage, please stop using it until it is well repaired.


SAFETY PRECAUTIONS

 Small parts are contained in this product, please place this product out of the reach of the children so as to avoid the CHOKING HAZARD. Children under 3 years old are NOT allowed to use this product.

2.Battery loading of excavator

Make sure the power switch is in the OFF position, unscrew the battery cover of the excavator, and remove the cover of the battery compartment.

Plug the power loaded with 3.7V rechargeable battery into the power connector of the battery compartment of the excavator and then close the cover of the battery again and tighten the screws.

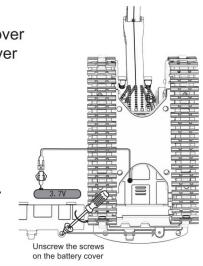


WARNING:

Please remove the batteries if the excavator is left unused for a long time.

3. Battery Charging of the Excavator

Insert the battery plug into the USB charging cable and then connect the USB charging cable with the adapter or USB port on the computer. When the lithium battery is under charging, the red light is normally "ON" and the red light will be "OFF" when the battery is fully charged. It takes about 3-4 hours to get the battery fully charged.

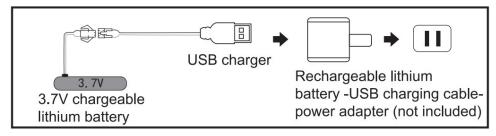


- \triangle
- Please check whether the input voltage of the adapter is consistent with the current voltage before charging.
- The output voltage of the adapter is to be consistent with that of the battery.

- Charging is to be done under the supervision of the adult.
- Keep the product away from combustibles when it is under charging and the charging shall be done under adult supervision.

Operating demonstration




Push the transmitter to (1) so that the excavator moves forward; push the transmitter to (2) so that the excavator moves backward;

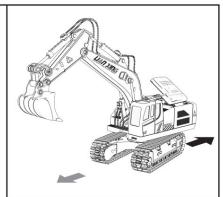





Push the transmitter to (1) so that the excavator turns to the left; push the transmitter to (2) so that the excavator turns to the right.

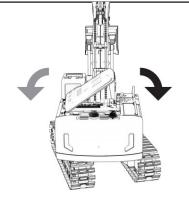




 
Press the key (as shown) and the excavator will make Auto-DEMO.

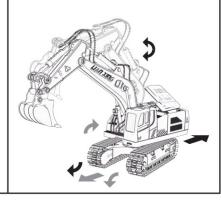




 
Press the transmitter (1) so that the excavator console rotate to the left by 680 degrees; press the transmitter (2) so that the excavator console rotate to the right by 680 degrees.

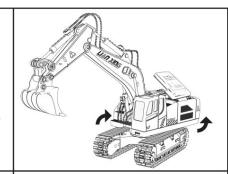




Press the Key (1) on the transmitter and the digging arm of the excavator goes up; Press the Key (2) on the transmitter and the excavator's digging arm goes down.

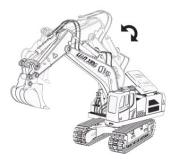

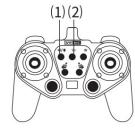

 Keep pressing key (1) for switching on or switching off the sound. Shortly pressing it for switching on or switching off the light; Press the key (2) Atomizing Switch and wait for 2 seconds.



Remove the soft rubber plug, inject with half a bottle of water by using the water filler prepared beforehand and then cover with the soft rubber plug.

More operating functions and more surprises are to be discovered by you.



Please wipe the dirt off the surface of the product with a dry cloth when finish using it so as to avoid damage to the parts and thus extend the service life of the product.

PRECAUTION ON BATTERY

 Type of battery required for the toy:1x 3.7V rechargeable lithium battery is required in this excavator. 2x 1.5V "AA" non-rechargeable batteries (not included) are required in this transmitter.



Technische ondersteuning en e-garantiecertificaat www.vevor.com/support

Fabrikant: SHANTOU CHENGHAI LIANXING SPEELGOEDFABRIEK

Adres: No.3, Rij 10, ten oosten van Longfeng Road, Longtian, Guangyi Street, Chenghai

District, Shantou, provincie Guangdong, China

EC-REP: E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.

VK VERTEGENWOORDIGING: YH CONSULTING LIMITED.

C/O YH Consulting Limited Kantoor 147, Centurion House, London Road,

Staines-upon-Thames, Surrey, TW18 4AX

Geimporteerd naar AUS: SIHAO PTY LTD.

1 ROKEVA STRAAT EASTWOOD NSW 2122 Australië

Geïmporteerd naar de VS: Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

Wij streven er voortdurend naar om u gereedschappen tegen concurrerende prijzen te leveren.

"Bespaar de helft", "halve prijs" of andere soortgelijke uitdrukkingen die wij gebruiken, vertegenwoordigen slechts een schatting van de besparingen die u kunt behalen door bepaalde gereedschappen bij ons te kopen in vergelijking met de grote topmerken en betekent niet noodzakelijkerwijs dat alle categorieën aangeboden gereedschappen worden gedekt door ons. Wij herinneren u eraan om zorgvuldig te controleren wanneer u een bestelling bij ons plaatst als je daadwerkelijk de helft bespaart in vergelijking met de grote topmerken.

Dit zijn de originele instructies. Lees alle instructies in de handleiding zorgvuldig door voordat u begint. bediening. VEVOR behoudt zich een duidelijke interpretatie van onze gebruikershandleiding voor. Het uiterlijk van het product is onderworpen aan het product dat u hebt ontvangen. Vergeef ons dat we zullen u niet meer informeren als er technologische of software-updates voor ons product beschikbaar zijn.

RC kiepwagen Model: 3367

FCC-informatie (FCC- ID: 2BEDH-3369):

LET OP: Wijzigingen of aanpassingen die niet uitdrukkelijk zijn goedgekeurd door de partij die verantwoordelijk is voor

naleving kan de bevoegdheid van de gebruiker om de apparatuur te bedienen ongeldig maken!

Dit apparaat voldoet aan Deel 15 van de FCC-regels. De werking is onderworpen aan de volgende

twee voorwaarden:

1) Dit product kan schadelijke interferentie veroorzaken.

2) Dit product moet alle ontvangen interferentie accepteren, inclusief interferentie die kan

ongewenste werking veroorzaken.

WAARSCHUWING: Wijzigingen of aanpassingen aan dit product die niet uitdrukkelijk door de partij zijn goedgekeurd

verantwoordelijk is voor de naleving, kan de bevoegdheid van de gebruiker om het product te bedienen ongeldig maken.

Let op: Dit product is getest en voldoet aan de limieten voor een digitale klasse B-batterij.

apparaat overeenkomstig Deel 15 van de FCC-regels. Deze limieten zijn bedoeld om

redelijke bescherming tegen schadelijke interferentie in een residentiële installatie.

Dit product genereert, gebruikt en kan radiofrequentie-energie uitstralen, en als het niet is geïnstalleerd

en gebruikt in overeenstemming met de instructies, kan het schadelijke interferentie veroorzaken in

radiocommunicatie. Er is echter geen garantie dat er geen interferentie zal optreden in een

specifieke installatie. Als dit product schadelijke interferentie veroorzaakt aan radio of televisie

ontvangst, die kan worden bepaald door het product uit en aan te zetten, is de gebruiker

Wij raden u aan om te proberen de interferentie te verhelpen door een of meer van de volgende maatregelen te nemen.

- · Heroriënteer of verplaats de ontvangstantenne.
- · Vergroot de afstand tussen het product en de ontvanger.
- · Sluit het product aan op een stopcontact op een ander circuit dan dat waarop de ontvanger is aangesloten.

aangesloten.

· Raadpleeg de dealer of een ervaren radio-/tv-technicus voor hulp.

Correcte verwijdering



Dit product is onderworpen aan de bepalingen van de Europese richtlijn 2012/19/EU.

symbool met een doorgestreepte afvalbak geeft aan dat het product

gescheiden afvalinzameling in de Europese Unie. Dit geldt voor het product en

alle accessoires gemarkeerd met dit symbool. Producten die als zodanig zijn gemarkeerd, mogen niet

weggegooid met het normale huisvuil, maar moet naar een inzamelpunt worden gebracht voor recycling elektrische en elektronische apparaten.

Important Notice

Attention please! This product can only be put into massive production after strict performance demonstration and actual testing as well as verify its compliance with the safety standards. The manufacturer or distributor will not be responsible for any accident caused by use of damaged parts or abnormal faulty or broken parts. Nor do we responsible for any accident caused by improper assembly or operation in an unsafe environment during the use of any remote control model. Please make sure to operate this product in a safe environment.

Troubleshooting

| Product problems | Solutions |
|---|--|
| Failure to start the excavator | The power switch is off, please turn it on. The battery is loaded incorrectly. Please check the positive and negative polarity of the battery to ensure correct loading of the battery. The battery is exhausted, please charge the battery or replace the battery. |
| The remote control is unavailable for use | The battery in the transmitter is exhausted, please replace it with a new battery. The excavator is beyond the controlling scope of the transmitter, please keep it in the controllable range. Considering the presence of electromagnetic interference on surroundings, please bring the toy to a spacious site and use it. |

Note: The surrounding electromagnetic wave interference may lead to the remote control car failure, you can restart the remote control car and operate again.










R/C Excavator with Atomizing Function

Instruction Manual

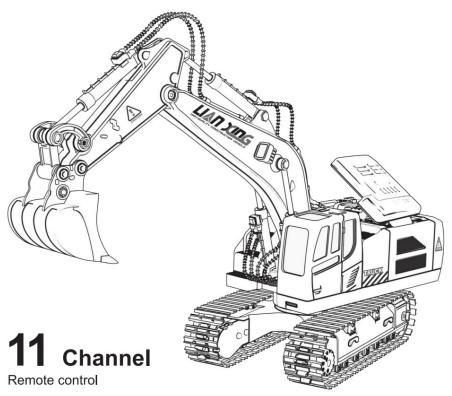

Important information is contained in this Instruction Manual. Please well keep it for future reference.




















console in 680°


Preface

■ Thank you for purchasing our product. In order to use it correctly, please do read this Instruction Manual carefully before operation. Meanwhile, Important information is contained in this Instruction Manual, please well keep it for future reference.

Content

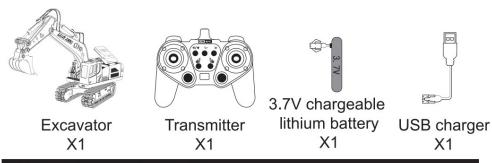

Name of excavator parts

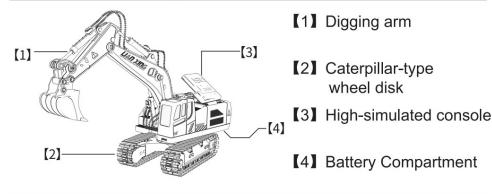

Battery loading and using

1.Battery loading of the transmitter

Loosen the screw on the battery cover of the transmitter, correctly load 2x1.5V "AA" non-chargeable batteries (Battery not included) into the transmitter as per the correct "+/-" polarity indicated, then close the battery cover again and tighten the screw.



- Please DO NOT play this product in dangerous places such as public roads. Choose a safe place to operate this product so as to avoid danger.
- Please DO NOT use this product on elevated places such as tables or counters so as to prevent high-altitude falling or drops.
- Please DO NOT place this product in direct sunlight or in places where the temperature or the temperature of the heating device are too high so as to avoid deformation or even damage.
- DO NOT play this product during rainy days or on puddles, so that it will not get wet by water and become faulty. If it gets wet accidentally, please absorb the water with a cloth which has good water absorption performance.
- Please DO NOT touch the wheels by fingers, hair, clothes while playing to avoid injury.
- When there is insufficient power with the R/C car or transmitter, the speed of the R/C car will obviously slow down, this time please replace the batteries or charge it timely.
- DO NOT pull the digging arm with your hand by force, so as not to cause damage to the excavator.
- Please DO NOT damage the antenna so as to avoid causing damaged to the transmitter.
- Maintenance: Wipe stains off the surface with a dry cloth.

Attention

The hydraulic rod and track of this product are easy to be damaged or fallen off. In case a part is damaged or missing, please purchase the same model from the manufacturer or dealer and install it by your own. Make sure that the product be complete in structure . Please DO NOT use different models or different brands of parts for installation so as to ensure the structural safety of the product.

- Non-chargeable batteries are NOT allowed to be charged.
- Rechargeable batteries can only be charged under the surveillance of the adult.
- Rechargeable batteries should be removed from toys before recharging.
- How to remove and place batteries? Loosen the screw with a screwdriver, open the battery cover, and load or remove the batteries as per the correct "+/-"polarity.
- Removing or loading batteries should be made as per the marks shown in the battery compartment.
- Only the batteries same as the recommended or the equivalence or the same brand can be used.
- DO NOT mix old batteries with the new ones.
 Batteries of different types can not be mixed using together.
- The battery should be loaded as per correct"+/-" polarity.
- The exhausted battery should be removed from the toy. Batteries in the toy should be removed if left unused for a long time;
- The power terminal MUST NOT be short-circuited;
- Please DO NOT connect with the power supplies more than the quantity recommended.
- USB charging cable connection must be completed by parent.
- This product can only be charged by using the USB charging cable included in this product, never use the USB charging cable not recommended.
- ATTENTION: USB charging cable is not a toy.
- Please check periodically the USB charging cable, wire, plug, outer shell and other parts if they are damaged or not. In case damage, please stop using it until it is well repaired.


SAFETY PRECAUTIONS

 Small parts are contained in this product, please place this product out of the reach of the children so as to avoid the CHOKING HAZARD. Children under 3 years old are NOT allowed to use this product.

2.Battery loading of excavator

Make sure the power switch is in the OFF position, unscrew the battery cover of the excavator, and remove the cover of the battery compartment.

Plug the power loaded with 3.7V rechargeable battery into the power connector of the battery compartment of the excavator and then close the cover of the battery again and tighten the screws.

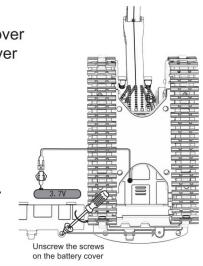


WARNING:

Please remove the batteries if the excavator is left unused for a long time.

3. Battery Charging of the Excavator

Insert the battery plug into the USB charging cable and then connect the USB charging cable with the adapter or USB port on the computer. When the lithium battery is under charging, the red light is normally "ON" and the red light will be "OFF" when the battery is fully charged. It takes about 3-4 hours to get the battery fully charged.

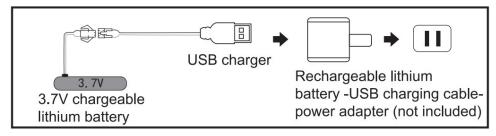


- \triangle
- Please check whether the input voltage of the adapter is consistent with the current voltage before charging.
- The output voltage of the adapter is to be consistent with that of the battery.

- Charging is to be done under the supervision of the adult.
- Keep the product away from combustibles when it is under charging and the charging shall be done under adult supervision.

Operating demonstration




Push the transmitter to (1) so that the excavator moves forward; push the transmitter to (2) so that the excavator moves backward;

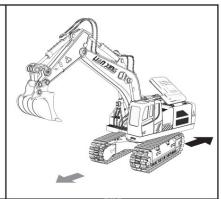





Push the transmitter to (1) so that the excavator turns to the left; push the transmitter to (2) so that the excavator turns to the right.

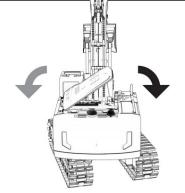




 
Press the key (as shown) and the excavator will make Auto-DEMO.

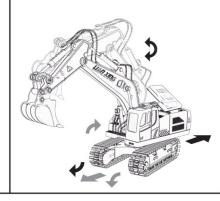



 
Press the transmitter (1) so that the excavator console rotate to the left by 680 degrees; press the transmitter (2) so that the excavator console rotate to the right by 680 degrees.

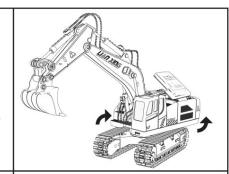




Press the Key (1) on the transmitter and the digging arm of the excavator goes up; Press the Key (2) on the transmitter and the excavator's digging arm goes down.



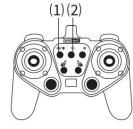

 Keep pressing key (1) for switching on or switching off the sound Shortly pressing it for switching on or switching off the light; Press the key (2) Atomizing Switch and wait for 2 seconds.



Remove the soft rubber plug, inject with half a bottle of water by using the water filler prepared beforehand and then cover with the soft rubber plug.

More operating functions and more surprises are to be discovered by you.



Please wipe the dirt off the surface of the product with a dry cloth when finish using it so as to avoid damage to the parts and thus extend the service life of the product.

PRECAUTION ON BATTERY

 Type of battery required for the toy:1x 3.7V rechargeable lithium battery is required in this excavator. 2x 1.5V "AA" non-rechargeable batteries (not included) are required in this transmitter.



Teknisk support och e-garanticertifikat www.vevor.com/support

Tillverkare: SHANTOU CHENGHAI LIANXING TOYS FACTORY

Adress: No.3, Rad 10, East of Longfeng Road, Longtian, Guangyi Street,

Chenghai District, Shantou, Guangdong-provinsen, Kina

EC REP: E-CrossStu GmbH

Mainzer Landstr.69, 60329 Frankfurt am Main.

UK REP: YH CONSULTING LIMITED.

C/O YH Consulting Limited Office 147, Centurion House, London Road,

Staines-upon-Thames, Surrey, TW18 4AX

Importerad till AUS: SIHAO PTY LTD.

1 ROKEVA STREETEASTWOOD NSW 2122 Australien

Importerad till USA: Sanven Technology Ltd.

Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

Vi fortsätter att vara engagerade i att ge dig verktyg till konkurrenskraftiga priser.

"Spara hälften", "Halva priset" eller andra liknande uttryck som används av oss representerar endast en uppskattning av besparingar du kan dra nytta av att köpa vissa verktyg hos oss jämfört med stora toppmärken och betyder inte nödvändigtvis att täcka alla kategorier av verktyg som erbjuds av oss. Du påminns om att kontrollera noggrant när du gör en beställning hos oss om du faktiskt sparar hälften i jämförelse med de främsta stora varumärkena.

Detta är den ursprungliga instruktionen, läs alla manualer noggrant innan fungerar. VEVOR reserverar sig för en tydlig tolkning av vår användarmanual. Utseendet av produkten ska vara föremål för produkten du fått. Förlåt oss att vi kommer inte att informera dig igen om det finns några teknik- eller programuppdateringar på vår produkt.

RC dumper modell: 3367 FCC-information (FCC ID:2BEDH-3369):

VARNING: Ändringar eller modifieringar som inte uttryckligen godkänts av den part som ansvarar för överensstämmelse kan ogiltigförklara användarens behörighet att använda utrustningen!

Denna enhet uppfyller del 15 av FCC-reglerna. Driften är föremål för följande två villkor:

- 1) Denna produkt kan orsaka skadliga störningar.
- 2) Denna produkt måste acceptera alla mottagna störningar, inklusive störningar som kan orsaka oönskad funktion.

VARNING: Ändringar eller modifieringar av denna produkt som inte uttryckligen godkänts av parten ansvarig för efterlevnad kan ogiltigförklara användarens behörighet att använda produkten.

Obs: Denna produkt har testats och befunnits uppfylla gränserna för en digital klass B enhet i enlighet med del 15 av FCC-reglerna. Dessa gränser är utformade för att tillhandahålla rimligt skydd mot skadliga störningar i en bostadsinstallation.

Denna produkt genererar, använder och kan utstråla radiofrekvensenergi, och om den inte är installerad och används i enlighet med instruktionerna, kan det orsaka skadliga störningar i radiokommunikation. Det finns dock ingen garanti för att störningar inte kommer att inträffa i en speciell installation. Om denna produkt orsakar skadliga störningar på radio eller TV mottagning, som kan fastställas genom att stänga av och på produkten, är användaren uppmuntras att försöka korrigera störningen genom en eller flera av följande åtgärder.

- · Rikta om eller flytta mottagningsantennen.
- · Öka avståndet mellan produkten och mottagaren.
- Anslut produkten till ett uttag på en annan krets än den som mottagaren är till ansluten.
- · Kontakta återförsäljaren eller en erfaren radio/TV-tekniker för hjälp.

Korrekt avfallshantering



Denna produkt omfattas av bestämmelserna i det europeiska direktivet 2012/19/EU. De symbol som visar en soptunna på hjul korsad anger att produkten kräver separat sophämtning i Europeiska unionen. Detta gäller produkten och alla tillbehör märkta med denna symbol. Produkter märkta som sådana kanske inte är det

kasseras tillsammans med vanligt hushållsavfall, men måste lämnas till en insamlingsplats för återvinning elektriska och elektroniska apparater.

Important Notice

Attention please! This product can only be put into massive production after strict performance demonstration and actual testing as well as verify its compliance with the safety standards. The manufacturer or distributor will not be responsible for any accident caused by use of damaged parts or abnormal faulty or broken parts. Nor do we responsible for any accident caused by improper assembly or operation in an unsafe environment during the use of any remote control model. Please make sure to operate this product in a safe environment.

Troubleshooting

| Product problems | Solutions |
|---|--|
| Failure to start the excavator | The power switch is off, please turn it on. The battery is loaded incorrectly. Please check the positive and negative polarity of the battery to ensure correct loading of the battery. The battery is exhausted, please charge the battery or replace the battery. |
| The remote control is unavailable for use | The battery in the transmitter is exhausted, please replace it with a new battery. The excavator is beyond the controlling scope of the transmitter, please keep it in the controllable range. Considering the presence of electromagnetic interference on surroundings, please bring the toy to a spacious site and use it. |

Note: The surrounding electromagnetic wave interference may lead to the remote control car failure, you can restart the remote control car and operate again.










R/C Excavator with Atomizing Function

Instruction Manual

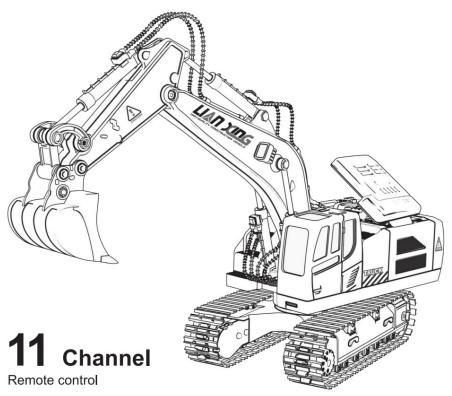

Important information is contained in this Instruction Manual. Please well keep it for future reference.




















console in 680°


Preface

■ Thank you for purchasing our product. In order to use it correctly, please do read this Instruction Manual carefully before operation. Meanwhile, Important information is contained in this Instruction Manual, please well keep it for future reference.

Content

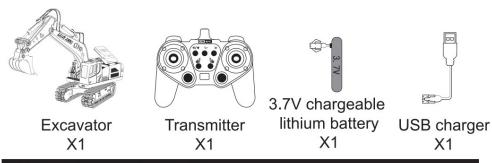

Name of excavator parts

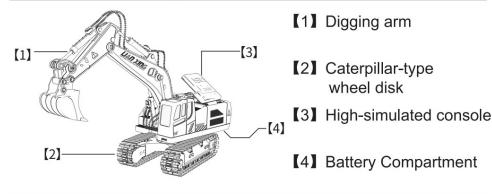

Battery loading and using

1.Battery loading of the transmitter

Loosen the screw on the battery cover of the transmitter, correctly load 2x1.5V "AA" non-chargeable batteries (Battery not included) into the transmitter as per the correct "+/-" polarity indicated, then close the battery cover again and tighten the screw.



- Please DO NOT play this product in dangerous places such as public roads. Choose a safe place to operate this product so as to avoid danger.
- Please DO NOT use this product on elevated places such as tables or counters so as to prevent high-altitude falling or drops.
- Please DO NOT place this product in direct sunlight or in places where the temperature or the temperature of the heating device are too high so as to avoid deformation or even damage.
- DO NOT play this product during rainy days or on puddles, so that it will not get wet by water and become faulty. If it gets wet accidentally, please absorb the water with a cloth which has good water absorption performance.
- Please DO NOT touch the wheels by fingers, hair, clothes while playing to avoid injury.
- When there is insufficient power with the R/C car or transmitter, the speed of the R/C car will obviously slow down, this time please replace the batteries or charge it timely.
- DO NOT pull the digging arm with your hand by force, so as not to cause damage to the excavator.
- Please DO NOT damage the antenna so as to avoid causing damaged to the transmitter.
- Maintenance: Wipe stains off the surface with a dry cloth.

Attention

The hydraulic rod and track of this product are easy to be damaged or fallen off. In case a part is damaged or missing, please purchase the same model from the manufacturer or dealer and install it by your own. Make sure that the product be complete in structure . Please DO NOT use different models or different brands of parts for installation so as to ensure the structural safety of the product.

- Non-chargeable batteries are NOT allowed to be charged.
- Rechargeable batteries can only be charged under the surveillance of the adult.
- Rechargeable batteries should be removed from toys before recharging.
- How to remove and place batteries? Loosen the screw with a screwdriver, open the battery cover, and load or remove the batteries as per the correct "+/-"polarity.
- Removing or loading batteries should be made as per the marks shown in the battery compartment.
- Only the batteries same as the recommended or the equivalence or the same brand can be used.
- DO NOT mix old batteries with the new ones.
 Batteries of different types can not be mixed using together.
- The battery should be loaded as per correct"+/-" polarity.
- The exhausted battery should be removed from the toy. Batteries in the toy should be removed if left unused for a long time;
- The power terminal MUST NOT be short-circuited;
- Please DO NOT connect with the power supplies more than the quantity recommended.
- USB charging cable connection must be completed by parent.
- This product can only be charged by using the USB charging cable included in this product, never use the USB charging cable not recommended.
- ATTENTION: USB charging cable is not a toy.
- Please check periodically the USB charging cable, wire, plug, outer shell and other parts if they are damaged or not. In case damage, please stop using it until it is well repaired.


SAFETY PRECAUTIONS

 Small parts are contained in this product, please place this product out of the reach of the children so as to avoid the CHOKING HAZARD. Children under 3 years old are NOT allowed to use this product.

2.Battery loading of excavator

Make sure the power switch is in the OFF position, unscrew the battery cover of the excavator, and remove the cover of the battery compartment.

Plug the power loaded with 3.7V rechargeable battery into the power connector of the battery compartment of the excavator and then close the cover of the battery again and tighten the screws.

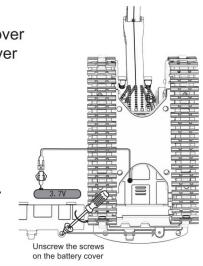


WARNING:

Please remove the batteries if the excavator is left unused for a long time.

3. Battery Charging of the Excavator

Insert the battery plug into the USB charging cable and then connect the USB charging cable with the adapter or USB port on the computer. When the lithium battery is under charging, the red light is normally "ON" and the red light will be "OFF" when the battery is fully charged. It takes about 3-4 hours to get the battery fully charged.

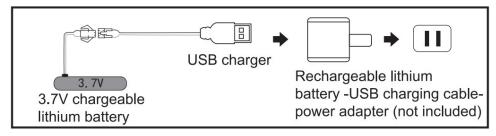


- \triangle
- Please check whether the input voltage of the adapter is consistent with the current voltage before charging.
- The output voltage of the adapter is to be consistent with that of the battery.

- Charging is to be done under the supervision of the adult.
- Keep the product away from combustibles when it is under charging and the charging shall be done under adult supervision.

Operating demonstration




Push the transmitter to (1) so that the excavator moves forward; push the transmitter to (2) so that the excavator moves backward;

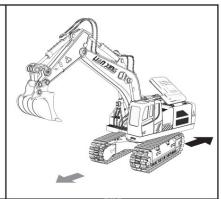





Push the transmitter to (1) so that the excavator turns to the left; push the transmitter to (2) so that the excavator turns to the right.

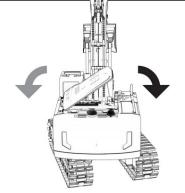




 
Press the key (as shown) and the excavator will make Auto-DEMO.

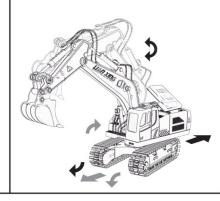



 
Press the transmitter (1) so that the excavator console rotate to the left by 680 degrees; press the transmitter (2) so that the excavator console rotate to the right by 680 degrees.

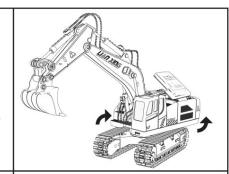




Press the Key (1) on the transmitter and the digging arm of the excavator goes up; Press the Key (2) on the transmitter and the excavator's digging arm goes down.



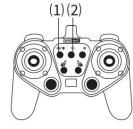

 Keep pressing key (1) for switching on or switching off the sound Shortly pressing it for switching on or switching off the light; Press the key (2) Atomizing Switch and wait for 2 seconds.



Remove the soft rubber plug, inject with half a bottle of water by using the water filler prepared beforehand and then cover with the soft rubber plug.

More operating functions and more surprises are to be discovered by you.



Please wipe the dirt off the surface of the product with a dry cloth when finish using it so as to avoid damage to the parts and thus extend the service life of the product.

PRECAUTION ON BATTERY

 Type of battery required for the toy:1x 3.7V rechargeable lithium battery is required in this excavator. 2x 1.5V "AA" non-rechargeable batteries (not included) are required in this transmitter.