

# **VEVOR<sup>®</sup>**

## **TOUGH TOOLS, HALF PRICE**

Technical Support and E-Warranty Certificate [www.vevor.com/support](http://www.vevor.com/support)

# **GARMENT STEAMER USER MANUAL**

**MODEL:FCL-H09**

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

# VEVOR<sup>®</sup>

TOUGH TOOLS, HALF PRICE

## GARMENT STEAMER

MODEL:FCL-H09

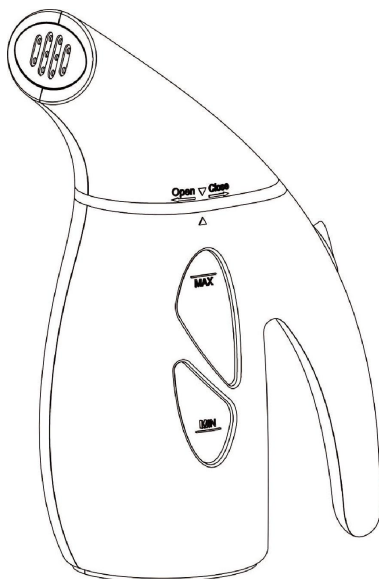



### NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

**Technical Support and E-Warranty Certificate**  
**[www.vevor.com/support](http://www.vevor.com/support)**

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	<p>Warning-To reduce the risk of injury, user must read instructions manual carefully.</p>
	<p>This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices</p>

## IMPORTANT SAFETY INSTRUCTIONS

When using your appliance, basic precautions below should always be followed:

1. Read all instructions.
2. To reduce the risk of contact with hot water emitting from steam vents, check appliance before each use by holding it away from body and operating switch button.
3. Use appliance only for its intended use.
4. To avoid the risk of electric shock, do not immerse the appliance in water or other liquids.
5. Never yank cord to disconnect from outlet; instead, grasp plug and pull it out gently.
6. Do not allow cord to touch hot surfaces. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.
7. Always disconnect the appliance from the electrical outlet when filling it with water, emptying it, or whenever it is not being used.
8. Do not operate appliance with a damaged cord, or when the appliance has been dropped or damaged. To avoid the risk of electric shock, do not attempt to disassemble or repair the appliance, take it to a qualified service person for evaluation and repair. Incorrect reassembly or repair could cause the risks of fire,

electric shock, or injury to persons while using the appliance.

9. Close supervision is necessary for any appliance being used by or near children. Do not leave appliance unattended while connected.

10. Burns could occur if touching hot metal parts, hot water, or steam. Be careful when you turn a steam appliance upside down- there may be hot water in the reservoir.

11. To reduce the likelihood of circuit overload, do not operate another high-wattage appliance on the same circuit.

12. If an extension cord is absolutely necessary, a 10 ampere-rated cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that the cord cannot be pulled or tripped over.

## SAVE THESE INSTRUCTIONS

### WARNINGS

1. Never exceed the "MAX" level, When filling the water reservoir, otherwise there is a risk of boiling water splashing.
2. Never fill the water reservoir when the power cord is plugged in.
3. Allow the appliance to cool for at least 5 minutes after it has been used.
4. Never add cold water in hot water tank. Steam may spray out of the filling hole and cause injuries. Always let the appliance cool before adding water.

### PARTS LIST

 <b>x1</b>	 <b>x1</b>	<b>USER MANUAL</b>  <b>X1</b>
--	--	-------------------------------------

## PRODUCT SPECIFICATION

Model	FCL-H09	
District	North America	Europe
Voltage	AC 110V-120V, 60Hz	AC 220-240V, 50Hz
Power	900W	800W
Water Tank Capacity	180ml	
Steam Output Time	≤ 90 seconds	

## FILLING THE STEAMER WITH WATER

1. Place the steamer on a flat, level surface.
2. Fill the water reservoir with a measuring cup.
3. Never fill the water above the "MAX" level.
4. Replace the water reservoir cap.

## STEAMING FABRICS AND LINENS

**Note:** The water reservoir must be filled to "MAX" level and make sure the cap is attached tightly before proceeding with the following steps.

1. Plug the steamer power cord into an electrical outlet. The heat indicator light will illuminate when turned on.
2. The steamer will start to spray after approximately 60 -90 seconds.
3. Direct the steam nozzle towards the material you wish to iron.
4. Keep the flow of steam focused on the material. Using a slight back-and-forth motion will further enhance the steaming process.

**Caution:** Never point the steam nozzle towards your body, other people, pets or plants.

## **STEAMING GARMENTS**

1. Place the garment on a clean hanger.
2. Begin steaming slowly from the bottom to the top of the garment. The steam will rise along the inside and outside of the fabric, removing the wrinkles.
3. Periodically point the steamer away from the garment and smooth the fabric with your free hand.
4. Repeat the above steps as necessary until the garment is free of wrinkles.

## **STEAMING TIPS**

1. Steaming both sides of the fabric will help to remove stubborn wrinkles.
2. Delicate fabrics need to be steamed carefully to avoid damage caused by water spotting.
3. Drapery and curtains can be steamed while still hanging.
4. Caution should be taken while using a ladder or step ladder. Do not use a stool, chair or revolving chair.
5. To steam towels, handkerchiefs and napkins, hang them over a rod or towel holder.

## **HANDLING AND STORING**

1. Use distilled water to avoid mineral build-up.
2. Remove all accessories from the steamer.
3. Empty any remaining water into a sink to minimize mineral build-up.
4. Reattach the water reservoir cap. Do not over-tighten.
5. It is recommended to store the steamer and any supplied accessories together in the original packaging.
6. Store the steamer in a cool, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No Light on the switch	The steamer is not plugged in.	Plug the steamer power cord into an electrical outlet.
	The household circuit breaker has been tripped; there is a blown fuse in the electrical circuit.	Reset the household circuit breaker or replace the blown fuse. Contact an electrician or your area's electrical provider.
The steamer heats up but there is no steam.	The water reservoir is empty.	Refill the water reservoir to "MAX" level
	There is mineral build-up in the steamer.	Remove the mineral build-up.
The steamer flow light is flashing	There is mineral build-up in the steamer.	It is normal for the flow of the steam to stop for a few seconds. If it stays off for a longer period, check for mineral buildup.

**Made in China**

**VEVOR<sup>®</sup>**  
**TOUGH TOOLS, HALF PRICE**

**Technical Support and E-Warranty Certificate**  
**[www.vevor.com/support](http://www.vevor.com/support)**