

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

GREASE PUMP USER MANUAL

MODEL: FF-08B-12L,FF-08B-20L,FF-09B-40L

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

GREASE PUMP

MODEL: FF-08B-12L,FF-08B-20L,FF-09B-40L



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

⚠️ WARNING

1. Read carefully and understand all **ASSEMBLY AND OPERATION INSTRUCTIONS** before operating.
2. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

GENERAL SAFETY RULES

1. Wear goggles. During operation, dust, sparks and dust are harmful to the gas.
2. There will be noise when the product works. It is recommended to bring earplugs.
3. Be extremely careful and use common sense during the operation. Never use alcohol, drugs, or prescription drugs. Ring down to operate the device. Read the instructions on the medication you are taking to see if they will affect you. The judgment and reaction power. If you have any questions, do not operate this device.
4. Minors should not operate this product to avoid accidents or injuries.
5. The air pressure of the air source is kept stable, so as not to affect the work and life of the product.
6. Dress appropriately. Never wear loose long hair, and keep hair and clothing away from this product.
7. The intake pressure shall not exceed the pressure specified in the manual.
8. Disconnect the air source when servicing or replacing the device.

Cautions

1. If there is any quality problem and it cannot be repaired by non-professional personnel, please contact the dealer or the manufacturer for help.

2. When using, please put the butter gun lightly; do not put it on the ground at will, because the head of the gun is sharp, to prevent the injury or the residual butter outflow inside.
3. Don't point the gun at a person's face when used.
4. After use, wipe the pump head and the butter gun clean. Check regularly whether the machine is complete and working properly.
5. Butter wire tubes shall not be kinked, twisted or stretched.
6. Excessive pressure causes damage to the butter gun head and equipment.
7. Defective accessories should be replaced immediately.
8. Every time the butter gun is replaced, the gas source needs to be closed without pressure.
9. Do not leave the device unattended when the device is turned on, and always close it before leaving the work area and wait for the device to stop completely.

SAVE THESE INSTRUCTIONS

MODEL AND PARAMETERS

Model	FF-08A-12L	FF-08A-20L	FF-09A-40L
Oil Volume	500~740g/min	500~740g/min	500~740g/min
Pressure Ratio	50:1	50:1	50:1
Output Pressure	30-40MPa	30-40MPa	30-40MPa
Air supply Pressure	0.6~0.8Mpa	0.6~0.8Mpa	0.6~0.8Mpa
Bucket Capacity	12L	20L	40L


STRUCTURE DIAGRAM

FF-08A-20L, FF-09A-40L:



1.Grease Pump 2.Grease Bucket Cap 3.Quick Clip 4.Grease Bucket
5.Casters 6.Grease Gun 7.Hose 8.Handle 9.Pressure Valve

FF-08A-12L:

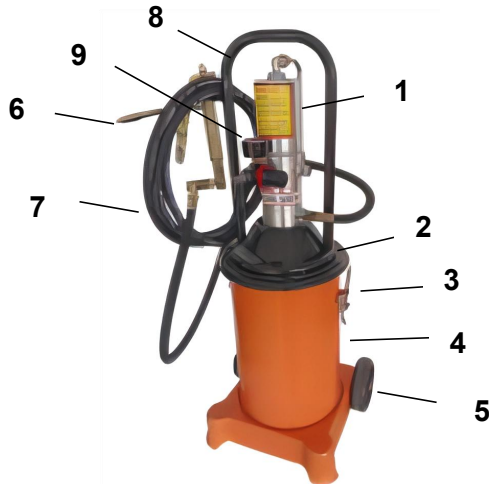


1.Grease Pump 2.Grease Bucket Cap 3.Quick Clip 4. Grease Bucket
5.Casters 6.Grease Gun 7.Hose 8.Handle 9.Pressure Valve

OPERATING INSTRUCTIONS


Step1: Install Casters,Lock with nuts and spring washers(X)

FF-08B-20L, FF-09B-40L:

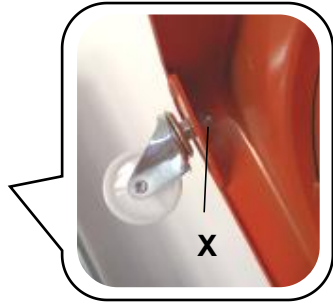

Install the wheels and insert the pins.

FF-08B-12L:

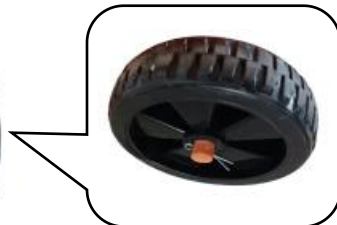

Step2: Remove the handle first, adjust the direction of the handle and fasten with the bolt.(**FF-08B-20L**, **FF-09B-40L**)


Note:The handle of **FF-08B-12L** has been installed.



Step3: Open the butter bucket cap and pour butter into it. Then install the butter bucket cap and fasten it. (**FF-08B-12L**, **FF-08B-20L**)

For Model **FF-09B-40L**:Put the standard butter barrel into the butter bucket, then install the butter bucket cap and fasten it.

Note: The standard butter barrel has an inside diameter of 23.8cm and a height of 34cm.

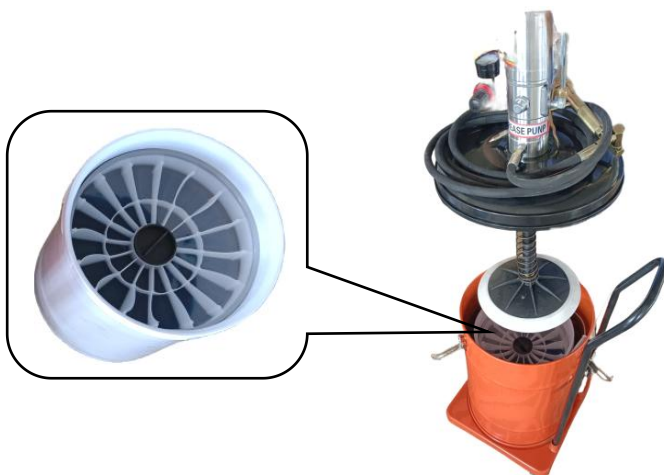

Step4: Connect the hose to the grease pump inlet and the grease gun to the other end of the hose. Access the air source, adjust the intake pressure through the pressure valve.

Note: Wrap a few loops of raw material around the joint as needed.



Quick Jack for Air Source

MAINTENANCE

1. The air entering the pump needs to be filtered to avoid damage to the pump.
2. When using the hose, avoid excessive bending and overloading of the hose, as this can lead to damage.
3. After using the product, please disconnect the gas source, and then clean the grease gun.
4. Do not overload or idle the pump to avoid damage
5. If the product is not used for a long time, please clean it thoroughly.

TROUBLESHOOTING

Problem	Possible Cause	Possible Solution
Pump not working	The internal slide is loose	Install the charging plate and tighten the screws
	outlet blocked	Check and clean the outlet
	grease viscosity is too high	Choose the right viscosity grease. 1~2# in Winter, 2# in Spring and Autumn, 2~3# in Summer.
The oil output is abnormal	<ol style="list-style-type: none"> 1. The internal slide is not in the right place 2. Intake air pressure is often abnormal 	<ol style="list-style-type: none"> 1. Adjust the internal slide position. 2. Make sure the air supply is normal and adjust the pressure valve
Grease leaks out	Check the seal ring for wear	Replace the seal ring

Manufacturer: Shanghaimuxinmuyeyouxiangongsi
Address: Shuangchenglu
803nong11hao1602A-1609shi, baoshanqu, shanghai
200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA
STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250,
9166 Anaheim Place, Rancho Cucamonga, CA 91730



E-CrossStu GmbH
Mainzer Landstr.69, 60329 Frankfurt am Main.



YH CONSULTING LIMITED.
C/O YH Consulting Limited Office 147, Centurion House,
London Road, Staines-upon-Thames, Surrey, TW18 4AX

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support