

## Cleaning

- ◆ If the shell is soiled, wipe it with a flexible cloth.
  - ◆ After each use of the main engine tank, clean the residual fouling with clean water, and at least burn the cleaning reagent (citric acid) recommended by our company every month.
  - ◆ Add 1.0L water and 2 tablespoons citric acid into the tank of the main engine, without covering the head component, boil water for about 30 minutes after electrifying, then pour out the water and use it to clear
- Rinse with water. If scale cannot be removed at one time, the above method can be repeated for cleaning.
- ◆ If it is a plastic outlet, it is recommended to replace it every 2 to 3 months.

## Common exceptions and handing

### ◆ No distilled water dripping

1. The host power supply and head power socket are not plugged in place, please check and plug again.
2. The start button is not pressed (the red indicator light is not on).
3. There is no water in the main engine tank.

### ◆ Insufficient distilled water is produced each time

1. The water in the main engine tank does not reach the maximum water level mark.
2. If the sealing ring of the head assembly is missing or poorly sealed, check and reinstall the sealing ring or replace it with a new one.
3. There is no water in the main engine tank.
4. The water outlet nozzle of the machine head is poorly installed and needs to be removed and reinstalled.

### ◆ Head assembly shakes or water overflows during water boiling

1. The water in the main engine tank exceeds the maximum water level mark.
2. If the head assembly is not installed properly with the host, it needs to be taken out and placed on the host again, and the placement effect should be properly felt by hand.
3. The sealing ring of the head assembly is not installed properly, so it needs to be taken out and reinstalled.
4. The outlet nozzle is blocked by dirt deposition, so it is necessary to replace the outlet nozzle or clean the outlet nozzle.

## Packing instructions

When opening the package, please confirm whether the following items are complete item by item so that you can use this product effectively.

NO.	Description	Unit	PP	SUS
1	Water distiller	pc	1	1
2	Power cord	pc	1	1
3	Water outlet	pc	1	1
4	Citric acid cleaner	pc	1	1
5	Active carbon	pc	1	1
6	Plastic bottle	pc	1	×
7	Plastic bottle cover	pc	1	×
8	Glass bottle	pc	×	1
9	Glass bottle handle	pc	×	1
10	Glass bottle fixed ring	pc	×	2
11	Screw	pc	×	1

# INSTRUCTION MANUAL

## WATER DISTILLER





**Product Name: Water distiller**  
**Rated voltage: 220-240V**  
**Rated frequency: 50-60Hz**  
**Rated power: 750W**  
**Max capacity: 4.0L**  
**Amount of distillation: 1L/h**

- 1.Top body      2.Main body      3.Top body power cord      4.Top body socket  
 5.Power cord socket      6.ON/OFF switch      7.Water outlets      8.Bottle  
 9.Display screen

## Product Features

- ◆ Advanced silent fan + two disc super cooling technology: steam super cooling.
- ◆ Electronic double screen display, adjustable set temperature and current real-time temperature display, on / off switch, you can turn on or off the distiller at any time.
- ◆ Anti-dry burning function: After the water inside the main engine is dried, the temperature control will automatically protect and turn off the power.
- ◆ Rapid water production: 4L condensed water can be produced in 3.5 hours.
- ◆ Steam wine function: This product can produce wine according to consumer demand.
- ◆ You can make pure dew and essential oil.


## Notes(Danger and warning)

Before using this product, please read this instruction carefully and keep it for future reference.

- ★ Do not immerse the head and base in water or other liquid, nor flush with faucet.
  - ★ After the water in the distillation barrel is dried and automatically protected by temperature control, the machine head assembly shall be opened after an interval of about 10 minutes to avoid possible burns caused by the steam in the barrel.
  - ★ Before the product is connected to the power supply, confirm whether the marked voltage is consistent with the local used voltage.
  - ★ If the plug, socket or product is damaged, do not remove the machine for repair without permission, to avoid the wrong connection of the internal circuit, resulting in power short circuit and other dangers.
  - ★ This product is not suitable for children, people with physical or mental disorders, to avoid harm caused by wrong use.
  - ★ When taking the head components or cleaning products, turn OFF the ON/OFF switch first, and unplug the power plug of the head components and the host power plug.
  - ★ For the first time, add 1.0L of water and 2 tablespoons of citric acid into the tank of the main engine, cover the head assembly, boil water with electricity for about 20 minutes, after pouring out the water, rinse the tank and the distillation cover with clean water (the distilled water made for the first time cannot be drunk).
  - ★ When cleaning the interior, it is forbidden to use steel wire brush (velvet) and other hard articles to scrub the inner tank of the main engine and the inner tank of the machine head, so as to avoid scratches formed on the surface of the inner tank, which will cause dirt accumulation in the gap with fine scratches.
  - ★ When it is necessary to stop the production, you can press the red ON/OFF switch below the display screen of the host machine. There is no need to wait for the water in the tank of the host machine to dry up completely.
  - ★ This product can continuously produce condensed water, that is, after the water in the tank is distilled, Turn OFF the display ON/OFF switch and turn ON the nose component after an interval of about 10 minutes.
- Add the water with the largest scale into the inner tank of the main machine, and use it again according

to the ON/OFF operation of the display screen.

★ Installation and disassembly of outlet nozzle are shown in the diagram as below:

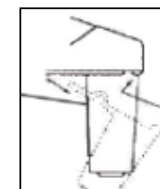

## Use Instructions

- ◆ Open the package, take out the machine (the whole machine extension head and host machine), extract the head, and take out the inner parts of the tank. If it is a glass bottle, assemble the handle of the cup and make sure the handle is firmly assembled.
- ◆ Add the water with the maximum scale water level into the tank of the main engine (do not exceed the water level).
- ◆ Place the machine head on the main machine (check whether the sealing ring of the machine head is properly installed or leaking), insert the connecting power plug (product plug) of the machine head into the socket of the machine head, and insert the power cord plug (product plug) into the power socket of the machine head.
- ◆ After confirming that the plug is correctly connected and firmly inserted, insert the host power plug into the wall socket.
- ◆ Turn on the on / off switch of the host, then press the start button, the start button indicator lights up, the head fan starts to rotate, and the host enters the heating state.(when it is used for the first time, turn on the on / off switch and the indicator light is on.)
- ◆ When the main engine is heated for about 30 minutes, the distilled water begins to drip out of the outlet slowly until the water in the inner tank is completely dried and protected by automatic temperature control, and the ON/OFF switch should be closed.

## Function description

### 1. Three screen display:

Time display, current temperature display and set temperature display.

### 2. Timing function:

The maximum time setting is 99 hours and 59 minutes, and the minimum time setting is 1 minute. Set any time within the range. After setting, stop for 3 seconds then enter the working state. The clock enters the countdown. When the time reaches 00:00, the machine stops working and enters the standby state. When time setting is required, press the set key, the clock minute bit light flashes, press the "+" and "-" keys for minute bit setting, press the set key again, the clock minute ten bit light flashes, press the "+" and "-" keys for setting, press the set key again to enter the clock setting, the clock light flashes, and press the "+" and "-" keys for setting. After setting, stop setting. After 3 seconds, the machine works normally and the clock enters the countdown.

### 3. Temperature control:

The temperature can be set, with a minimum of 30 °C and a maximum of 108 °C. When the machine is heated to the set temperature, the machine enters the thermal insulation state and the head is cooled normally. The control time and temperature can work at the same time, the setting time can determine the required time, and the temperature can also be set to the required temperature. For example, when the time is set to 02:10 (2 hours and 10 minutes), and the temperature is set to 83 °C, the machine will enter the insulation state, when heated to 83 °C, the insulation will last for 2 hours and 10 minutes. When setting the temperature, you can directly press the "+" and "-" keys to adjust the required temperature value. The machine will enter the heating state 3 seconds after stopping the setting.