

TOUGH TOOLS, HALF PRICE


HAND HELD ENDOSCOPE WITH SCREEN OPERATING MANUAL

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and doses not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.



HAND HELD ENDOSCOPE WITH SCREEN OPERATING MANUAL

Model: SC8 series NO.:SAS0049

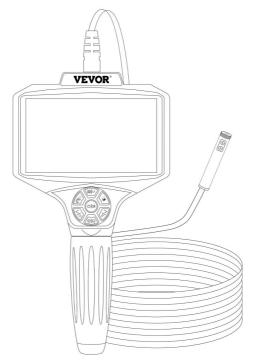

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:


⊠CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

NOTICE

- 1. Before use, please use 5V1A charger to fully charge the device
- 2. Please use a high-quality TF (micro SD) card
- 3. Only in the effective focal length can the photos be reflected most clearly. Be sure to observe the target object within the effective focal length.

DETAILS

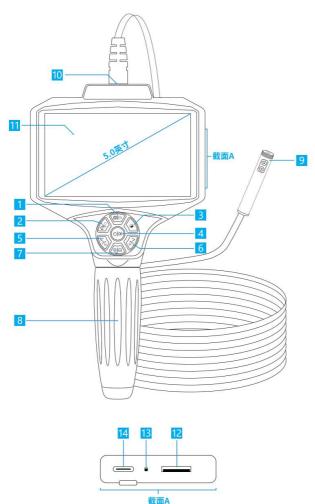

- 1. Photo/video key
- 2. Lens switch key
- 3. Lens light adjustment
- 4. Power on/off
- 5. Back key
- 6. Forward key
- 7. Setting menu key
- 8. Handle
- 9. Lens
- 10. Wire connection
- 11. LCD display
- 12. TF (micro sd) card slot
- 13. Reset key
- 14. DC 5V charging interface (type-c)

PRODUCT DESCRIPTION

- 1. It supports micro TF cards of up to 64GB, and only supports TF cards of class 10 or higher FAT32 format (including TF cards when shipping).
- 2. Charging interface; 5V 1A power supply.
- 3. Switch on/off key: long press for 2 seconds to start the machine, long press for 2.5 seconds to turn off the machine, short press the freeze frame screen to lock the screen, and short press to exit the freeze frame to enter the real screen.
- 4. OK key: In the menu page, press briefly to confirm.
- 5. Photo/video key: short press to take a picture; Long press Record, and then press again to stop recording.
- 6. Lens switch key: short press to switch to a single lens, A.B.C displays single lens picture, long press to switch to double lens (vertical line 2 of screen is split screen and double display), AB.AC lens picture.
- 7. Lens light adjustment key; Briefly press the adjusting camera lamp (3.2.1.0) to turn on the machine at the third gear.
- 8. Back key/180-degree flip key: short press to shrink X8. X6, X4. X2, X1 in the real-time screen, long press the left screen to continue to flip 180 degrees.
- 9. Forward key/180-degree flip key: short press to enlarge X1.X2, X4.X6, X8 on the real-time screen, long press the right key to continuously flip 180 degrees.
- 10. Menu key: press briefly to enter the menu page, (Date and time adjustment: short press to enter the menu page, first press the Back or Forward key, click the date/time, then press the OK key to confirm, short press to return to the menu page, such as selecting language setting, date label, screen saver, automatic shutdown, format, default setting, version, etc., first press the Back or Forward key, if you click to confirm language setting, press the Back or Forward key to select, press the OK key to adjust, then press the Back key or Press the forward key to select, then press the confirmation key to confirm, and press briefly to return to the previous level, or exit the menu page.
- 11. Browse key: long press to enter photo preview and video playback, (memory card must be inserted) long press to delete photos, videos, and short press to exit.

- 12. Charging prompt: when charging, the red light at the switch/0K key is on, and when fully charged, the red light is off.
- 13. The working temperature of this product is 10° C-70 $^{\circ}$ C.
- 14. The waterproof grade of this product is IP67
- 15. The light source of the detection line is LED lamp, which is 8 (front end)+1 (left side)+1 (right side)
- 16. The screen can only be rotated 180 degrees. Do not rotate too hard to avoid damaging the product.
- 17. Product content includes: Handheld Display x1, 5m Detection Line x1, Hook x1, Magnetic Hook x1, Aluminum Ring x1, Data Line x1, Instruction Manual x1

PROCEDURE

- 1. With reference to example 1, insert the TF card into the TF card slot as shown in the figure, and gently press until the card locks (Note: you must insert class 10 to take pictures and record videos)
- 2. Long press the power on key for 2 seconds, and the image appears after the screen loads the power on screen. At this time, the lens light is on; Short press the lens light adjustment key to adjust the lens
- 3. Short press to take a picture; Long press to record, short press again to stop recording
- 4. For others not mentioned, please describe the operation in combination

PRODUCT PARAMETERS

Lens diameter: 8.0mm

Lens pixel: 1 million

Angle of view: 70 degrees

Focus: front lens 3-8 cm, B lens 2-6 cm, C lens 1.5-3 cm

Display screen: 5.0 inch color display screen

Battery capacity: 5000 mA

TROUBLESHOOTING

Tips: Charge before use

Question	Resolution
Unable to start	Check whether the battery is charged Check whether the power on key is normal Check whether the charging is normal
Unable to read card	Check whether the memory card format is correct (only FAT32 file format is supported) Remove the TF card and reinsert it Reinsert the memory card after formatting it on the computer
Device panic	Reset: reset by inserting the reset key
Image blur	Check whether the observation distance is within the focus range Clean the lens with a dust-free cloth In case of water ingress into the lens, please place it in a ventilated and dry place to dry
Other issues	Please consult the supplier

OTHER INSTRUCTIONS

- 1. For other matters not covered, please contact the supplier!
- 2. This product has many models and slightly different colors and accessories, subject to the actual receipt!
- 3. This manual is subject to optimization without notice!
- 4. Keep away from the fire source and flammable and corrosive environment.
- 5. Please keep this product out of the reach of children.
- 6. Please put this product in a cool, dry and ventilated place.
- 7. At the end of its service life, please follow the local environmental protection policy!

FCC INFORMATION



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.



This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.

* There are any minor changes to the numbers included in the user manual without prior notice.



EUREP UK LTD UNIT 2264, 100 OCK STREET, ABINGDON OXFORDSHIRE ENGLAND OX14 5DH



EUREP GmbH Unterlettenweg 1a, 85051 Ingolstadt, Germany





Importer: WAITCHX

Address: 250 bis boulevard Saint-Germain 75007 Paris

Importer: FREE MOOD LTD

Address: 2 Holywell Lane, London, England, EC2A 3ET

Address: 8th Floor, Building F, Fengzhimei Industrial Zone,

Jinfenghuang Avenue, Fenggang Town, Dongguan City, Guangdong

Province

Made In China



Support and E-Warranty Certificate https://www.vevor.com/support Made In China