

# **VEVOR<sup>®</sup>**

**TOUGH TOOLS, HALF PRICE**

Technical Support and E-Warranty Certificate [www.vevor.com/support](http://www.vevor.com/support)

## **MECHANICAL SCISSOR JACK**

**MODEL: SJ25**

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

# VEVOR®

TOUGH TOOLS, HALF PRICE

## MECHANICAL SCISSOR JACK

MODEL: SJ25

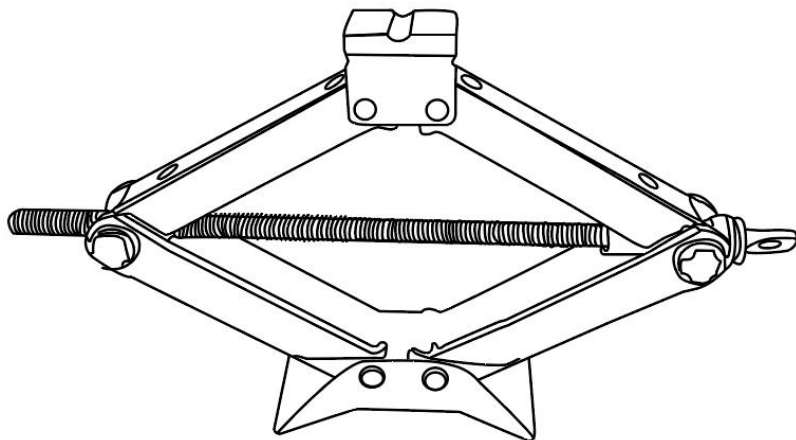

### NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

 [CustomerService@vevor.com](mailto:CustomerService@vevor.com)

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

## TECHNICAL PARAMETERS

Brand	Vevor
Model	SJ25
Max. Capacity (lbs)	5511
Lifting Range (mm)	95-435
Product Size (mm)	530*140*130
Net Weight (kg)	4.2KG

## SAFETY PRECAUTIONS

These instructions. For your safety, please read, understand and follow the information contained within before use. The owner and operator shall have an understanding of this product and safe operating procedures before attempting to use. Instructions and safety information shall be conveyed in the operators native language before use is authorized. Make certain that the operator thoroughly understands the inherent dangers associated with the use and misuse of the product. If any doubt exists as to the safe and proper use of this device as outlined in this factory authorized manual, remove from service until which time it is clear. This jack is not suitable for use in lifting, leveling and/or positioning houses, construction trailers and dwellings in general. Inspect before each use. Do not use if cracked, broken, bent or otherwise damaged parts are noted or if the jack is suspected to have been subjected to a shock load. Discontinue use until checked out by an authorized factory service center. Owner and operators of this device shall be aware that no serviceable or replaceable parts are available for this device. Do not attempt to weld, rivet or otherwise repair this device. It is recommended that an annual inspection be done to this device by qualified persons and that missing or damaged labels, warning/safety decals be replaced with ones that are factory authorized. Always reference the Product .


Label and Owner's Manual to establish rated capacity.



## WARNING!

Study, understand, and follow all printed materials provided with and on this device. Do not use this product before reading and understanding the owner's changing procedures as outlined in the vehicle owners manual or tire changing compartment of the vehicle. Do not exceed rated capacity. Use only on hard, level surfaces capable of sustaining rated capacity loads. Use for emergency tire changing only. Never put any body portion under a vehicle supported by the jack. Activate the hazard warning flasher, turn off the ignition, set the parking brake, and move the automatic transmission to the park position. In the case of a manual transmission, put it in reverse gear if the car is facing downhill and the lowest gear if the car is facing uphill. In addition, the wheel diagonally opposite from the wheel being lifted shall be choked in both directions. Lift only on areas of the vehicle as specified by the vehicle manufacturer. Follow tire-changing procedures as per the vehicle owner's manual. Use ONLY the provided operating handle or factory replacement. Failure to heed these messages may result in personal injury and/or property damage. ay result in personal injury and/or property dasmage.

## PRODUCT STRUCTURE DIAGRAM

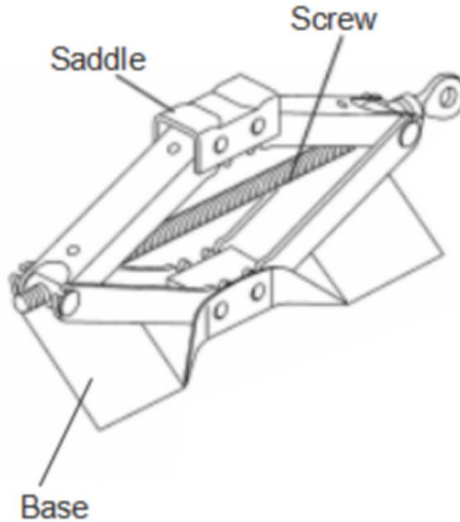

## INSTRUCTION FOR USE

### OPERATION

#### Lifting (refer to Fig 1,)

1. Place vehicle in park, with emergency brake on and the wheel diagonally opposite from the wheel being lifted chocked in both directions.
2. Insert the handle into the the hole of the handle socket. Center the saddle under lift point. Jack shall be positioned perpendicular to the vehicle's rolling axis.
3. Hold the straight portion of the hooked shaft with one hand while turning the L-shaped handle clockwise.
4. Continue to crank it until you reach the desired height, but never beyond a point just high enough to remove and install the tire.

## **MAINTENANCE**

### **Lubrication**

Lubricate the thread and bearing with wheel bearing grease. A periodic coating of light lubricating oil to pivot points, axles and hinges will help to prevent rust and assure parts move freely.

**Note:** Never apply lubricant directly on top of saddle.

### **Cleaning**

Periodically check the jack for signs of rust and corrosion.

### **Storage**

When not in use, store the jack with saddle fully lowered.

## **SCOPE OF APPLICATION**

This jack is intended for lifting and temporary support of vehicle for emergency tire changing only and used for any other purpose may result in serious injury or property damage.

Made In China



# **VEVOR<sup>®</sup>**

**TOUGH TOOLS, HALF PRICE**

**Technical Support and E-Warranty Certificate**

**[www.vevor.com/support](http://www.vevor.com/support)**

**Made in China**