VEVOR®

Bench vice operating instruction

4.5inchMechanic Bench Vise Table Top Clamp Press Locking Swivel Base Model: 9305



E-mail: CustomerService@vevor.com

VEVOR®

Bench Vice

Model: 9305



NEED HELP? CONTACT US!

Have product questions? Need technical support?
Please feel free to contact us:

CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

SPECIFICATIONS	
Model:	9305
Designation:	4.5inch Mechanic Bench Vise
Material:	Cast Iron
Overallsize:	240*117*146mm
Baking width:	115mm
Maximum opening:	85mm
Maximum clamping force:	7KN
Color:	Grey+Orange
Weight:	About 5kg

DESCRIPTION

Solid cast iron
Rotation table 240° rotation
Suitable for installation on the table

PACKAGE

1 x Bench Vise Table Top Clamp Press

1 y User Manual

4 x Nuts

4 x Screws

APPLICATION

Bench vice is used to clamp workpieces. It is installed on the work stations to clamp the workpieces. It is an necessary tool in the schlosserei. Rotating disc type clamp body can revolve so that make the workpiece rotate to the suitable place. Most work of fitter are finished on the bench vice. For example, the saw, the file, the chisel and components in stalling and dismantling.

INSTALLATION

Install the pliers on the clamp table

1. Operating instruction

The height of operator working will be suitable because the bench vice is installed on the work bench. Usually the jaw height is flushed with elbow just right. This is ok. Put the elbow on the bench vice peak and half clenched fists that the fist just support the mandible. Length and width of work bench will be decided by the work.

- 2 Cautions
- (1) Appropriate degree of tightness when clamp the workpiece. Just tight the hand shank by the hand only. Do not add strength with the help of other tools. No clamp-holding force shall be exceeded.
- (2) When work strongly, you need try your best to make strength facing to clamp body.
- (3) Do not knocking on the clamp body and smooth surface.
- (4) Clean and lubricate the surface of lead screw and nut so that it will not rust.

Manufacturer:WEIFANG JINTAILAI BENCH VISE MANUFACTURING CO.,LTD Address:TA ER BAO INDUSTRIAL PARK,CHANGYI CITY, SHANDONG.CHINA

Importer: WAITCHX

Address: 250 bis boulevard Saint-Germain 75007 Paris

Importer: FRFF MOOD ITD

Address: 2 Holywell Lane, London, England, EC2A 3ET



EUREP GmbH

Unterlettenweg 1a, 85051 Ingolstadt, Germany



FURFP UK ITD

UNIT 2264, 100 OCK STREET, ABINGDON OXFORDSHIRE ENGLAND OX14 5DH

Made in china