

**VEVOR<sup>®</sup>**

**OPERATING MANUAL OF  
DISTILLED WATER  
MACHINE**

# VEVOR<sup>®</sup>

## OPERATING MANUAL OF DISTILLED WATER MACHINE

YMK40130



YMK40230



### NEED HELP? CONTACT US!

Have product questions? Need technical support?  
Please feel free to contact us:



[CustomerService@vevor.com](mailto:CustomerService@vevor.com)

This is the original instruction, Please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

## Product Specification



- |                       |                     |                  |
|-----------------------|---------------------|------------------|
| 1.Top body            | 4.Top body socket   | 7.Bottle         |
| 2.Main body           | 5.Power cord socket | 8.Display screen |
| 3.Top body power cord | 6.Water outlets     |                  |

**Product Name:** Distilled Water Machine

**Distillation power:** 1000W

**Rated Voltage:** 220-240V~

**Max Capacity:** 4.0L

**Rated Frequency:** 50-60Hz

**Amount of Distillation:** 1.5L/H

**Heating power:** 1750W

## Product Features

- Advanced silent fan + two disc super cooling technology: Steam super cooling.
- Electronic screen display: Adjustable setting temperature, the real-time temperature and setting time. Electronic touch induction key: At any time to open or end condensate production.
- Anti-dry burning function: After the water inside the main engine is dried, the temperature control will automatically protect and turn off the power.
- Rapid water production: 4L condensed water can be produced in 2.5 hours.
- Steaming wine function: This product can be made according to the requirements of consumers.

## Notes (Danger and Warning)

**This appliance is intended to be used in household and similar applications such as:**

- taff kitchen areas in shops, offices and other working environments.
- farm houses.
- by clients in hotels, motels and other residential type environments.
- bed and breakfast type environments.

**If the manufacturer wants to limit the use of the appliance to less than the above, this is clearly stated in the instructions. Before using this product, please read this instruction carefully and keep it for future reference.**

- Do not immerse the head and base in water or other liquid, nor flush with faucet.
- After the water in the distillation barrel is dried and automatically protected by temperature control, the machine head assembly shall be opened after an interval of about 10 minutes to avoid possible burns caused by the steam in the barrel.
- Before the product is connected to the power supply, confirm whether the marked voltage is consistent with the local used voltage.
- If the plug, socket or product is damaged, do not remove the machine for repair without permission, to avoid the wrong connection of the internal circuit, resulting in power short circuit and other dangers.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- This product is not suitable for people with physical or mental disorders, to avoid harm caused by wrong use.
- When taking the head components or cleaning products, turn off the ON/OFF button first, and unplug the power plug of the head components and the host power plug.
- For the first time, add 1.0L of water and 2 tablespoons of citric acid into the tank of the main engine, cover the head assembly, boil water with electricity for about 20 minutes, after pouring out the water, rinse the tank and the distillation cover with clean water (the distilled water made for the first time cannot be drunk).
- When cleaning the interior, it is forbidden to use steel wire brush (velvet) and other hard articles to scrub the inner tank of the main engine and the inner tank of the machine head, so as to avoid scratches formed on the surface of the inner tank, which will cause dirt accumulation in the gap with fine scratches.
- When it is necessary to stop the production, you can touch the ON/OFF button. There is no need to wait for the water in the tank of the host machine to dry up completely.
- This product can continuously produce distilled water, that is, after the water in the tank is empty, touch the ON/OFF button and turn on the nose component after an interval of about 10 minutes. Add the water with the largest scale into the inner tank of the main machine, touch the ON/OFF button again to restart the distilling.
- Installation and disassembly of outlet nozzle are shown in the diagram as below(Figure 1):

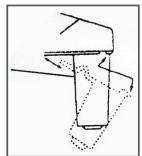


Figure 1

## Use Instructions

Open the package, take out the machine (the whole machine extension head and host machine), extract the head, and take out the inner parts of the tank. If it is a glass bottle, assemble the handle of the cup and make sure the handle is firmly assembled, follow “Glass bottle assembly method” in the glass bottle.

### • Make distilled water

1. Add the water with the maximum scale water level into the tank of the main engine (do not exceed the water level).
2. Place the machine head on the main machine (check whether the sealing ring of the machine head is properly installed or leaking), insert the connecting power plug (product plug) of the machine head into the socket of the machine head, and insert the power cord plug (product plug) into the power socket of the machine head.
3. After confirming the correct connection and fastening of the plug, insert the host power plug into the wall socket. "---" is displayed on all three screens.
4. Touch the start button below the display, the left display displays the current temperature, the right display displays the default temperature 105°C, the next display displays the default time 2:40 stop for 1 second, the head fan starts to work, the machine enters the heating state, the left display will become higher with heating, the next display time into the countdown.
5. When the machine is heated for about 13 minutes and the left display screen rises to 100°C, distilled water begins to drip slowly from the host outlet. When the time on the next display screen changes to 0:00, the host stops working and the display screen shows "--" or the water in the inner tank of the host is not filled to 4L, Before the time of the machine on the next display screen becomes 0:00, the water in the inner bladder of the host machine has been completely burned dry, the temperature control is automatically protected, the display screen shows "E1", or, then water can be added again for the next cycle work.
6. Fahrenheit Celsius temperature selection: The default startup temperature is Centigrade. You can switch between Fahrenheit and Celsius by touching the °F/°C button, and the °F/°C indicator light will change with your operation.
7. Time setting: Touch the SET key, and the lower display shows 02:40, tail 0 flashing, then touch the SET key, the display shows 02:40, tail second 4 flashing, then touch the SET key, the display shows 02:40, tail third 2 flashing, then touch the SET key, the display shows 02: 40, the first 0 flashing, you can adjust the time you want to set through the "+" "-" key, the longest time is 99: 59.

### • Make distilled wine

1. Put the steaming rack into the liner of the main engine and place the materials used for steaming wine on it.
2. Place the machine head on the main machine (check whether the sealing ring of the machine head is properly installed or leaking), insert the connecting power plug (product plug) of the machine head into the socket of the machine head, and insert the power cord plug (product plug) into the power socket of the machine head.
3. After making sure that the plug is properly connected and fastened, insert the power plug into the wall socket and display "---" on both screens.
4. Press the start button at the bottom of the display screen, the default setting temperature 105 is displayed on the left display screen, and the default time 3:30 is displayed on the right display screen. The default setting temperature can be adjusted according to the demand of wine making by pressing the "+" "-" button at the bottom of the display screen (the lowest temperature can be set to 30 degrees, the highest to 108 degrees). After stopping for 1 second, the head fan starts to work, and the host enters the heating state. After heating to the set temperature,

the host enters the constant temperature state and begins to make wine until it is finished, or until the time on the right display becomes 0:00, the host stops working, press the start button (turn off), and unplug the power plug.

## Cleaning

- If the shell is soiled, wipe it with a flexible cloth.
- After each use of the main engine tank, clean the residual fouling with clean water, and at least burn the cleaning reagent (citric acid) recommended by our company every month.
- Add 1.0L water and 2 tablespoons citric acid into the tank of the main engine, without covering the head component, boil water for about 30 minutes after electrifying, then pour out the water and use it to clear rinse with water. If scale cannot be removed at one time, the above method can be repeated for cleaning.
- If it is a plastic outlet, it is recommended to replace it every 2 to 3 months.

## Common Exceptions and Handing

### • No distilled water dripping

1. The power supply of the main body and the power socket of the top body are not plugged into the socket. Please check and plug it again.
2. Did not press the start button (the display did not display the temperature).
3. No water is added to the main engine tank.

### • Insufficient distilled water is produced each time

1. The water in the main engine tank does not reach the maximum water level scale.
2. Leakage or poor sealing of the sealing ring of the nose assembly shall be checked, and the sealing ring shall be reinstalled or replaced with a new one.
3. No water is added to the tank of the main engine.
4. The outlet nozzle of the machine head is not properly installed, which needs to be removed and reinstalled.
5. The setting time is not long enough, and the water in the tank has not been distilled.

### • Head assembly shakes or water overflows during water boiling

1. The water in the main engine tank exceeds the scale line of the maximum water level.
2. If the head component is not installed in place in conjunction with the host machine, it shall be taken out and replaced on the host machine, and the effect of placement shall be properly felt by hand.
3. The sealing ring of the machine head component is not installed well, it needs to be taken out and reinstalled.
4. The outlet nozzle is clogged with dirt precipitation, and the outlet nozzle needs to be replaced or cleaned.

### • When the power supply or working process displays "F"

Abnormal temperature sensor needs repair and replacement.

### • When starting power supply or working process displays "E1"

1. Temperature protected, it will reset naturally.

2. If the machine shows "E1" all the time, it needs to be repaired and replaced.

## Package Content

When opening the package, please confirm whether the following items are complete item by item so that you can use this product effectively.

NO.	Description	Unit	PP	SUS
1	Water distiller	pc	1	1
2	Power cord	pc	1	1
3	Water outlet	pc	1	1
4	Citric acid cleaner	pc	1	1
5	Active carbon	pc	1	1
6	Plastic bottle	pc	1	×
7	Plastic bottle cover	pc	1	×
8	Glass bottle	pc	×	1
9	Glass bottle handle	pc	×	1
10	Glass bottle fixed ring	pc	×	2
11	Screw	pc	×	2
12	Glass bottle cover	pc	×	1

## Disposal

This product is subject to the provisions of European Directive 2012/ 19/ EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.



**UK Importer:** FREE MOOD LTD

**Address:** 2 Holywell Lane, London, England, EC2A 3ET

**EU Importer:** WAITCHX

**Address:** 250 bis boulevard Saint-Germain 75007 Paris

**UK REP:** Acumen IBC Ltd Ground Floor, 94 Ock Street, Abingdon, OX14 5DH info@ukacumen.com +44 1235 200526

**EC REP:** EUREP GmbH Unterlettenweg 1a, 85051 Ingolstadt Germany eurep@eurep-gmbh.com +49 841 8869 7744

**Manufacturer:** Jiangsu Shunfa Electric Appliance CO., Ltd

**ADD:** Lvjiu Road, Lvcheng town, Danyang, Jiangsu, China

**VEVOR<sup>®</sup>**

E-mail: [CustomerService@vevor.com](mailto:CustomerService@vevor.com)