

VEVOR[®]

**Round Waffle Maker
Instruction Manual**

VEVOR[®]

Round Waffke Maker UWF-2205&EWF-2205

MODEL NO.: UWF-2205 & EWF-2205



NEED HELP? CONTACT US!

Have product questions? Need technical support?
Please feel free to contact us:



CustomerService@vevor.com

This is the original instruction, Please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

IMPORTANT SAFEGUARDS

This manual will outline safety warnings and precautions, operating, maintenance and cleaning. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Factors such as caution and common sense cannot be built into this product and it is trusted the operator will follow these measures.

Please read ALL the instructions before using your machine.

1. Make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label.
2. Do not let children and minors get close to or touch the machine.
3. Do not touch the hot surface directly with your hands. Always operate with handles or knobs.
4. To prevent electrical shock, do not immerse the cord or plug into water or other liquids.
5. Do not immerse the appliance in water or any other liquid.
6. Unplug from outlet when not use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
7. Allow HOT parts to cool down before operation.
8. Do not operate the device with damaged cord or plug, malfunction or with any mechanical damage. Send the device to your nearest authorized service centre for examination and repair (ONLY technicians should open up the unit).
9. Using any accessories or attachments that are not provided or recommended by the manufacturer may cause injury.
10. If the machine will not used for a long time, unplug, clean and cover the unit and store it in a dry and safe place.
11. Do not leave the power cord hanging over the edge of table or counter or allow it come into contact with any hot surfaces.
12. Do not place the unit on or near a hot gas, electric burner, or a heated oven.
13. Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug – do not pull on the cord.
14. Do not apply this unit to any other purposes than the indicated usage.
15. Do not use outdoors or for commercial purposes.
16. KEEP OUT OF REACH OF CHILDREN.
17. DO NOT CLEAN USING ANY ABRASIVE MATERIAL.
18. Never leave an appliance unattended while in use.
19. Always check that this Waffle Maker is plugged into a grounded outlet with the appropriate electrical supply. Ensure that the wall outlet being used is properly grounded. If it is not, you must install a grounded outlet. Have the work performed only by a certified electrician who is properly qualified to meet local safety and electrical codes.
20. Ensure that the power outlet, plug and cord being used are in good, working condition. Damaged components should be repaired by a certified electrician who is qualified to meet local safety and electrical codes. Even with a properly functioning power cord, keep water away from the cord and avoid letting your power cord run over carpets or heating devices.
21. Use in the presence of flammable liquids, gases, dust or other explosive situations should be avoided.
22. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids

23.Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.


Thank you using this product. In order to make sure that you can operate the machine correctly, read this instruction carefully before operation and keep it properly for future reference. Please be sure to read the precautions and safety rules in this page to ensure your safe use.


RODUCT PARAMETERS

Model No.	Voltage	Input Power	Plug Type
UWF-2205	AC110-120V~ 60Hz	1300W	NEMA 5-15P
EWf-2205	AC220-240V~ 50Hz	1300W	European PLUG

CIRCUIT DIAGRAM

MODEL NO.: UWF-2205

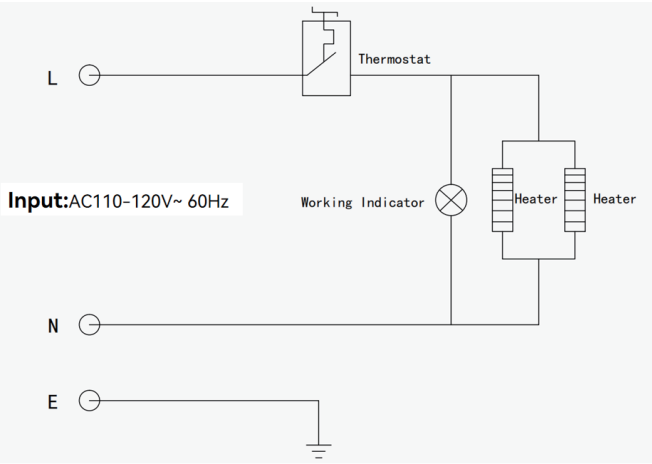

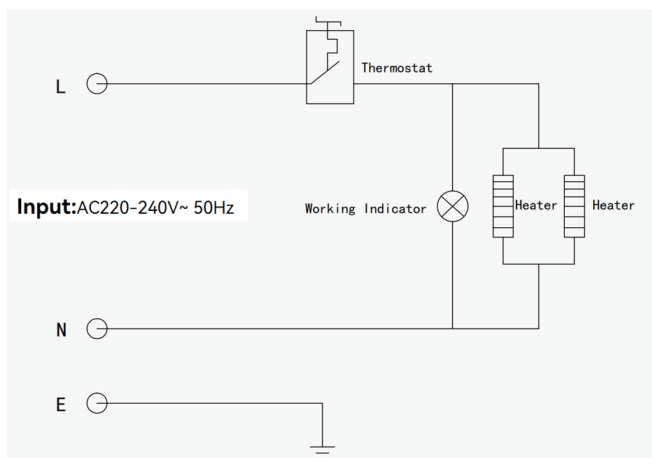

OPERATING INSTRUCTIONS

Before using the appliance for the first time, peel off any promotional materials and packaging materials, and check that the cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth. For best results, pour a teaspoon of vegetable oil on to the non-stick plates. Spread over with an absorbent kitchen towel and wipe off any excess oil. When your appliance is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

1. Set the Waffle Maker on a clean, dry, level surface near a plug base outlet.

CAUTION:

UWF-2205 Voltage is AC110-120V~ 60Hz

EWF-2205 Voltage is AC220-240V~ 50Hz

2. Plug the cord into the wall.

3. Select desired temperature using the temperature dial control. 400°F (200°C) is recommended temp.

4. Allow the unit to reach desired temperature. Orange heating light will turn off when temp is reached.

5. The waffle iron grids are non-stick.

6. Add $\frac{3}{4}$ to 1 cup of waffle mix to the bottom plate of the waffle maker.

Pour the batter evenly into the center of the grid, covering the bottom grid with the mix.

7. Grab the handle, close the lid and rotate the unit 180 degrees.

8. Set the timer. If at 400°F (200°C), 2.5 minutes is the suggested time.

9. Once the timer “dings” turn the waffle maker back over. Remove the waffle using a pair of tongs, not your hands.

10. Repeat the steps to make multiple waffles.

NOTE: Never touch the cooking surface with sharp, pointy or metal objects. This could damage the no-stick surface.

TIPS & HINTS

BATTER SUGGESTIONS

1. Packaged waffle mixes found in most supermarkets may be used with this unit.
2. For best results, we recommend filling the supplied measuring cup to the top so it will fill the waffle grids.
3. For evenly filled waffles, pour the batter into the center of the lower grid and spread out evenly to the edges. The entire waffle grid should be filled

COOKING SUGGESTIONS

1. If waffles tend to stick to waffle grids, add slightly more oil or butter to the batter.
2. Belgian waffles taste best when made to order, but baked Belgian waffles may be kept warm in a 200°F (93.3°C) oven. Place them in a baking pan or wrap them in foil while in the oven. Waffles wrapped in foil may lose their crispness.
3. Baked waffles may be frozen. Allow them to cool completely, and then place them in a plastic food storage bag. Use waxed paper to keep waffles separated. Reheat in an oven, toaster or toaster oven when ready to serve.

CLEANING AND MAINTENANCE

1. Once you have finished baking, remove plug from electrical outlet. Leave top lid open and allow grids to cool down completely before cleaning.
2. Brush crumbs from grooves, and absorb any excess cooking oil by wiping with a dry cloth or paper towel. You may clean the grids by wiping with a damp cloth to prevent staining and sticking from batter or oil buildup.
3. Never take your waffle maker apart for cleaning. Be certain that grids have cooled completely before cleaning.
4. If batter adheres to plates, simply pour a little cooking oil onto the baked batter and let stand approximately five minutes, allowing batter to soften for easy removal.
5. To clean exterior, wipe with a soft, dry cloth. Never use an abrasive cleanser or harsh pad.
6. Any other servicing should be provided by an Authorized Service Representative.

CAUTION:

1. NEVER IMMERSE CORD, PLUG OR UNIT IN WATER OR OTHER LIQUIDS.
2. BE CERTAIN THAT GRIDS HAVE COOLED COMPLETELY BEFORE CLEANING.

STORAGE

1. Always unplug the Waffle Maker before storage.
2. Always make sure the Waffle Maker is cool and dry before storing.
3. The power cord can be wrapped around the bottom of base for storing.



EUREP UK LTD
UNIT 2264, 100 OCK STREET, ABINGDON
OXFORDSHIRE ENGLAND OX14 5DH

Importer: FREE MOOD LTD

Address: 2 Holywell Lane, London, England, EC2A 3ET



EUREP GmbH
Unterlettenweg 1a, 85051
Ingolstadt, Germany

Importer: WAITCHX

Address: 250 bis boulevard Saint-Germain 75007 Paris

Made in China

Manufacturer: FOSHAN EDEN ELECTRICAL CO, LTD.

Address: No .4 West Street, Panxie Vilage, Zhongbian, Dali Town, Nanhai District, Foshan City, Guangdong Province, China

VEVOR[®]

E-mail: CustomerService@vevor.com