


VEVOR[®]

TOUGH TOOLS, HALF PRICE

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

Commercial Electric Griddle INSTRUCTION MANUAL

MODEL NO.: EG-818US/EG-818EU/EG-818AU

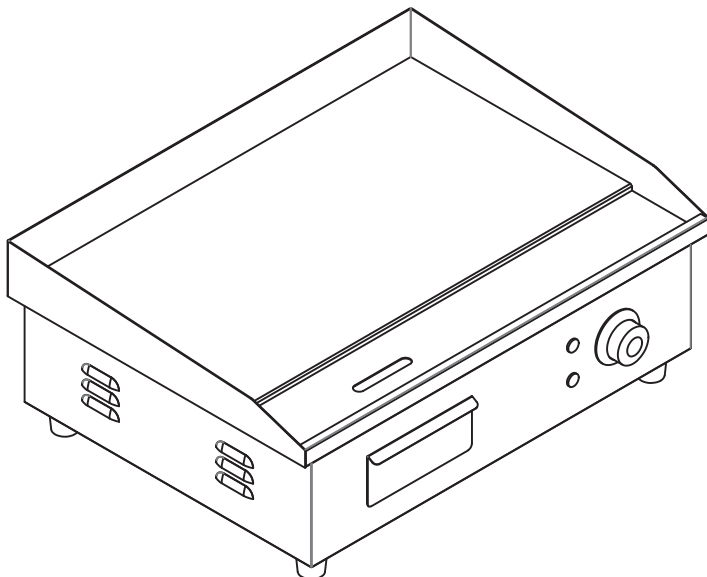

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:



CustomerService@vevor.com

This is the original manual, please read all the instructions carefully before operating. VEVOR reserves the right to interpret this user manual. The appearance of the product shall be subject to the product you received. Product technology or further software updates are subject to change without notice.






IMPORTANT SAFEGUARDS

This manual will outline safety warnings and precautions, operating, maintenance and cleaning. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Caution and common sense are not built into this product, since we believe that the uses will comply with these codes.

Please read ALL the instructions before using your machine.

1. Make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label.
2. Do not let children and minors get close to or touch the machine.
3. Do not touch the hot surface directly with your hands. Always use the handle or knob for operation.
4. To prevent electrical shock, do not immerse the cord or plug into water or other liquids.
5. Do not immerse the appliance in water or any other liquid.
6. Unplug the machine from the outlet when not in use and before cleaning. Cool the appliance before installing or removing parts and before cleaning.
7. Cool down the HOT parts before operation.
8. Do not operate the device with damaged cord or plug, malfunction or with any mechanical damage. Send it to your nearest authorized service centre for examination and repair (ONLY technicians should open up the unit).
9. Using any accessories or attachments that are not provided or recommended by the manufacturer may cause injury.
10. If the machine is not to be used for a long period of time, unplug it, clean and cover it and store it in a dry and safe place.
11. Do not leave the power cord hanging over the edge of table or counter or let it come into contact with any hot surfaces.
12. Do not place the unit on or near hot air, electric burners or heaters.
13. Always switch off the power to the socket before plugging in or unplugging. Hold the plug instead of pulling on the cord.
14. Do not apply this unit to any other purposes than the indicated usage.
15. Do not use it outdoors or for commercial purposes.
16. KEEP IT OUT OF CHILDREN'S REACH.
17. DO NOT CLEAN IT WITH ANY ABRASIVE MATERIAL.
18. Never leave it unattended while in use.
19. Always check that this machine is plugged into a grounded outlet with the appropriate electrical supply. Ensure that the wall outlet being used is properly grounded. If not, you must install a grounded outlet. Have the work performed only by a certified electrician who is properly qualified to meet local safety and electrical codes.
20. Ensure that the power outlet, plug and cord being used are in good working condition. Damaged components should be repaired by a certified electrician who is qualified to meet local safety and electrical codes. Even if your power cord is functioning properly, keep it away from water and avoid letting it run over carpets or heating devices.
21. Avoid using it in the presence of flammable liquids, gases, dust or other explosive situations.
22. Extreme caution must be taken when moving an appliance containing hot oil or other hot liquids.
23. Do not operate the machine in an appliance garage or under a wall cabinet. Always unplug the unit from the electrical outlet when storing in an appliance garage. Otherwise, it would cause a risk of fire, especially if the machine touches the garage wall or the door touches it as it closes.
24. Type Y attachment: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
25. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Please read the following statements carefully and understand their meaning prior to use to ensure safe operation.

	<p>Warning- To reduce the risk of injury, user must read this instruction manual carefully.</p>
	<p>This symbol indicates a kind of precaution, warning, or danger. It is placed before a safety comment, ignoring which may lead to an accident. To reduce the risk of injury, fire, or electrocution, please always follow the recommendations shown below.</p>
	<p>HOUSEHOLD USE ONLY</p>
	<p>This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.</p>
	<p>CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.</p>

NOTE:

1. Do not spray the electric griddle with a water hose under pressure. Do not spray liquids directly onto the control panel (refer to tCare and Maintenance for details).
2. Do not place any part of your body on electric griddle when the unit is turned on.
3. Do not operate the electric griddle next to any heat source or grease emitting appliance
4. Do not use the unit for any other purpose other than holding food.
5. Do not use sharp objects to activate controls.
6. Do not touch the tank element covers or elements when machine is hot.
7. Please be careful during use. Do not put non-food items into the product for heating and please use purified water.

Thank you for using this product. In order to make sure that you can operate the machine correctly, read this instruction carefully before operation and keep it properly for future reference. Please be sure to read the precautions and safety rules in this page to ensure your safe use.


PRODUCT PARAMETERS

Model No.	Input Power	Hot Plate Surface	Voltage	Plug Type
EG-818US	1600W/13.3Amps	Full Flat	AC110V~120V	NEMA 5-15P Plug
EG-818EU	3000W/13.6Amps	Full Flat	AC220V~240V	European Plug
EG-818AU	3000W/13.6Amps	Full Flat	AC220V~240V	Australian Plug

NOTE:

1. The voltage used for this device must be the same as the power supply voltage.
2. Users need to install it near the power switch and fuse

CIRCUIT DIAGRAM

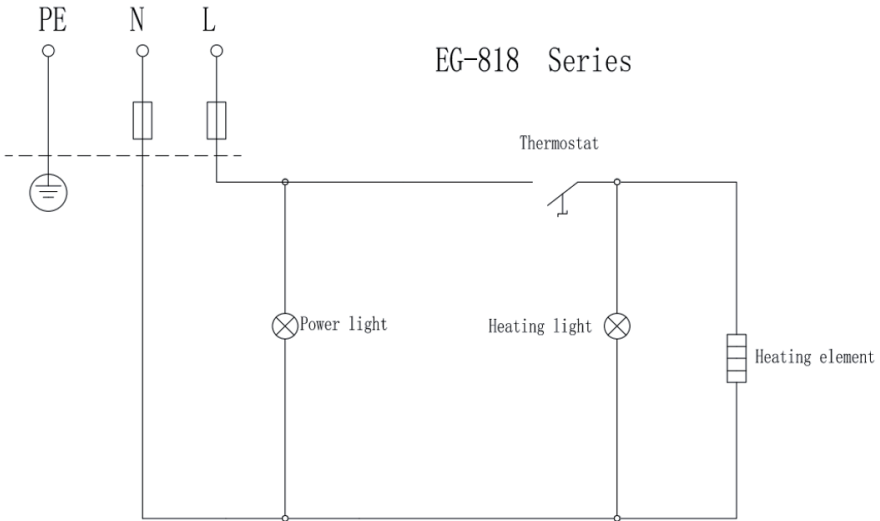

OPERATING INSTRUCTIONS

Before using the appliance for the first time, peel off any promotional materials and packaging materials, and check that the cooking plates are clean and free of dust. If necessary, wipe them over with a damp cloth. Spread over with an absorbent kitchen towel and wipe off any excess oil. When your appliance is heated for the first time, it may emit slight smoke or odor, which is normal for many heating appliances, and will not affect the safety of your appliance.

1. Place the machine on a clean, dry, level surface near a plug base outlet.
2. Plug the cord into the wall outlet, and the green indicator light will be on while power is supplied to the machine.
3. Turn the temperature knob clockwise to adjust the temperature to the desired temperature. At the same time, the yellow indicator light is on, indicating that the electric heater begins to heat up and the temperature of the machine starts to rise.
4. When the temperature rises to the desired level, the heat controller will automatically cut off, while the yellow indicator light goes out and the electric heater stops heating.
5. When the temperature is slightly lower, the heat controller will automatically energize, the yellow indicator light will be on, the electric heater will work again and the temperature will rise.
6. After finished, for safety, please turn the temperature knob counterclockwise to the limit position and cut off the power.

NOTE: It works in this way repeatedly in order to make sure temperature is certain in a range.

TIPS & HINTS

1. When the food is ready, the user take them out gently with the shovel provided. Don't use metal to roll up or take out the food, otherwise it will hurt the surface of heating plate.
2. The oil drip tray can be used to collect the remaining oil or grease. It should be emptied frequently to avoid overflow.

CLEANING AND MAINTENANCE

Daily:

After daily use, keep the griddle hot (at 300°F), and rub it clean with a grill brush or grill brick. Do not use cleaning chemicals or soaps as these can be absorbed by the surface and/or seep into the gaps on the edges of the griddle and affect the flavor of the food. If necessary, use only clean water, oil, and/or a food grade degreaser for the cleaning process. Remove and empty the grease container, clean the grease trough and the unit's surface. Cool down the unit and apply a thin coating of cooking oil if necessary to prevent corrosion.

Weekly:

Perform the daily cleaning process. Allow the griddle to cool completely and thoroughly clean the griddle plate with a food grade degreaser. Do not use cleaning chemicals or soaps as these can be absorbed by the surface and/or seep into the gaps on the edges of the griddle and affect the flavor of the food. Season the griddle per the instructions in the Start-up section. To prevent corrosion, please avoid the following situations: the griddle remains unseasoned; a thin coating of cooking oil is not applied.

CAUTION:

1. **NEVER IMMERSE CORD, PLUG OR UNIT IN WATER OR OTHER LIQUIDS.**
2. **In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.**

STORAGE

1. Always unplug the machine before storage.
2. Always make sure the machine is cool and dry before string.

SAFETY AND TROUBLESHOOTING

Please note that the Electric Griddle will be too hot to handle immediately after use. If a problem occurs that does not appear in the table below, stop using the fryer and seek help from the manufacturer, a qualified technician or an authorized dealer.

Possible Troubleshooting Chart

Problem	Cause(s)	Solution(s)
The power doesn't turn on after the griddle is plugged in.	1. The plug haven't been inserted in the socket properly. 2. Fuse has blown.	1. Remove the plug and insert it correctly. 2. Replace the fuse.
The thermostat indicator doesn't work and the griddle doesn't heat up.	1. Fail to be connected to the heating element. 2. The heating element goes wrong.	1. Contact a qualified technician or an authorized dealer for heating element connection fault. 2. Contact a qualified technician or an authorized dealer for heating element fault.
The power indicator is on, but the griddle doesn't heat up.	The temperature control element goes wrong.	Contact a qualified technician or an authorized dealer.
The temperature control is working, but the power indicator is not on.	The power indicator goes wrong.	Contact a qualified technician or an authorized dealer.



EUREP GmbH
Unterlettenweg 1a, 85051
Ingolstadt, Germany

Importer: WAITCHX

Address: 250 bis boulevard Saint-Germain 75007 Paris

Made in China

Manufacturer: Guangzhou Yuesheng Catering Equipment Co., Ltd.

Address: No.3, Erheng Road, Dongsheng Road, ChadongCun,
Dalong Avenue, Panyu District, Guangzhou, China

VEVOR[®]

E-mail: CustomerService@vevor.com