

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

SAFE BOX USER MANUAL

MODEL:SS1380-ZW

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

SAFE BOX

MODEL:SS1380-ZW

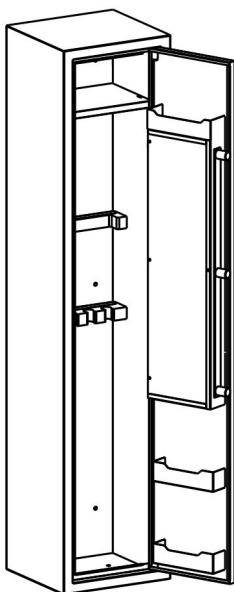




NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:




CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	<p>Warning-To reduce the risk of injury, user must read instructions manual carefully.</p>
	<p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.</p>
	<p>This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices</p>

INSTRUCTIONS

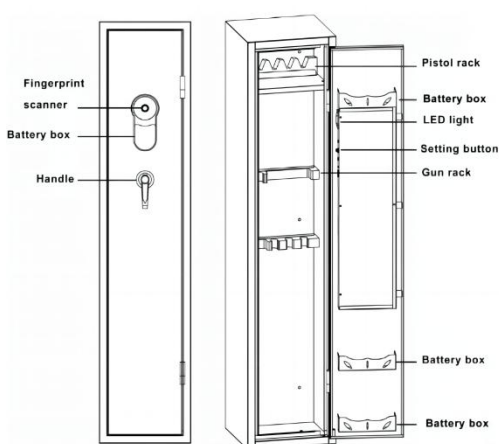


Thank you very much for choosing this safe box. Please read all of the instructions before using it.The information will help you achieve the best possible results.



TECHNICAL PARAMETERS

SS1447-DZ	SS1380-ZW
Working Voltage Range	4.2-6.8Vdc
Working Undervoltage Point	4.5V plus or minus 0.20V
Quiescent Current	Less than 5A
Product Size	300*280*1380 mm
Net Weight	24.2 kg
Gross Weight	30.0 kg
Working Power	4 x AAA(1.5V) batteries

PARTS LIST

Built-in Storage Key*2	
Expansion Bolt*5 (φ 10*50)	
External Power Box*1	

WARNING

1. Danger of Tipping Over

- A child or adult can tip the safe and be killed or seriously injured.
- Serious injury may occur to children and adults if the safe is not secured before installation.
- Children should not play with or around the safe at any time.

2. Please Do Not Put the Emergency Key, the External Power Box In The Safe BOX

GETTING STARTED

1. Move down the silver part of the keyboard lock reveals the emergency keyhole.
2. At this time, the emergency key channel is exposed.
3. Insert the emergency key and turn it 35° counterclockwise.
4. Turn Handle clockwise to unlock the safe.

Tip: Use the emergency key when opening the door for the first time. After installing the battery, set the fingerprint and digital password.

SET FINGERPRINT

1. Press the setting button and hear the short sound of "beep" at the same time. The fingerprint scanner lights up. Then place the finger to be registered in the center of the scanner.
2. When you hear a short "beep" sound, remove your finger and press again.
3. Repeat 4 times, hear the sound of "beep", fingerprint registration is successful, the green light is on.
4. Fingerprint capacity 30 pieces.

DELETE FINGERPRINT

After you hold down the setting button for about 5 seconds, a beep will sound, indicating that the coffer is cleared successfully. After initialization, you can open the coffer with any fingerprint.

ALARM FUNCTION

If the fingerprint is incorrectly entered for six consecutive times, the alarm will be raised for one minute. When the alarm is active, the correct fingerprint can relieve the alarm and open the door.

UNDERVOLTAGE INDICATION

1. The gun safe needs four 1.5V alkaline batteries.
2. If the voltage is insufficient inside the door, the buzzer will sound "beep" in unlock state to remind user to replace the battery in time.

Note: It is recommended to use ordinary batteries, avoid to use lithium batteries or different brand of recharging batteries.

MOUNTING INSTRUCTIONS

The safe could be mounted to a wall or floor.

- * Drill the appropriate size holes for the anchors you are using.
- * Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely on the floor.
- * Use proper drill tools depending on the type of floor you are mounting (wood, tile, or concrete).

MOUNTING INSTRUCTIONS

~ In kind prevails

Made in China



Technical Support and E-Warranty Certificate
www.vevor.com/support