

Support and E-Warranty Certificate https://www.vevor.com/support

# WALK-IN GREENHOUSE CANOPY USER MANUAL


We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and doses not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.



# Walk-in Greenhouse

Canopy

MODEL NO.: GH48

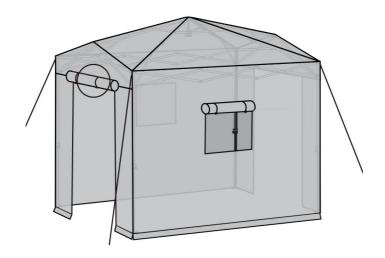

# **NEED HELP? CONTACT US!**

Have product questions? Need technical support? Please feel free to contact us:

CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

#### **ASSEMBLY PRECAUTIONS**

- 1. Please follow these instructions to assemble. Incorrect assembly can be a hazard.
- 2. Wear safety goggles and heavy-duty work gloves during assembly.
- 3. Do not assemble when tired or when under the influence of alcohol, drugs, or medication.
- 4. Weight capacity and other product capabilities apply to a properly and completely assembled product only.

#### **USE PRECAUTIONS**

- 1. This product is not a toy. Do not allow children to play with or approach this item.
- 2. Use as intended only. Do not sit or stand on the table.
- 3. Inspect before every use. Do not use it if parts are loose or damaged.
- 4. Use only on flat, level, and hard surfaces.
- 5. Do not exceed listed the weight capacity. Tighten all knobs securely before applying load. Be aware of dynamic loading! The sudden load movement may briefly create an excess load, causing product failure.


#### ASSEMBLY INSTRUCTIONS

For additional information regarding the parts listed in the following pages, refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clear work area.

#### **TECHNICAL SPECIFICATIONS**

Model	GH48		
Main Material	Steel + PE fabric		
Color	Transparent green		
Product Dimensions (LxWxH mm)	2478*1818*2280		
Packing Size (LxWxH mm)	1050*260*231		
Net Weight (kg)	13.5		
Gross Weight (kg)	14.57		

# **PACKAGE CONTENTS**

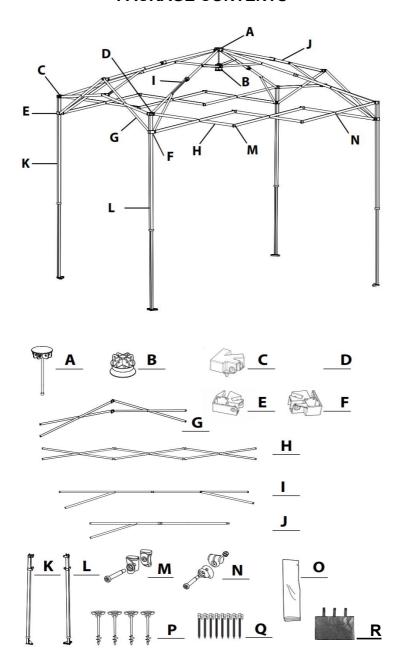


Part	Description	Reference No.	
Α	Central Pole	GHCP82BKMI	
В	Central Bottom Hub	GHCH00BKCL	
С	Leg Cap Left	GHLC01BKLO	
D	Leg Cap Right	GHLC01BKRO	
E	Slider Left	GHLS01BKL0	
F	Slider Right	GHLS01BKR0	
G	Short Eave Assembly	GHEA06BK00	
Н	Long Eave Assembly	GHEA08BK00	
I	Celing Assembly	GHCA68BK00	
J	Ceiling Support Assembly	GHCA08BKS1	
K	Leg Assembly Left	GHLA68BKL0	
L	Leg Assembly Right	GHLA68BKR0	
M	M5 Bolt Kit No Nut	NNBKM5BK4P	
N	M4 Bolt Kit	UNBKM4BK3P	
0	Top Fabric-Green	GHPE48GR00	
	Top Fabric-White	GHPE48WH00	
Р	Sprial Stake	UNSS09ORPL	
Q	L Shape Stake	UNST07WHPL	
R	Weight Bags	\	

# **DISASSEMBLY STEPS**







 


- Pull up all stakes from the ground.
- Press the push button on each leg and retract the legs to their original height.
- Get underneath the canopy. Rotate/twist the center hub counterclockwise to unlock the frame.
- Take off the PE top, and lift one corner of the frame until all legs are raised off the ground except


for the 1 leg on the opposite corner. Push inward until the frame is fully closed.

#### **ASSEMBLY STEPS**

#### 1 OPENING THE CANOPY FRAME


☐ Lift and partially pull the canopy frame apart.

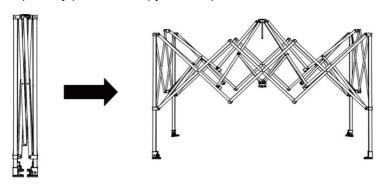

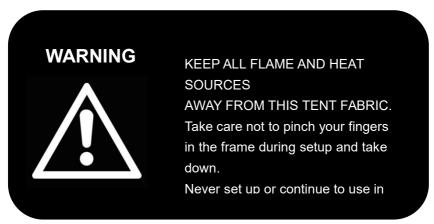


#### **2 ATTACHING THE CANOPY TOP**

- $\Box$  Unfold the canopy top, unzip the door, and place it on top of the canopy frame. Avoid the peaked cap hooking the lining of the canopy top.
- $\ \square$  Secure the canopy top to the corners of the canopy frame with Velcro.

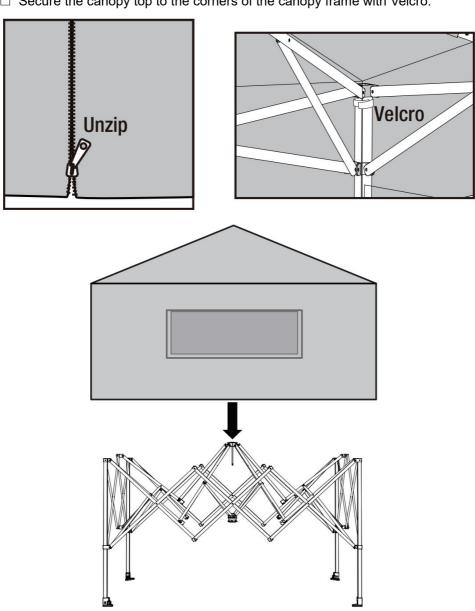


# **3 LOCKING THE FRAME**

 $\Box$  From under the canopy, use one hand to push the central bottom hub straight up until it clicks into the central pole.

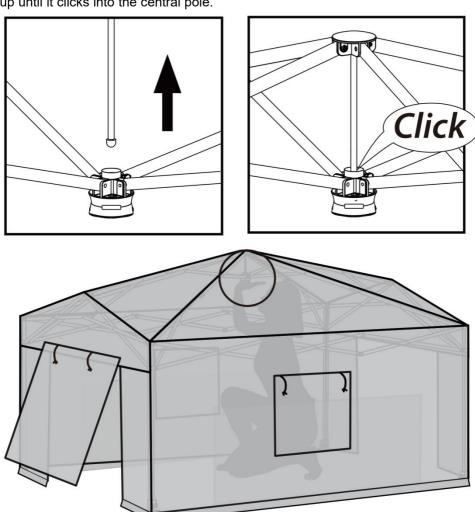


# **4 ADJUSTING THE CANOPY HEIGHT**


 $\hfill\Box$  Press the push pin on each leg and raise or lower it to adjust the canopy height.

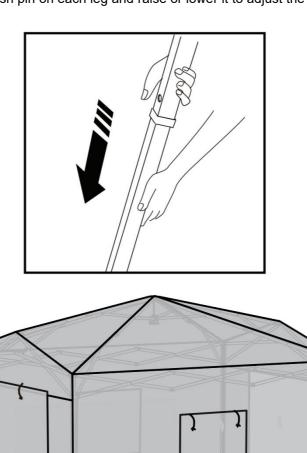


#### **5 VELCRO CONNECTION**

- ☐ Secure the canopy top to the corners of the canopy frame with Velcro.
- ☐ Secure the canopy top to the legs of the canopy frame with Velcro.

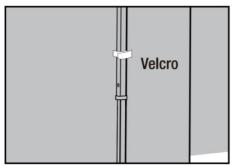

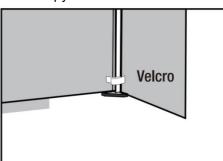

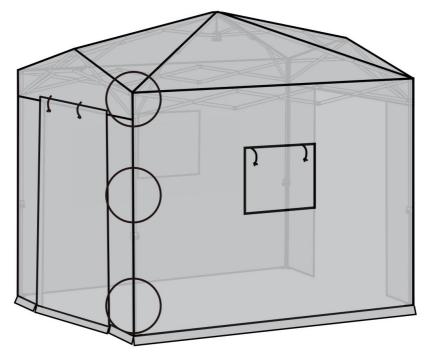


#### **6 SECURING THE CANOPY IN PLACE**

- ☐ Unzip the doors and insert a spiral stake into the footpad of each canopy leg.
- $\hfill \square$  Insert the stake into the two round holes of the plastic base.
- ☐ Tie four ropes to the corners of the top fabric. Measure from each leg to a proper distance and secure four stakes to the ground. Tie the ropes to the stakes in the ground. Ensure the rope has the proper tension by adjusting the plastic


adjusters on the ropes.

 $\ \square$  Included weight bags are designed for quick and easy use. Fill up the bags with sand or gravel and simply use the hook and loop strap around each leg.

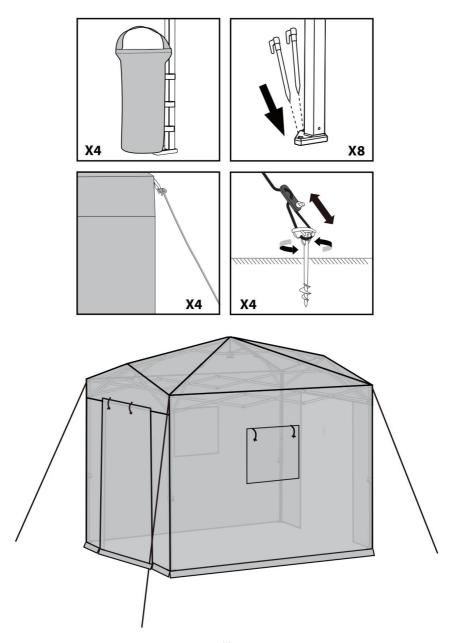


# 7 ROLLING UP THE DOOR AND THE CURTAIN

 $\ \square$  Roll up the door and the curtains if necessary.

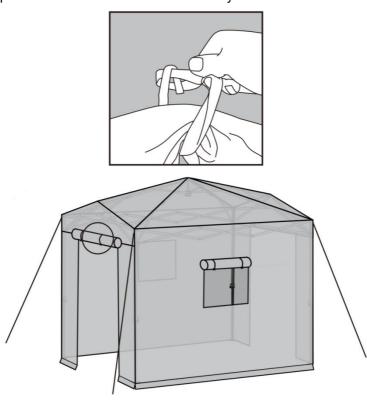

# **COMPLETION**

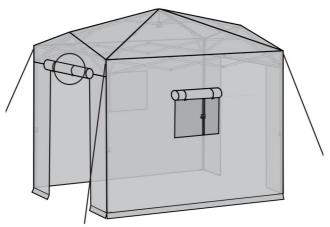

E-mail: CustomerService@vevor.com

Manufacturer: ZHEJIANG HUIGUAN LEISURE PRODUCTS CO., LTD

ADD: No.30. East Yunqiao Road, Liyang Town, Ninghai, Ningbo, Zheiiang, China

Importer: WAITCHX

Address: 250 bis boulevard Saint-Germain 75007 Paris

Importer: FREE MOOD LTD

Address: 2 Holywell Lane, London, England, EC2A 3ET

EC REP

EUREP GmbH Unterlettenweg 1a, 85051 Ingolstadt, Germany

UK REP

EUREP UK LTD UNIT 2264, 100 OCK STREET, ABINGDON OXFORDSHIRE ENGLAND OX14 5DH



Support and E-Warranty Certificate https://www.vevor.com/support