

# **VEVOR<sup>®</sup>**

**TOUGH TOOLS, HALF PRICE**

Technical Support and E-Warranty Certificate [www.vevor.com/support](http://www.vevor.com/support)

## **GEAR PULLER**

**MODEL:YL-5T**

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

# VEVOR®

## GEAR PULLER

MODEL:YL-5T



### NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

✉ [CustomerService@vevor.com](mailto:CustomerService@vevor.com)

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



## Safety & Warning

- Read and understand this entire manual before assembling, installing, operating, or servicing this product. Failure to follow these warnings and instructions can cause death, personal injury, or damage valuable property.
- While assembling and using this product, keep the work area clean and well-lighted, and keep spectators and children out of the work area.
- Wear ANSI-approved safety goggles, heavy-duty work gloves, and safety shoes during use.
- Use as intended only.
- Before each use, inspect the general condition of the product. Check for: broken, cracked, or bent parts, loose or missing parts, and any condition that may affect the proper operation of the product.
- After every use, wipe with a clean cloth. Then, store the product in a safe, dry location out of reach of children and other non-authorized people.
- Ensure only genuine parts are used for replacement & Repair.
- Be aware of dynamic loading! The sudden load movement may briefly create an excess load, causing product failure.

## Specifications

Model Series	YL-5T
Max. Tensile Force (t)	5
Max. Jaw Spread(inch)	8
Structural Style	Hydraulic


## Figure of the Product




Part	Description	Qty
1	Pump Body	1
2	Pull Tab	6
3	Ejector Pin	1
4	Bolt	6
5	Nut	6
6	Handle	1
7	Puller Ring	1
8	Claw Feet	3

# Installation instructions

## Step 1.

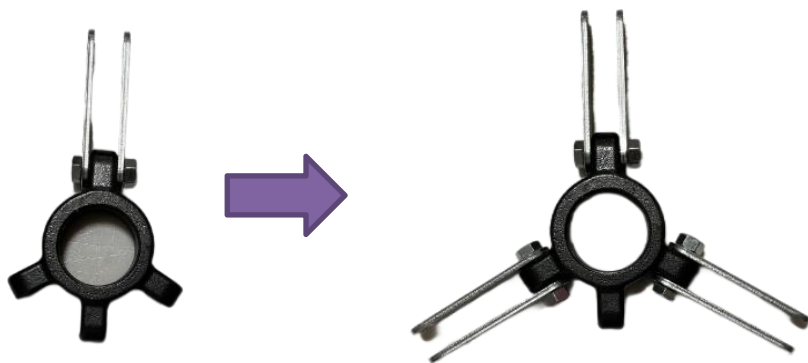

## Step 2.

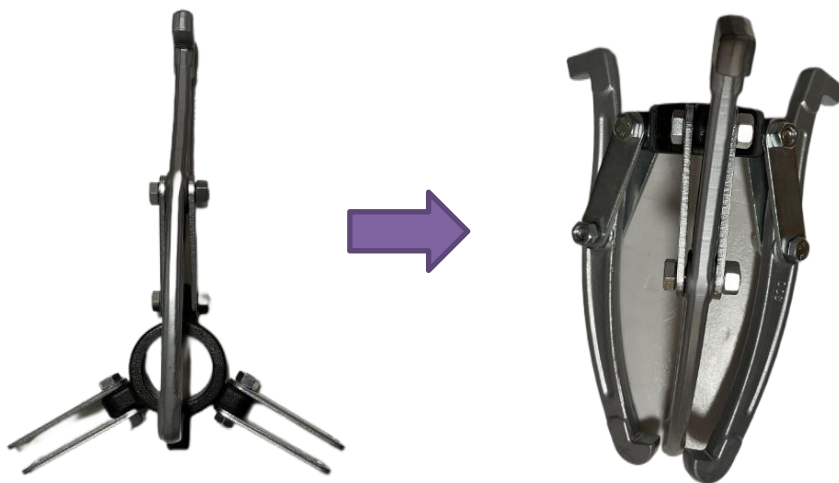

### Step 3.



### Step 4.



## Instructions

- A. Oil valve stem screw tightens on deasil first when using.
- B. Adjust hook claw to claw hook to hold the objects.
- C. Raise the handle hand hole to lift the filling pump upper and lower, corresponding to going backward. The claw hook has back and forth inside to insert, and the object is pulled out to draw the quilt.
- D. If you want to make the cylinder rod contract back, it only needs to go back to loosen the right valve stem in a counterclockwise direction; little to little, the cylinder rod has gone back to contract gradually under the function of the spring.
- E. According to the external diameter of the object, draw distance, and load strength, choose the corresponding hydraulic pressure of tonnage draw horses before using, must guard against overloading to use, avoid damage.
- F. In order to prevent causing machines damage for overload, hydraulics setting set up overload to unload the valve automatically; when the object at exceeding the specified load, the hydraulic pump will over low oil automatically, the workpiece will don t retreat and enter, should reelect with large hydraulic pressure of tonnage draw horses at this moment.

**VEVOR<sup>®</sup>**

TOUGH TOOLS, HALF PRICE

**Technical Support and E-Warranty Certificate**

**[www.vevor.com/support](http://www.vevor.com/support)**

**Made In China**