

VEVOR[®]

TOUGH TOOLS, HALF PRICE


Technical Support and E-Warranty Certificate www.vevor.com/support

BONE SAW MACHINE USER MANUAL

MODEL: YF-400A

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

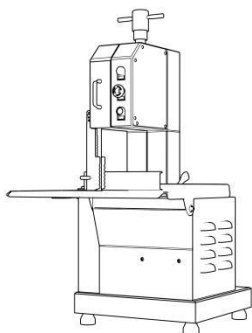

<Picture Only For Reference >

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

 CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Bone Sawing Machine adopts the world's advanced technology and is well-designed for meat and bone processing. It is characterized by high efficiency, low energy consumption, easy operation, elegant appearance, etc. Bone Sawing Machine is ideal for sawing meat, bones, poultry, and fish. It is widely used in hotels, restaurants, food processing factories, and slaughterhouses. Bone Sawing Machine adopts stainless steel on the appearance and spare parts of the machine, and special surface treatment is applied on the food contacting surface. The machine follows the National Food Safety Standard.

IMPORTANT SAFEGUARDS

WARNING:

Read all safety warnings, instructions, illustrations and specifications provided with this electrical appliances. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

1. There shouldn't be anything else on the counter.
2. There is no abnormal phenomenon after the power is switched on .
3. It must be placed on the horizontal plane to avoid danger from shaking back and forth during use.
4. Because the chain saw rotates at high speed, it is also necessary to develop the habit of turning off the switch when the operation is suspended. Do not plug the power cord into the socket when not in use. Please unplug the power cord after use and before cleaning or maintenance.
5. If iron nails or other metal items are included in the cut items, it will cause jagged cracks or damage. So, please pay attention to the cutting surface during operation to ensure workplace safety.
6. Please unplug the power of the machine before cleaning, assembling or disassembling.
7. Do not place the product within reach of children. Children should be supervised to ensure they do not play with the appliance.
8. This appliance can be used by children aged from 8 years and above and

persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

9. Don't unplug the machine before it stops operation.

10. If the supply cord is damaged, it must be replaced by the manufacturer, service agent, or similarly qualified persons to avoid a hazard.

11. Electric Shock Danger! Non-professional personnel is forbidden to repair the products. Otherwise, it may result in electrical shock. When failures happen, they should be fixed by qualified maintenance personnel.

12. WARNING! Putting the main body into the water to clean is strictly prohibited. It only can be scrubbed with a wet towel. The machine must be thoroughly cooled before cleaning.

13. Please check that the specified supply voltage in the product is consistent with the supply voltage(AC only).

14. Avoid power cord damage. Do not squeeze, bend, or friction; keep it away from heat sources and open fires. The power cord does not touch the blade.

15. Power cord should be laid flat. Do not pull the power cord and make the product fall, which may cause damage.

16. Do not use the product on wet ground. Do not touch the product or power cord plug with wet hands.

17. Do not disassemble the product at will. Also, do not let something enter or insert into the product, which may cause damage.

18. Only accessories the seller or manufacturer provides can be used for the product. We will not be responsible for any failure caused by using accessories from other manufacturers not covered by warranty.

19. Do not use the product on uneven, damp, not heat-resistant surfaces to avoid damage or failure.

20. Do not place the product directly on the fire or near the source of the fire. Otherwise, the product will be damaged or even result in danger.

21. When the plug is plugged into the socket, it must be plugged into the end. Otherwise, it will cause the components to overheat and burn due to poor contact.

22. Do not leave the product to work with no one watching. If the machine is overheating, please stop working immediately and unplug the power.
23. Once part of the product is on fire, do not directly use water to extinguish the fire. Use a wet cloth to cover the fire site.
24. Please store the plastic bags and not allow children to play with them to prevent a risk of suffocation.
25. It is prohibited to put the main body of the machine and the power cord into any liquid.
26. DO NOT open the case door; the hands are strictly forbidden from touching the saw blade while the machine operates.

SAVE THESE INSTRUCTIONS


Technical Parameters

| Model | Voltage | Power(KW) | Pulley Diameter(mm) | Saw Blade Linear Velocity(m/s) | PLUG TYPE |
|-------------------------------|---------------------|-----------|---------------------|--------------------------------|-----------|
| YF-400A (Desktop) | AC110-120 V/60Hz | 2.2 | 165 | 15 | USA |
| YF-400A (Desktop) | AC220-240 V/50Hz | 2.2 | 165 | 15 | EUR |
| YF-400A (Vertical machine) | AC110-120 V/60Hz | 2.2 | 300 | 15 | USA |
| YF-400A (Vertical machine) | AC220-240 V/50Hz | 2.2 | 300 | 15 | EUR |


Operation Instructions

1. The Bone Sawing machine must be placed horizontally at a table position during operation.
2. Open the case door, make the sawtooth face downwards to install the saw blade on the pulley, tension the saw blade, and turn the handle on the top of the machine to tighten the saw blade so that it doesn't skid during the operation. Be aware that applying too much tension on the saw blade will reduce its service time, and if not enough tension is applied, the machine cannot be operated normally. Turn the upper pulley to check if the saw blade is stable. If the saw blade moves outward, use professional tools to twist the screw in a clockwise direction; if the saw blade moves inwards, use professional tools to slightly twist the screw in an anti-clockwise direction until the saw blade runs smoothly. The machine can only be operated normally when the case door is shut correctly.
3. Before operating the machine, check whether the power supply voltage is the same as shown on the nameplate; a reliable connection to the ground line is required.
4. Firstly, adjust the baffle thickness, connect the power supply, and push the start button. Next, check if the machine is operating normally.
5. Steel gloves must be worn while using the sawing machine. Pushing bare hands is strictly forbidden, and protective gear must always be worn. Keep hands away from the saw blade while the machine is operating to avoid accidental hand injuries.
6. Always check whether the machine is connected to a reliably ground line.
7. Operate the machine carefully. If anything unusual is noticed, immediately cut off the power supply, and contact the maintenance staff to check and repair it.
8. Switch off the power supply after using the machine. Clean the machine regularly to avoid the growth of bacteria. (Note: The machine mustn't be flushed with water directly.)



Installation method of workbench

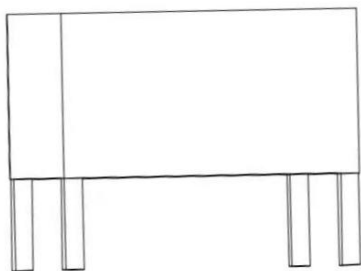

A

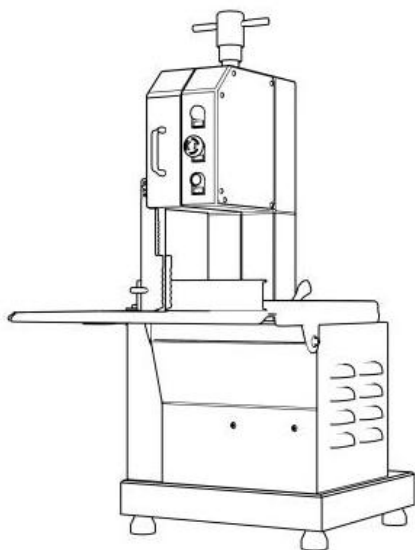


B

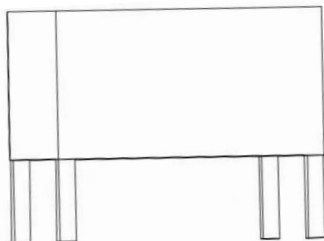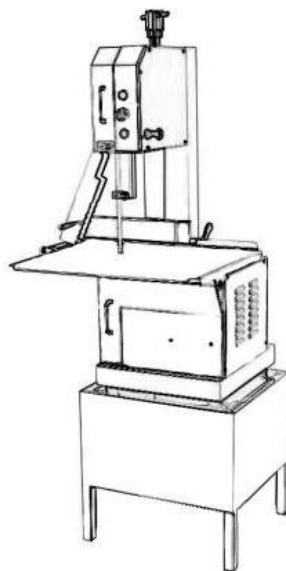

A、B fold it up, remove the rubber feet on the machine, put the holes on the table and tighten the screws.

Electrical schematic diagram

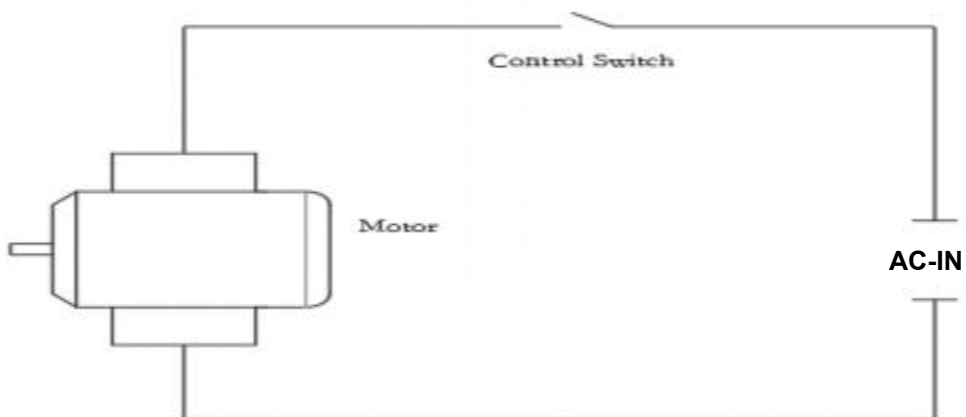

Correct Disposal



This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked with this symbol cannot be discarded with normal household waste but must be taken to an electrical and electronic equipment collection point for recycling.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

<https://www.vevor.com/support>