


# INSTALLATION STEPS


①

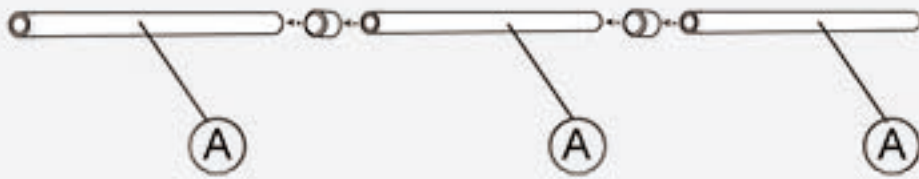

Connction 3 longaluminum tubes and assemble top bar with straight plastic parts.

②

LEFT SLIDE

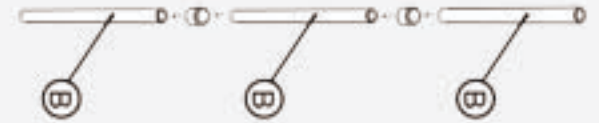


RIGHT SLIDE



Assemble the left and right columns by connecting 3 short aluminum poles with straight plastic pieces.

③

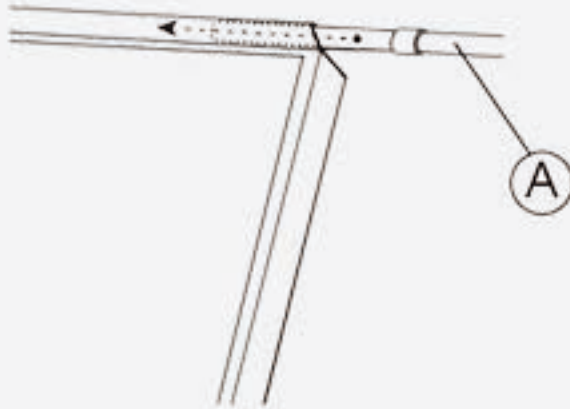


Pass the bar through the top hole of the curtain

④




Insert and secure the connector at both ends of the bar and screen.

⑤

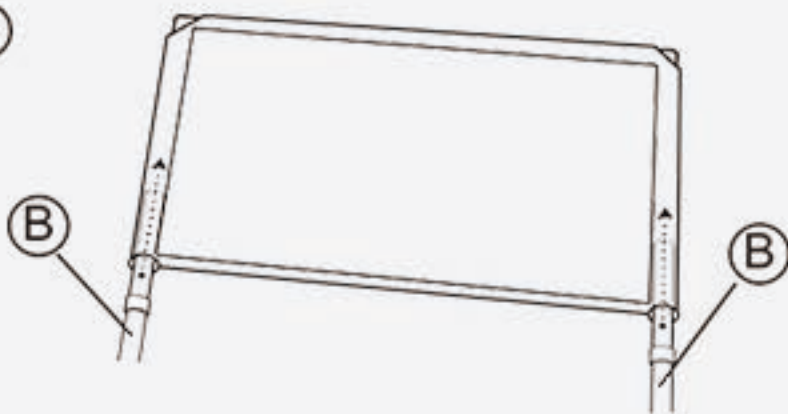


Insert the two columns into the screen and attach them to the joint.


⑥

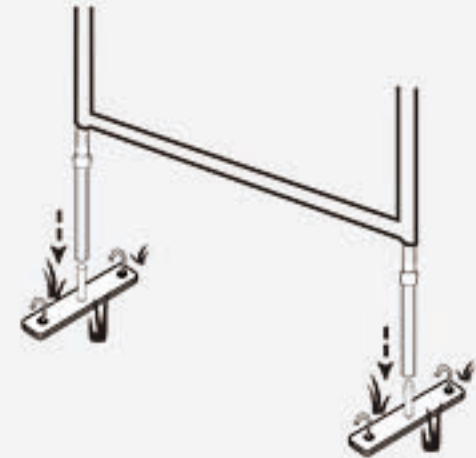

Insert the two posts into the base and lock them firmly.  
The assembly is complete.

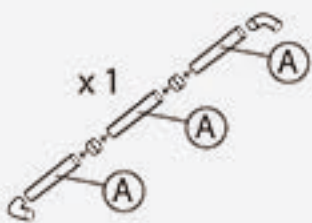

x3  
x2  
x1  
x1

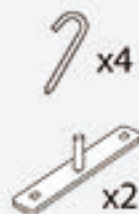

x6  
x4



ACCESSOIRES LIST