

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate
www.vevor.com/support

Magnetic Sweeper USER MANUAL

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Magnetic Sweeper



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

 CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT OPERATE THIS PRODUCT!




WARNING

KEEP AWAY FROM MATERIALS AND COMPONENTS THAT CAN BE DAMAGED BY EXPOSURE TO MAGNETS. INDIVIDUALS WITH PACEMAKER SHOULD CONSULT PHYSICIAN BEFORE USING THIS PRODUCT.

Model and Parameters

Model	QJ8013A-60"	QJ8013A-72"	QJ8013A-84"
Holds Up to	93LBS	105LBS	120LBS
Working Width	60inch	72inch	84inch
Quick Release Load Lever	support	support	support

Assembly and Use

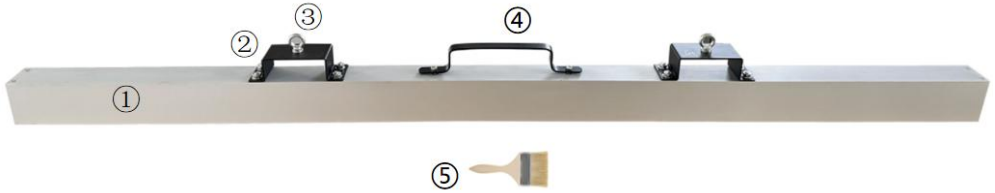

① ALUMINIUM FRAME

② SUPPORT HANDLE

③ BOLT

④ QUICK RELEASE HANDLE

⑤ BRUSH

1. Insert the forklift arm into the support handle ② and tighten the bolt ③.
2. To release the material, position the Sweeper over a container. Pull up on the Release Handle ④.

Note: Please remove the protective film on the surface of the aluminum housing before use to avoid weakening the magnetic force.

OPERATION

Lift the release lever to quickly remove the magnetic force, allowing the adsorbed nails to fall off quickly, easily and conveniently. Avoid injury by removing sharp nails by hand.

Safety Instructions

WARNING:

1. Please do not put it near flammable materials.
2. DO NOT SIT, STAND ON THIS ITEM, It is forbidden to carry people at any condition.
3. Overload is strictly prohibited.
4. Don't move too fast when passing potholes areas.
5. This product is not a toy. Do not allow children to play with or near this item.
6. Do not lift while loaded.
7. Use as intended only.
8. Inspect before every use; do not use if parts are loose or damaged.

Assembly precautions

1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.

3. Keep assembly area clean and well lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble when tired or when under the influence of alcohol, drugs or medication.
6. Assemble on a flat, level, hard and smooth surface capable of safely supporting a fully loaded Sweeper.

SAVE THESE INSTRUCTIONS

Troubleshooting Instruction

Problem	Reasons	Solution
The magnetic force drops for a while	the fine iron powder that is adsorbed on the surface of aluminium frame	remove the fine iron powder with a brush

Maintenance

1. Avoid prolonged exposure to the sun to avoid aging.
2. Avoid the cart from cracking due to violent impact when going uphill and downhill.

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi
Shanghai

Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREET EASTWOOD
NSW 2122 Australia

Imported to USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim
Place, Rancho Cucamonga, CA 91730

EC	REP
-----------	------------

SHUNSHUN GmbH
Römeracker 9 Z2021,76351
Linkenheim-Hochstetten, Germany

UK	REP
-----------	------------

Pooledas Group Ltd
Unit 5 Albert Edward House, The
Pavilions Preston, United Kingdom

MADE IN CHINA

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support