

Technical Support and E-Warranty Certificate www.vevor.com/support

SHOPPING CARTS USER MANUAL

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.



SHOPPING CARTS





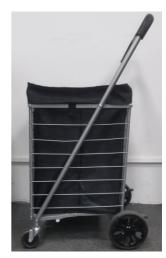

JY-BkS JY-BkM JY-BkL02

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAFETY INSTRUCTIONS

WARNING:

Read this instruction before using this product. Failure to do so can result in serious injury.

- 1. Please do not put it near flammable materials.
- 2. It is forbidden to carry people under any condition.
- 3. Please pay attention to safety when going up and down stairs.
- 4. Overload is strictly prohibited.
- 5. Don't move too fast when passing pothole areas.
- 6. Use as intended only. Do not stand on the item or use it as a step ladder.
- 7. This is not a toy, Not for use by children. Do not let children play or jump on the product.

SAVE THESE INSTRUCTIONS

MODEL AND PARAMETERS

Model	JY-BkS	JY-BkM	JY-BkL02
Maximum Dynamic Load Capacity	55 LBS	66 LBS	88 LBS
Maximum Static Load Capacity	66 LBS	110 LBS	200 LBS


ASSEMBLY AND USE



- ①Front wheels × 2
- ②Back wheels × 2
- ③Left brake frame × 1
- ④Right brake frame × 1
- ⑤Axle × 1

1 Screw the front wheel into the front leg of the cart. 2 Pull to remove plastic caps.

3

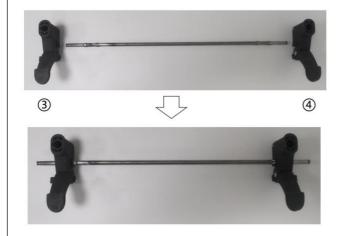

Insert the axle into the hole of the left brake frame and the right brake frame.

WARNING:

Note the direction of the left brake frame and the right brake frame, as shown in the picture.

4



Insert the brake frame assembly onto the back legs of the cart.

WARNING:

Note the direction of the brake frame assembly.





If the left brake frame and the right brake frame are reversed, press the spring-loaded pin, then pull out the brake frame assembly gently from the back legs of the cart.

Spring-loaded pin

CAUTION: Make sure the Spring-loaded pin is in the hole of the brake frame

5





Press the elastic button on the wheel. Insert the wheel onto the axle and ensure that the wheel is locked in place.

Make sure that the wheel is completely pushed into the axle, and then release the spring-loaded lock.

6







Apply Brake

Release Brake

How to use brakes: As shown by the arrows, push down with your foot to apply the brake,or push up with your foot to release the brake.

TROUBLESHOOTING INSTRUCTION

Problem	Reasons	Solution
The wheels do not jam	Insufficient lubrication.	Add oil to lubricate the
smoothly.		rotating parts.

MAINTENANCE

- 1. Avoid prolonged exposure to the sun to avoid aging.
- 2. Avoid the box from cracking due to violent impact when going uphill and downhill.

Sanven Technology Ltd.

Address: Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

MADE IN CHINA



Technical Support and E-Warranty Certificate www.vevor.com/support