

Technical Support and E-Warranty Certificate www.vevor.com/support


RJ45 CRIMPING PLIER USER MANUAL

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and doses not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.



RJ45 CRIMPING PLIER HT-08P6

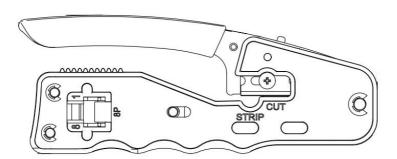

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

1. **A**WARNING!

- 1 Disconnect wiring power supply before working.
- 2 Inspect before every use; do not use if damaged.
- 3 Keep away from children.

2. Product overview

RJ45 Crimping Pliers are a tool specially used for crimping 8PIN Connector, suitable for connections in communication equipment such as networks and telephones. It has various characteristics such as shockproof, waterproof, and fireproof, and can protect cables and plugs from damage. The crimping pliers are made of high-quality materials, with strong structure, comfortable hand feeling and long service life.

3. Product parameter

1) Name: RJ45 Crimping Plies

2) Model: HT-08P6

3) Crimping range: 8PIN Connector4) Package Size: 235×117×75mm

5) G.W.: 0.67kg

4. Product structure





5. User Guide

- 1 Prepare a network cable of appropriate length, and peel off about 1.5cm of outer sheath at both ends as needed.
- 2 Arrange the order of the network cables according to the T568B or T568A standard, insert each cable into the RJ45 plug in turn,
- 3 Make sure that each wire is inserted in its corresponding position.
- 4 Insert the inserted RJ45 plug into the crimping pliers, align the plug position, and press firmly. During the crimping process, it is necessary to ensure that each pin is compressed and the compression force is uniform.
- 5 Pull the network cable to check whether the plug is firm and the connection is stable.
- 6. After the crimping is completed, use the TL-468 network tester to detect whether the crimping is successful. the following is how to use the tester.

6. TL-468 NETWORK TESTER


I. Function

- 1. For twisted-pair 1, 2, 3, 4, 5, 6, 7, 8, G, every one will be tested, and distinguish which one (pair)will be false wiring, short circuit or open circuit.
- TL-468 TEST: RJ45 \ RJ11
- II. Twisted-pair testing: Push **FUNCTION** key for 3 seconds to boot, meanwhile the AUTO light will flash, and then you can carry out automatic scan test. Insert wiring plugs into major tester and remote tester respectively, then the indicator lights of mainframe from 1 to G will flash one after another.

Illustrate: major tester: 1-2-3-4-5-6-7-8-G

Remote tester:1-2-3-4-5-6-7-8-G(RJ45)



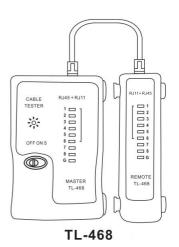

if connection is wrong, display as follows:

- 1. While there is one of wiring disconnected such as 3, the 3rd indicator light of major tester and remote tester will not light up.
- 2. While there are several wirings in turnoff, the indicator lights of which will not light up. And if the quantity of the connected wirings is less than 2, there will be no lighted indicator lights.
- 3. If both ends of the wiring were connected, for example, the 2 and 4 are connected, and then show as following:


Major tester normal: 1-2-3-4-5-6-7-8-G

Remote tester will be: 1-4-3-2-5-6-7-8-G

- 4. While there are two lines short circuits, the major tester display is normal and the two cresset of remote tester is dim light indicate short circuit. If there are more than three wiring in short circuits, then corresponding cresset will unlighted.
- III. Press key "F"in the course of testing so as to reset the 1st light then restart the test. Return to the 1st light two seconds after pressed key "F" and enter the test of manual-step motion circulation, then press "F" once, the number of lights add one in turn. It can repeat continuously unless you want to exit the process and return to the auto-circulation mode by pressing the key"F" for 2 seconds.
- IV. If you want to ture off, push key "F" for more than 5 second at any mode.
- V. If the test was not in use, it will be off automatically after 20 minutes







8P8C

Warning

- Do not test network wiring and telephone wires while connected with power, otherwise the tester will be spoiled.
- The tester uess 9V laminated cell, please replaces the battery if the lamp has to be dark or the lamp jumps motionless.

- Do not test if the RJ45 plug are not pressed down completely, otherwise the port will be spoiled.
- Please use original fitting punch-down tool of high quality.
- Do not test telephone connection without clear indication of RJ11 port, otherwise it will result in spoiling the port pin.

7. Safety and Maintenance

- 1. Before using the crimping pliers, please confirm whether the selected cable and plug are suitable, so as not to cause equipment damage or unstable connection.
- 2. When using crimping pliers, please operate carefully to avoid pinching your fingers. Pliers should be inspected for looseness or wear before use.
- 3. After use, please clean the surface of the crimping pliers in time to prevent the accumulation of dirt from affecting the service life.
- 4. Do not hit the crimping pliers with hard objects to avoid damage to the tool.
- 5. Regularly check the screw fastening of the tool

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi Shanghai Imported to AUS: SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730



Made In China



Technical Support and E-Warranty Certificate www.vevor.com/support