

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

BACKPACK GAS POWERED LEAF BLOWER USER MANUAL

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

**BACKPACK GAS
POWERED
LEAF BLOWER**

BL-866B

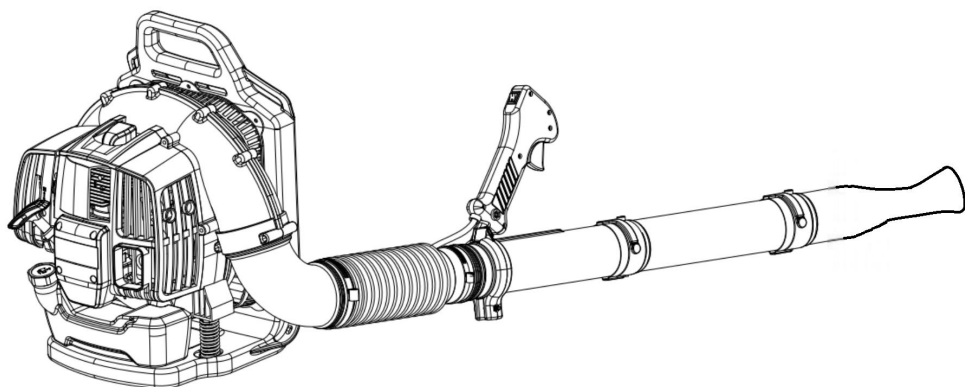

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAFETY WARNINGS

WARNING: For your own safety, please read this manual before attempting to operate your new unit. Failure to follow instructions can result in serious personal injury. Spend a few moments to familiarize yourself with your blower before each use. If you give this tool to another person, also hand over this manual.

Use this tool as described in this manual. Any mishandling and any use contrary to the instructions will not in any way engage the liability of the manufacturer.

Non-compliance with safety instructions and use can cause a risk of electric shock, fire and /or injury to persons.

READ YOUR USER MANUAL THOROUGHLY BEFORE OPERATING YOUR UNIT.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never allow children, persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge or people unfamiliar with these instructions to use the machine, local regulations may restrict the age of the operator.
- Never use the machine when people, especially children, or pets are nearby.
- Remember that the operator or user is responsible for accidents or hazards occurring to persons or their belongings.

- Do not disassemble the tool yourself. Disassembly, repair or verification must be made exclusively by qualified personnel.
- WEAR CLOSE FITTING, TOUGH WORK CLOTHING that will provide protection, such as long slacks or trousers, safety work shoes, heavy duty work gloves, hard hat, a safety face shield, or safety glasses for eye protection. The tool is extremely noisy and requires the use of ear protection, such as a good grade of ear plugs or other sound barriers.
- Always carry the machine by its handle; never use any other part of the machine.
- REFUEL IN A SAFE PLACE. Open fuel cap slowly to release any pressure which may have formed in fuel tank. Always wipe unit of fuel or oil spills before starting. To prevent a fire hazard, move at least 10 feet (3meters) from fueling area before starting.
- TURN UNIT OFF before setting it down and also before installing or removing attachments.
- KEEP ALL SCREWS AND FASTENERS TIGHT and the unit in good operating condition. Never operate this equipment if it is improperly adjusted or not completely and securely assembled.
- KEEP HANDLES DRY, clean and free of fuel mixture.
- STORE EQUIPMENT AWAY FROM POSSIBLE IGNITION SOURCES, such as gas-powered water heaters, clothes dryers, or oil-fired furnaces, portable heaters, etc.
- ALWAYS KEEP the engine free of debris build-up.
- OPERATION OF EQUIPMENT should always be restricted to mature and properly instructed individuals.
- ALL PERSONS WITH RESPIRATORY PROBLEMS and persons operating blower in very dusty environments, should wear a dust particle mask at all times. Paper dust masks are available at most paint and hardware stores.
- Operate the machine only at reasonable hours - not early in the morning or late at night when people might be disturbed. Comply with times listed in local ordinances.
- Avoid using the machine in bad weather, especially when there is a risk of thunderstorms and lightning.

- In case of accident, immediately stop using the machine. Turn the machine off and check the problem. Do not use the machine while the machine is damaged.
- If the machine should start making any unusual noise or vibration, immediately shut off the power source and allow the machine to stop. Take the following steps before restarting and operating the machine:
 - a) Inspect for damage;
 - b) Replace or repair any damaged parts;
 - c) Check for and tighten any loose parts.
- If the machine becomes clogged, shut-off the power source before cleaning debris.
- Never operate the machine with defective guards or shields, or without safety devices in place.
- Keep the power source clean of debris and other accumulations to prevent damage to the power source or possible fire.
- Do not carry this machine while it is in operation. Always switch off the tool and always transport it by its handle and in order to avoid accidents and a fuel leak.
- Stop the machine and make sure that all moving parts have come to a complete stop
 - a) Whenever you leave the machine;
 - b) Before clearing blockages or unclogging chute;
 - c) Before checking, cleaning or working on the machine.
- Do not tilt the machine while the power source is running.
- Operate the machine at the lowest possible engine speed to do the job. Like this, vibration and noise levels as well as the tool's wear can be kept to a minimum.
- Use rakes and brooms to loosen debris before blowing.
- In dusty conditions, slightly dampen surfaces.
- Use the full blower nozzle extension so the air stream can work close to the ground.
- Watch out for children, pets, open windows etc. and blow debris safety away.

WARNING: DO NOT USE ANY OTHER FUEL than that recommended in your manual. Always follow instructions in the Fuel and Lubrication section of this manual. Never use gasoline unless it is properly mixed with 2-cycle engine lubricant. Permanent damage to engine will result, voiding manufacturer's warranty.

- **DO NOT SMOKE** while refueling or operating equipment.
- **DO NOT OPERATE UNIT WITHOUT A MUFFLER** and properly installed muffler shield.
- **DO NOT TOUCH** or let your hands or body come in contact with a hot muffler or spark plug wire.
- **DUE TO THE DANGER** of exhaust fumes, never operate blower in a confined or poorly ventilated area.
- **NEVER POINT BLOWER** in the direction of people, animals, buildings, automobiles, or open windows, etc.
- **DO NOT** operate unit without inlet cover installed to prevent contact with impeller.
- **DO NOT** set a hot engine down where flammable material is present.
- **DO NOT OPERATE UNIT FOR PROLONGED PERIODS.** Rest periodically to prevent damage from vibration, damage to ears or damage to the appliance.
- Operate the machine in a recommended position and only on a firm, level surface.
- Do not operate the machine on a paved or gravel surface where ejected material could cause injury.

WARNING: DO NOT ADD, REMOVE OR ALTER ANY COMPONENTS OF THIS PRODUCT. Doing so could cause personal injury and/or damage the unit, voiding the manufacturer's warranty.

- **DO NOT OPERATE UNIT WHILE TIRED, SICK OR UNDER THE INFLUENCE OF ALCOHOL OR DRUGS.**
- **DO NOT** operate your unit near or around flammable liquids or gases whether in or out of doors. An explosion and/or fire may result.
- **DO NOT WEAR** loose clothing, scarfs, neck chains, unconfined long hair, and the like. Doing so could cause injury associated with objects being

drawn into the rotating parts.

- DO NOT refuel a running engine or an engine that is hot.
- Before using, always visually inspect to see that fasteners are secure, the housing is undamaged and that guards and screens are in place. Replace worn or damaged components in sets to preserve balance. Replace damaged or unreadable labels.
- Before starting the machine, make certain that the tube is empty.
- Keep your face and body away from the nozzle.
- Do not allow hands or any other part of the body or clothing inside the discharge chute or near any moving part.
- Keep proper balance and footing at all times. Do not overreach. Never stand at a higher level than the base of the machine when blowing material with it.
- Always stand clear of the discharge zone when operating this machine.

Maintenance and storage

When the machine is stopped for servicing, inspection, or storage, or to change an accessory, shut off the power source and make sure that all moving parts have come to a complete stop. Allow the machine to cool before making any inspections, adjustments, etc. Maintain the machine with care and keep it clean.

- Store the machine in a dry place out of the reach of children.
- Always allow the machine to cool before storing.
- Replace worn or damaged parts for safety. Use only genuine replacement parts and accessories.
- Never attempt to override the interlocked feature of the guard.









Residuals risks











Even if you use this product in compliance with all safety requirements, potential risks of injury and damage remain. The following hazards may arise from the structure and design of this product. Always be vigilant when







using this product, so you can recognize and manage the risks early. Rapid intervention can prevent serious injury and property damage. Turn off the tool if there are any malfunctions. Have it checked by a qualified professional and have repairs carried out, if necessary, before using it again.

Symbols

The following symbols are used in these original operating instructions/on the appliance

	Read these operating instructions thoroughly before using the tool for the first time, and retain them for future reference.
	Warning! Read the operating instructions before use!
	WARNING! Special safety precautions are required when working with the appliance. Read and observe all warnings.
	Wear ear muffs.
	Wear safety goggles.
	Wear protective gloves.
	Pull the pull start with the choke in this position. When you pull out the choke, the air flap closes. When you push in the choke, the air flap opens.
	Press the fuel pump (primer) 6x


	<p>Fuel tank; mixing ratio: 40 parts petrol to 1 part oil</p>
	<p>Petrol: ROZ 95/ROZ 98</p>
	<p>2-stroke motor oil: ISO-L-EGD/JASO FD</p>
	<p>Open flames and smoking in the vicinity of the appliance are strictly prohibited!</p>
	<p>Guaranteed sound power level of the appliance</p>
	<p>The operator of the leaf blower must ensure that people and animals keep a distance of at least 15 m. If several operators are working in close proximity to each other, the safety distance must be at least 15 m.</p>
	<p>Caution! Poisonous CO vapours (carbon monoxide vapours)! Do not use the appliance in closed rooms!</p>
	<p>WARNING! Hair can be sucked into the appliance!</p>
	<p>Caution – petrol is highly flammable! Explosion hazard! Do not spill any fuel!</p>
	<p>Turn the appliance off and remove the spark plug connector before performing any maintenance work!</p>

	Attention! Risk of suffocation!
	Attention, hot parts. Maintain a safe distance!
 	Watch out for flung away parts! Keep others away! Maintain a safe distance!
	Do not fill up on E10!
	Pour the gasoline mixture in here!

Intended use

- This blower is meant to be used for blowing leaves, dust or garden debris into a desired direction. It must not be used for blowing water, chemical products, flammable material, metal or wood and other dangerous objects.
- This product is intended for private domestic use only. It must be used outdoors.
- This product is not intended to be used in a closed room and places where exhausted gas and flames can be present.
- The use of this product in case of rain or humid environments is prohibited.
- Any other use might lead to damage of the appliance, property or personal injury.

PART LIST

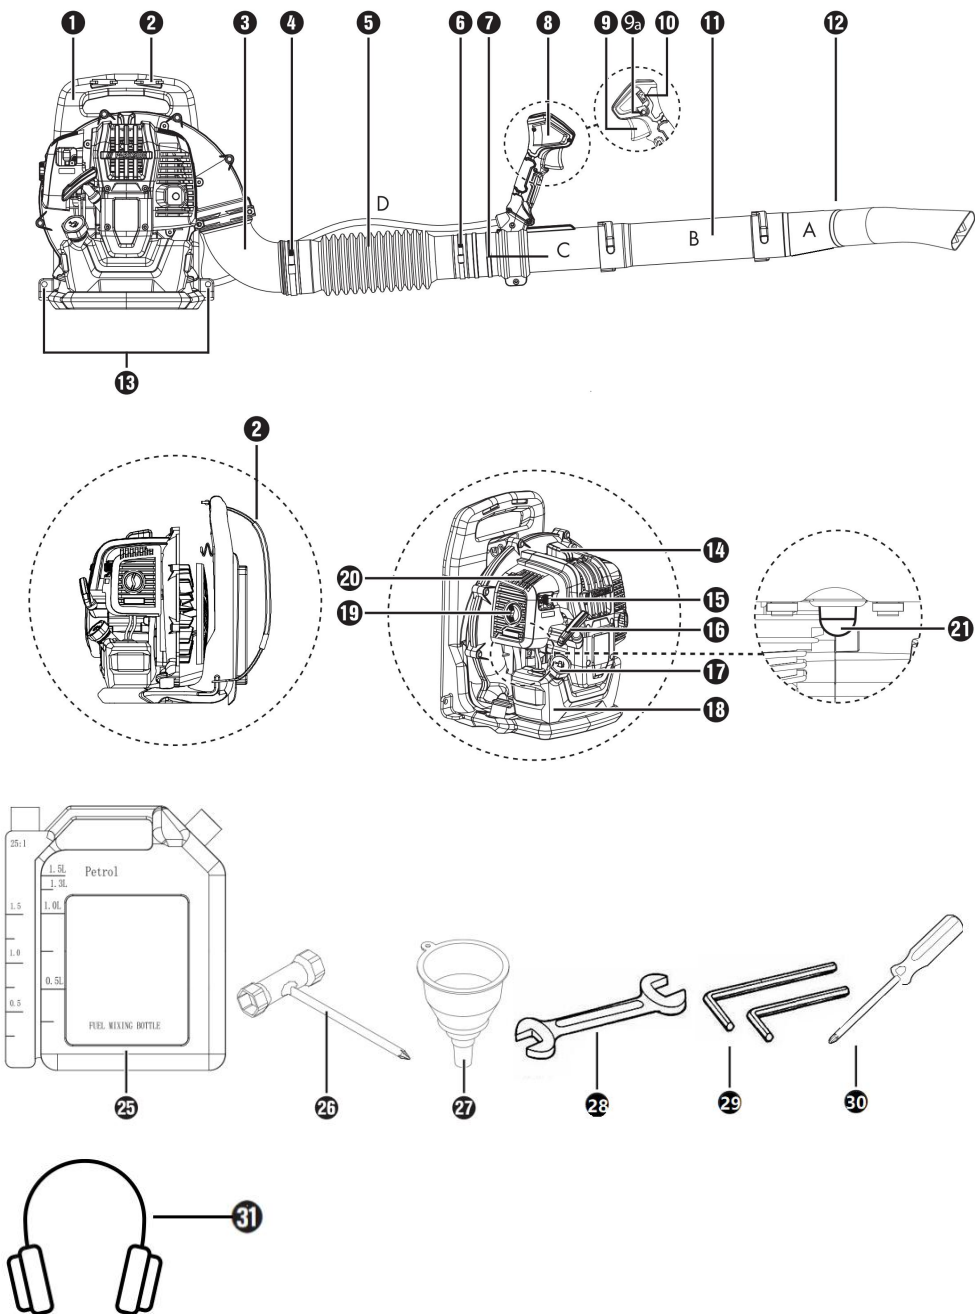

- ❶ Frame
- ❷ Carrying strap
- ❸ Curved pipe
- ❹ Hose clip
- ❺ Flexible pipe (D)
- ❻ Hose clip
- ❼ Control pipe (C)
- ❽ Operating lever
- ❾ Throttle
- ❾a Throttle lock
- ❿ On/Off switch
- ⓫ Pipe extension (B)
- ⓫ End pipe, round (A)
- ⓫ Attachment hole (for the carrying strap)
- ⓫ Spark plug connector
- ⓫ Choke
- ⓫ Pull start
- ⓫ Fuel tank cap
- ⓫ Fuel tank
- ⓫ Locking screw (for the air filter cover)
- ⓫ Air filter cover
- ⓫ Fuel pump (primer)
- ⓫ Fastening screw (for the operating lever)
- ⓫ Locking nut (for the operating lever)
- ⓫ End pipe, flat (A2)
- ⓫ Mixing tank
- ⓫ Spark plug wrench/philips screwdriver
- ⓫ Funnel
- ⓫ Hexagon wrench
- ⓫ Allen key
- ⓫ Slotted screwdriver
- ⓫ Earmuffs

Package contents

- 1 engine unit with carrying strap
- 1 Headtube (C)
- 1 end pipes, flat, round (A)
- 1 pipe extensions (B)
- 1 curved pipe
- 1 flexible pipe (D)
- 2 hose clips
- 1 mixing tank
- 2 fastening screw
- 2 locking nut
- 1 Spark plug wrench/philips screwdriver
- 1 funnel
- 1 Hexagon wrench
- 1 Allen key
- 1 Slotted screwdriver
- 1 set of operating instructions

ASSEMBLY

Setting up the appliance (see fig. A)

- ♦ Take the two hose clips **4+6** and slide them over the ends of the flexible pipe**5**.
- ♦ Push the larger end of the flexible pipe **5** onto the curved pipe **3** and tighten the hose clip **4** using the philips screwdriver h.
- ♦ Slide the control pipe **7** into the flexible pipe section **5** and tighten the hose clip **6** using the philips screwdriver **26**.
- ♦ First loosen the fixing screws **22** on the operating lever **8**.
- ♦ Slide the operating lever **8** onto the guide of the head pipe **7**.
- ♦ Attach the operating lever **8** using the supplied fastening screws **22** and locking nuts **23**.
- ♦ Push the pipe extension **11** onto the control pipe **7**.
- ♦ Push the desired end pipe (round) **12** or end pipe (flat) **24** onto the pipe extension **11** and fix it in place by turning it clockwise (see Fig. A) and secure it by tightening the inserted screw.

NOTE

Higher air velocity = flat tailpipe **24**


Disassembly is carried out in the reverse order

Mixing fuel

The engine must be operated with a mixture of petrol and motor oil.

WARNING!

- ▶ Avoid direct skin contact with fuel and do not inhale fuel vapours.
- Always use a mixture of unleaded petrol (at least RON 95) and special 2-stroke engine oil (JASO FD/ISO-L-EGD). Mix up the fuel mix according to the fuel mix table.
- Pour the correct amount of petrol and 2-stroke oil into the openings provided in the enclosed mixing container **25** (see "Fuel mix table").

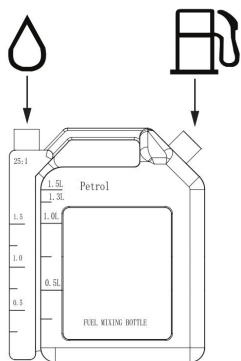

■ Tilt the mixing container ②⑤ to the side so that the filled oil can flow into the chamber with the petrol.

■ Then give the mixing tank ②⑤ a good shake.

Fuel mix table

Mixing process: 40 parts petrol to 1 part oil

Petrol	2-stroke oil
0.5 litres	12.5 ml
The maximum volume of the mailbox is 1.89L	

Adding fuel

WARNING!

► Fill the fuel tank only when the engine is switched off and cooled down. There is a risk of fire!

◆ Always clean the area around the fuel tank cap ①⑦ before filling to prevent dirt getting into the fuel tank ①⑧.

Use a dry, lint-free cloth to do this.

◆ Place the appliance on a suitable, level surface so that the fuel tank cap ①⑦ is facing upwards.

◆ Turn the fuel tank cap ①⑦ anticlockwise and remove it.

The fuel tank cap ①⑦ is connected to the fuel tank with an anti-loss device and cannot fall down.

◆ Fill the fuel mixture into the fuel tank ①⑧ using the funnel ②⑦.

Do not spill any fuel while filling the fuel tank ①⑧ and do not fill it to overflowing.

- ♦ Wipe up any spilled fuel immediately.
- ♦ Turn the fuel tank cap **7** clockwise to close it.

Use

CAUTION!

► Please comply with the statutory provisions in the relevant noise protection regulations.

Before starting the appliance, always check that:

- The fuel system is not leaking.
- All screw connections are firmly seated.

Starting when the engine is cold

ATTENTION!

- Never allow the pull start **16** to whip back. This could cause damage.
- ♦ Set the On/Off switch **10** to "I".
- ♦ Press the throttle **9** halfway down and then push down the throttle

Lock **9a** .

- ♦ Now release the throttle **9** and the throttle lock **9a** .

The throttle **9** is now locked.

- ♦ Pull the choke **15** out.
- ♦ Press the fuel pump (primer) **21** 6x.
- ♦ Press the appliance against the floor with your left hand on the frame **1** (ATTENTION! Do not use your foot!). With your right hand on the pull start **16**, pull it slowly until you feel resistance.

ATTENTION!

- Always pull the pull start **16** straight out. Hold the handle of the pull start **16** firmly when the pull start **16** retracts. Do not allow the pull start **16** to whip back.
- ♦ Now pull the pull start **16** quickly so that the engine starts.

If the engine does not start, repeat the process.

♦ When the engine starts, press down the throttle ⑨. The choke will be reset.

If the engine does not start after several attempts, read the "Troubleshooting" section.

NOTE

► At high outdoor temperatures it is possible that even a cold engine has to be started without using the choke 15!

Starting / Stopping the machine

Starting when the engine is hot

(The appliance has been turned off for less than 15–20 minutes)

♦ Set the On/Off switch 10 to "I".

♦ The choke 15 does not need to be pulled out to start a warm motor.

♦ Press the appliance against the floor with your left hand on the frame 1 (ATTENTION! Do not use your foot!). With your right hand on the pull start 16, pull it slowly until you feel resistance.

ATTENTION!

► Always pull the pull start 16 straight out. Hold the handle of the pull start 16 firmly when the pull start 16 retracts. Do not allow the pull start 16 to whip back.

♦ Now pull quickly on the pull start 16. The appliance should start after 1–2 pulls. If the appliance has still not started after 6 pulls, repeat the process as described in "Starting when the engine is cold".


Parking throttle/throttle lever lock

♦ Press the throttle 9 halfway down and then push down the throttle lock 9a.

♦ Now release the throttle 9 and the throttle lock 9a.


The throttle 9 is now locked.

NOTE


► When the throttle lever lock  is actuated, the unit does not run in full throttle position!

Turning the engine off

Emergency stop sequence


◆ If the appliance needs to be stopped immediately, turn the On/off switch  to "0".

Normal sequence

◆ Release the throttle 9. The engine idles. Then move the On/Off switch  to "0".

Cleaning and maintenance

RISK OF INJURY!

► Always switch off the appliance before cleaning and then disconnect the spark plug connector .

NOTE

- Clean the appliance thoroughly after every use.
- Carry out the cleaning and maintenance work only as described in these instructions. Any more extensive work has to be carried out by specialist personnel.
- Maintenance work must be carried out regularly (see section "Maintenance intervals").

Cleaning the engine unit

RISK OF INJURY!

► RISK OF BURNS! Do not touch the hot exhaust silencer, cylinder or cooling fins.

■ Keep the air vents and the engine housing as free of dust and dirt as possible. Blow it out with low-pressure compressed air.

■ Clean the appliance regularly with a damp cloth and a mild detergent. Make sure that no water can penetrate into the interior of the appliance.

Cleaning the air filter

Contaminated air filters reduce the engine output due to low air supply to the carburettor.

Regular inspection is essential. The air filter must be inspected regularly and cleaned if necessary.

The air filter must be checked more frequently if the air is dusty.

- ♦ Undo the locking screw for the air filter cover ⑱ by turning it in an anticlockwise direction.

- ♦ Remove the air filter cover ⑳.

- ♦ Remove the air filter.

- ♦ Clean the air filter by tapping or blowing it out (with compressed air).

Assembly is carried out in the reverse order.

ATTENTION!

- ▶ Never clean the air filter with petrol or flammable solvents.

Maintaining the spark plug

- ♦ Pull off the spark plug connector ⑭.

- ♦ Remove the spark plug using the enclosed spark plug wrench ⑳.

- ♦ Assembly is carried out in the reverse order.

- Electrode gap = 0.6 mm (distance between the electrodes between which the ignition spark is generated). Check the spark plug for contamination after the first 10 hours of operation and clean it with a copper wire brush if required.

Afterwards, service the spark plug after every 50 hours of operation.

Maintaining the carburettor settings

NOTE

- ▶ Have the carburettor adjustment (e.g. adjusting the idling speed) carried out by qualified specialists only to prevent engine damage.

Maintenance intervals

The information given here is based on normal operating conditions. In the event of more difficult conditions, such as strong dust generation and longer daily working hours, the given intervals are to be reduced correspondingly.

MAINTENANCE	before starting work	weekly	monthly
Cleaning the outside of the appliance.	x		
Check whether the throttle is working properly.	x		
Check the whether the stop switch is working.	x		
Clean the air filter. Replace if necessary.	x		
Tighten the screws and nuts.	x		
Ensure that no fuel is leaking from the engine, tank or fuel lines.	x		
Make sure that the sides of the air intake grille are not blocked.	x		
Check the starting mechanism and its start cable.	x		
Clean the outer surfaces of the spark plug.		x	
Remove the spark plug and check the electrode gap. Set the gap to 0.6–0.7 mm or replace the spark plug.		x	
Clean the outside of the carburettor and the area around it.		x	
Check all cables and connections.			x
Replace the spark plug.			x

Storage and transportation

- ◆ Always clean and maintain the appliance before storage, see section “Cleaning and maintenance”.
- ◆ Switch off the appliance before transporting it anywhere, even short distances. During transport (also in vehicles), secure the appliance against tipping over to prevent fuel loss, damage or injuries.
- ◆ Hold the hot exhaust silencer away from your body. There is a risk of burns!
- ◆ Store the appliance in a secure, dry, frost-free and well-ventilated location that is protected from the effects of weather.
Outside storage is not recommended. Secure it against unauthorised access.
- ◆ Empty the oil and fuel tanks using a suction pump.

WARNING!

- ▶ Do not drain the fuel in enclosed rooms, in the vicinity of fire or while smoking. Gas vapours can cause explosions or fire.
- ◆ Start the engine and leave it running until the remaining petrol has been used up.

Troubleshooting

Problem	Possible cause	Troubleshooting
The engine will not start	Incorrect start-up process	Follow the instructions regarding starting
The engine starts but does not run at full power	Contaminated air filter	Clean air filter
The engine does not run smoothly	Incorrect spark plug gap	Clean the spark plug and adjust the spark plug gap or replace the spark plug
Soot deposits or wetness on the spark plug	Incorrect carburettor adjustment	Clean spark plug or replace it with a new spark plug

Blower operations

1. Use the blower for trees, shrubs, flower beds, and hard-to-clean areas.
2. Use the unit around buildings and for other normal cleaning procedures.
3. Use the blower around walls, overhangs, fences, and screens.

WARNING: Because of flying debris, always the blower with other use approved shielded safety glasses or a face operating the blower.

WARNING: DO NOT operate the blower with other people or animals in the immediate shield when vicinity. Allow a minimum of 50 feet (15 meters) between operator and other people or animals.

WARNING: Before using your blower, review the Safety Instructions in your user manual, and all regulations for operation of the unit.

These precautions and regulations are for your protection.

4. We recommend that a face mask be worn when operating the blower in dusty areas.
5. Stand away from the debris, at a distance that will easily allow you to control the direction of blown debris. Never blow debris in direction of bystanders.
6. To control velocity of air stream, blower can be operated at any speed between idle and full throttle.
Experience with the unit will help you determine the amount of airflow necessary for each application.
7. To reduce sound levels, limit the number of pieces of equipment used at any one time.
8. Check your equipment before operation, especially the muffler, air intakes and air filters.
9. Use rakes and brooms to loosen debris before blowing. In dusty conditions, slightly dampen surfaces when water is available.
10. Conserve water by using power blowers instead of hoses for many lawn and garden applications, including areas such as gutters, screens, patios, grills, porches and gardens.
11. Use intermediate tube plus nozzle of your choice so the air stream can work close to the ground.



12. After using blowers and other equipment, **CLEAN UP!** Dispose of debris in trash receptacles.

Operating instructions

1. Follow the instructions "STARTING A COLD ENGINE".
2. Once unit is running, place unit on your back by slipping arms through the shoulder straps as if you were putting on a backpack.
3. When preparing to clear an area of debris, always position yourself so that you can control the direction debris will be blown.
4. The control handle and the flexibility of the blower tube assembly will allow you to clear the most hard-to-reach areas.
5. The hand grip, throttle trigger, lock-out button and on/off ignition switch are all mounted on a swivel handle that offers a wide range of operating positions and comfort.

MAINTENANCE

Cleaning the Air Filter

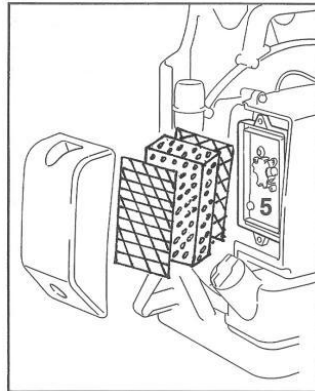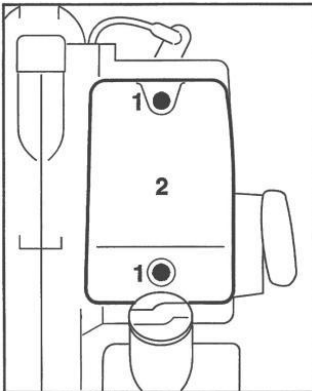

Dirty air filters reduce engine power increase fuel consumption and make starting more difficult.

- Turn choke knob to 

- Release the screws (1) and pull off the filter cover (2).
- Remove the filter from the cover and inspect it - if it is dirty or damaged, clean the filter or fit a new one.
- Install the main filter and prefilter elements in the filter cover.
- Fit the cover on the filter base and tighten it down firmly.

Carburetor

General information

Your carburetor comes from the factory with a standard setting.

This setting provides an optimum fuel-air mixture under most operating conditions.

The high-speed screw alters the engine's power output and the maximum off-load engine speed.

If the setting is too lean there is a risk of engine damage due to insufficient lubrication and overheating.

A modification of the carburetor adjustment must be made by a qualified after-sales service.



Checking the Spark Plug

If engine is down on power, difficult to start or runs poorly at idle speed first check the spark plug.

- Remove the spark plug - see "Starting / Stopping the Engine"
- Check electrode gap (A) and readjust if necessary – see "Specifications".



Storing the Machine

For periods of about 3 months or longer

- Drain and clean the fuel tank in a well-ventilated area.
- Run engine until carburetor is dry - this helps prevent carburetor diaphragms sticking together.
- Thoroughly clean the machine- pay special attention to the cylinder fins and air filter.
- Store the machine in a dry, high or locked location - out of the reach of children and other unauthorized persons.
- Do not expose the container to direct sunlight for unnecessarily long periods. UV rays can make the container material brittle, which could result in leaks or breakage.


Adjusting the carrying strap

WARNING!


- ▶ The carrying strap ② should always be worn during work. Otherwise, the appliance cannot be controlled safely and may cause injury to the user or others.
- ▶ Make sure that you have secured and correctly adjusted the carrying strap ②.
- ▶ If the carrying strap ② is open, there is a risk that it can get caught or sucked into the blower of the machine.




Proper adjustment of the carrying strap ② and appliance will make working much easier. Adjust the carrying strap ② to the optimum working position.

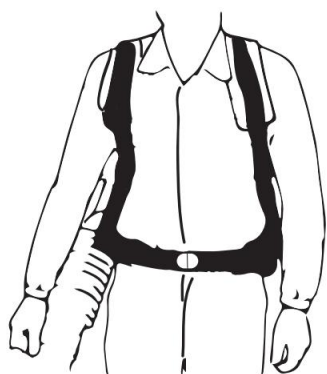

Position the hip strap at hip level, not too far down the stomach. Tighten the hip strap so you can feel the weight of the appliance resting on your hips.

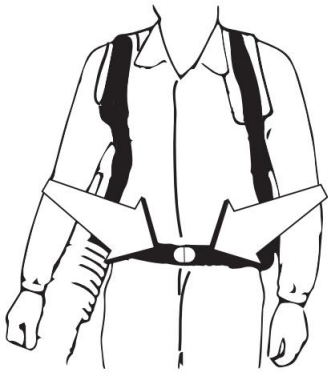

Tighten the two shoulder straps and adjust them until you achieve the best working position.

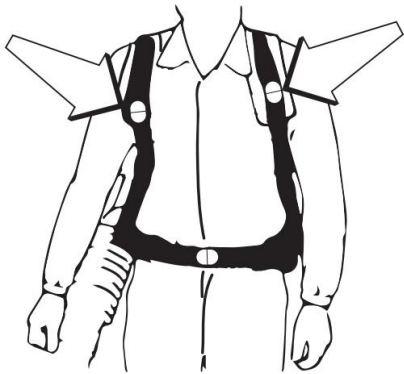

Specifications

MODELE.....	BL-866B
Length.....	1550mm
Width.....	450mm
Height	500mm
Net Weight.....	Max. 10kg
Engine Type.....	Air cooled, two-stroke, single cylinder gasoline
Carburetor.....	Diaphragm
Ignition System.....	Flywheel Magneto, capacitor discharge
Spark plug.....	L9T Gap (0.6~0.7) mm
Exhaust System.....	Spark Arrestor Muffler
Fuel.....	Mixed (Gasoline and Two-stroke Oil)
Oil.....	40:1 High Performance, two-stroke air
Idle Speed.....	3000/min
Max speed.....	6500±500/min
Displacement.....	63 cm ³
Air volume.....	1080m ³ /h
Air speed.....	324km/h
Power.....	2.8 kW
Measured sound pressure level.....	98,5 dB(A) K= 3 dB(A)
Measured sound power level:	116 dB(A) K= 3 dB(A)
Guarantee sound power level:	116 dB(A)
Vibration value:	4,194 m/s ² K=1,5 m/s ²

EC DECLARATION OF CONFORMITY

DECLARATION OF CONFORMITY

Declares that in the machine:
Gasoline Blower

In accordance with the following applicable directives.

The Machinery directive 2006/42/EC

The device, as described herewith, was tested pursuant to applicable test procedure and complies with the requirements of:

EN 15503:2009/A2:2015
AFPS GS 2019:01 PAK

Applicant: Zhejiang TOPWE Tools manufacturing Co.,Ltd
No.3 Building No.133 North Yingui Road,Xicheng street,Yongkang Jinhua City,Zhejiang Province,China

Manufacturer: Zhejiang TOPWE Tools manufacturing Co.,Ltd
No.3 Building No.133 North Yingui Road,Xicheng street,Yongkang Jinhua City,Zhejiang Province,China

Product: Gasoline Blower

Model Number: BL-8661, BL-8662, BL-8663, BL-9661, BL-9662, BL-9663, EB-900, BLR900

The tests were performed in normal operation mode. The test results apply only to the particular sample tested and to the specific tests carried out.
This certificate applies specifically to the sample investigated in our test reference number only.
The CE markings as shown below can be affixed on the product after preparation of necessary technical documentation.
Other relevant directives have to be observed.




A handwritten signature in black ink, appearing to read 'Anthony', is written over a light blue rectangular background.

Address: Baoshanqu Shuangchenglu 803long 11hao 1602A-1609shi Shanghai
Imported to AUS: SIHAO PTY LTD,1 ROKEVA STREETEASTWOOD NSW 2122
Australia

Imported to USA: Sanven Technology Ltd., Suite 250,9166 Anaheim
Place,Rancho Cucamonga,CA 91730



Pooledas Group Ltd
Unit 5 Albert Edward House, The Pavilions
Preston, United Kingdom

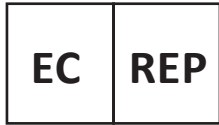

SHUNSHUN GmbH
Römeräcker 9 Z2021, 76351
Linkenheim-Hochstetten, Germany

Made in China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

Made in China